

toestel	vermoge	type	boiler	Economy		Normaal		Luxe		Per. desinf.		
				start	stop	start	stop	start	stop	temp.	inter.	
				[°C]	[°C]	[°C]	[°C]	[°C]	[°C]	[°C]	[dg.]	
1145	5	(pc)	all	38	43	45	50	50	55	58	7	TEM GB 1220-1 M11244
	6	(pc)	all	38	43	45	50	50	55	58	7	
	8	(pc)	all	38	43	45	50	50	55	58	7	
	10	(pc)	all	38	43	45	50	50	55	58	7	
	12		all	38	43	45	50	50	55	58	7	
	15		all	38	43	45	50	50	55	58	7	
	17		all	38	43	45	50	50	55	58	7	
1245	5	(pc)	Email	41	45	44	48	48	55	58	7	TEM GB 1220-1 M11245
		(pc)	RVS / Cu	42	46	45	49	49	55	58	7	
	6	(pc)	Email	40	44	43	47	47	55	58	7	
		(pc)	RVS / Cu	41	45	44	48	48	55	58	7	
	8	(pc)	Email	39	43	42	46	46	55	58	7	
		(pc)	RVS / Cu	40	44	43	47	46	55	58	7	
	10	(pc)	Email	37	41	40	44	46	55	58	7	
		(pc)	RVS / Cu	38	42	41	45	46	55	58	7	
	12		Email	36	40	39	43	46	55	58	7	
			RVS / Cu	37	41	40	44	46	55	58	7	
1155	6	(pc)	all	38	48	41	50	50	55	58	7	TEM GB 1716-2 M11906
	12		all	38	48	41	50	50	55	58	7	
	16		all	38	48	41	50	50	55	58	7	
1255	6	(pc)	Email	40	44	44	48	49	55	58	7	TEM GB 1708-2 M11920
			RVS / Cu	40	44	44	48	49	55	58	7	
	12		Email	40	44	44	48	49	55	58	7	
			RVS / Cu	40	44	44	48	49	55	58	7	
	16		Email	40	44	44	48	49	55	58	7	
			RVS / Cu	40	44	44	48	49	55	58	7	
SMO		20		42	48	46	50	49	55	58	7	IHB NL 1918-5
SMO		40	Var.	42	48	46	50	49	55	58	7	IHB NL 1918-5
VVM		310		46	49	49	52	50	55	58	7	IHB NL 1834-6
		320		46	49	49	52	50	55	58	7	IHB NL 1834-6
		500		44	47	47	50	50	55	58	7	IHB NL 1834-8
Split		/AMS	RVS	nvt	nvt	47	53	50	55	58	7	MOS NL 1252-3
HK		200-S		42	48	46	50	49	55	58	7	IHB NL 1918-5
		200-M		42	48	46	50	49	55	58	7	IHB NL 1918-5
F370			Email	45	51	49	55	50	55	58	7	IHB
			RVS	42	46	46	50	50	55	58	7	
			Cu	43	47	47	51	50	55	58	7	
F470				45	51	49	55	50	55	58	7	IHB NL 1914-3
F730			Email	42	46	46	50	50	55	58	7	IHB NL 1916-1
F730				40	45	45	50	50	55	58	7	IHB NL 1916-1
F130				45	51	49	54	50	55	58	7	manual
MT-WH		2029	Email	nvt	nvt	47	52	50	55	58	7	manual
		21-019	Email	45	50	48	53	50	55	58	7	manual