

# Air/water heat pump

NIBE F2040 6, 8, 12, 16 – UK 1x230V





# Table of Contents

<b>1</b>	<b>Important information</b>	<b>4</b>	<b>6</b>	<b>Commissioning and adjusting</b>	<b>43</b>
	Safety information	4		Preparations	43
	Symbols	4		Filling and venting	43
	Marking	4		Compressor heater	43
	Serial number	4		Start-up and inspection	44
	Recovery	5		Readjusting, heating medium side	45
	Environmental information	5		Adjustment, charge flow	45
	Country specific information	6	<b>7</b>	<b>Control</b>	<b>46</b>
	Inspection of the installation	7		Menu 5.11.1.1 – Heat pump EB101	46
	Compatible indoor modules (VVM) and control modules (SMO)	8	<b>8</b>	<b>Servicing and maintenance</b>	<b>47</b>
	Indoor modules	8		Important	47
	Control modules	8		General inspection	47
<b>2</b>	<b>Delivery and handling</b>	<b>9</b>		Heating System	47
	Transport and storage	9	<b>9</b>	<b>Disturbances in comfort</b>	<b>48</b>
	Assembly	9		Troubleshooting	48
	Supplied components	11	<b>10</b>	<b>Alarm list</b>	<b>56</b>
	Removing the covers	12	<b>11</b>	<b>Accessories</b>	<b>59</b>
	Removing the front panel	13	<b>12</b>	<b>Technical data</b>	<b>60</b>
	Removing the side panel	14		Dimensions and setting-out coordinates	60
<b>3</b>	<b>The heat pump design</b>	<b>15</b>		Sound pressure levels	64
	General	15		Technical specifications	65
	Electrical connection	23		Working area	67
<b>4</b>	<b>Pipe connections</b>	<b>27</b>		Capacity and COP	68
	General	27		Output with lower fuse rating than recommended	70
	Pipe coupling heating medium circuit	27		Energy labelling	71
	Pressure drop diagram	28		Electrical circuit diagram	76
	Pipe connections flex hose	28			
	Docking alternatives	29			
<b>5</b>	<b>Electrical connections</b>	<b>30</b>		<b>Item register</b>	<b>85</b>
	General	30			
		31			
	Connections	33			

# 1 Important information

## Safety information

This manual describes installation and service procedures for implementation by specialists.

The manual must be left with the customer.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Rights to make any design or technical modifications are reserved.

©NIBE 2018.

## Symbols



### NOTE

This symbol indicates danger to person or machine.



### Caution

This symbol indicates important information about what you should consider when installing or servicing the installation.



### TIP

This symbol indicates tips on how to facilitate using the product.

## Marking

### MARKING

**CE** The CE mark is obligatory for most products sold in the EU, regardless of where they are made.

**IP24** Classification of enclosure of electro-technical equipment.




Danger to person or machine.



Read the User Manual.

## Serial number

The serial number for F2040 can be found on the side of the foot.

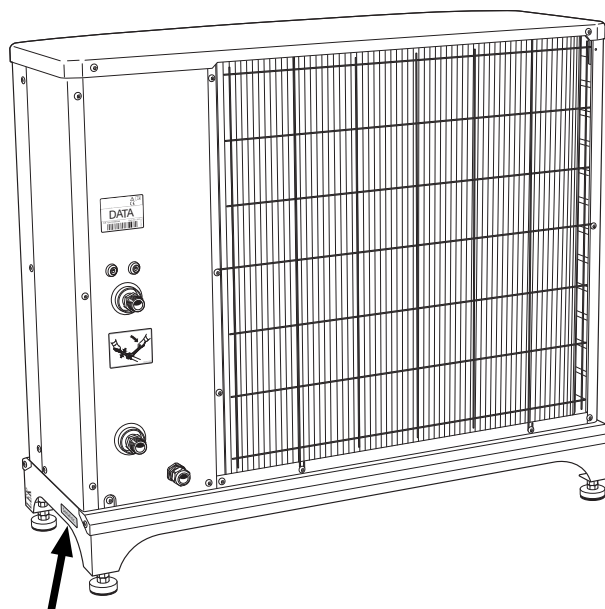

Serial number



### Caution

You need the product's (14 digit) serial number for servicing and support.



# Recovery



Leave the disposal of the packaging to the installer who installed the product or to special waste stations.



Do not dispose of used products with normal household waste. It must be disposed of at a special waste station or dealer who provides this type of service.

Improper disposal of the product by the user results in administrative penalties in accordance with current legislation.

## Environmental information

The equipment contains R410A, a fluorinated greenhouse gas with a GWP value (Global Warming Potential) of 2088. Do not release R410A into the atmosphere.

# Country specific information

## UNITED KINGDOM

This installation is subject to building regulation approval, notify the local Authority of intention to install.

Use only manufacturer's recommended replacement parts.



Benchmark places responsibilities on both manufacturers and installers. The purpose is to ensure that customers are provided with the correct equipment for their needs, that it is installed, commissioned and serviced in accordance with the manufacturers instructions by competent persons and that it meets the requirements of the appropriate Building Regulations. The Benchmark Checklist can be used to demonstrate compliance with Building Regulations and should be provided to the customer for future reference.

Installers are required to carry out the installation, commissioning and servicing work in accordance with the Benchmark Code of practice which is available from the Heating and Hotwater Industry Council who manage and promote the Scheme. Visit [www.centralheating.co.uk](http://www.centralheating.co.uk) for information.

### *Warranty and insurance information*

Thank you for installing a new NIBE heat pump in your home.

NIBE heat pumps are manufactured in Sweden to the very highest standard so we are pleased to offer our customers a comprehensive guarantee.

The product is guaranteed for 24 months for parts and labour from the date of installation or 33 months from the date of manufacture, whichever is the shorter.

The NIBE guarantee is based on the unit being installed and commissioned by a NIBE accredited installer, serviced every year and the Benchmark documents completed. Where this condition is not met, any chargeable spare parts or components issued within the applicable guarantee period still benefit from a 12 month warranty from the date of issue by the manufacturer.

We recommend the installer completes and returns as soon as possible, your guarantee registration card or completes the guarantee form on the NIBE website [www.nibe.co.uk](http://www.nibe.co.uk).

### *Electrical Supply*

The heat pump must be permanently connected to a 230V ac 50Hz supply.

All system components shall be of an approved type and all wiring to current I.E.E wiring regulations.

External wiring must be correctly earthed, polarised and in accordance with the relevant standards: Currently this is BS 7671.

### *Heating System*

The installation of the heat pump should follow best practice as covered in the following:

BS 5449 Forced circulation hot water central heating systems for domestic premises.

BS 15450 Heating systems in buildings – Design of heat pump heating systems.

# Inspection of the installation

Current regulations require the heating installation to be inspected before it is commissioned. The inspection must be carried out by a suitably qualified person. Fill in the page for information about installation data in the User manual.

✓	Description	Notes	Signature	Date
	Heating medium (page 27)			
	System flushed			
	System vented			
	Particle filter			
	Shut-off and drain valve			
	Charge flow set			
	Electricity (page 30)			
	Fuses property			
	Safety breaker			
	Earth circuit-breaker			
	Heating cable type/effect			
	Fuse size, heating cable (F3)			
	Communication cable connected			
	F2040 addressed (only when cascade connection)			
	Connections			
	Main voltage			
	Phase voltage			
	When installing F2040-6, check that the software version of the indoor module/control module is at least v8320.			
	Miscellaneous			
	Warranty			
	Benchmark checklist			

# Compatible indoor modules (VVM) and control modules (SMO)

	VVM 225	VVM 310	VVM 320	VVM 325	VVM 500	SMO 20	SMO 40
F2040-6	X	X	X	X	X	X	X
F2040-8	X	X	X	X	X	X	X
F2040-12		X	X	X	X	X	X

## Indoor modules

### VVM 320

Stainless steel, 1x230 V

With T&P valve

Part no. 069 112

## Control modules

### SMO 20

Control module

Part no. 067 224

### SMO 40

Control module

Part no. 067 225


## 2 Delivery and handling

### Transport and storage


F2040 must be transported and stored vertically.

### Assembly

- Place F2040 outdoors on a solid level base that can take the weight, preferably a concrete foundation. If concrete slabs are used they must rest on asphalt or shingle.
- The concrete foundation or slabs must be positioned so that the lower edge of the evaporator is at the level of the average local snow depth, although a minimum of 300 mm.
- The F2040 should not be positioned next to sensitive walls, for example, next to a bedroom.
- Also ensure that the placement does not inconvenience the neighbours.
- F2040 must not be placed so that recirculation of the outdoor air can occur. This causes lower output and impaired efficiency.
- The evaporator should be sheltered from direct wind, which negatively affects the defrosting function. Place F2040 protected from wind against the evaporator.
- Large amounts of condensation water, as well as melt water from defrosting, may be produced. Condensation water must be led off to a drain or similar (see page 10).
- Care must be exercised so that the heat pump is not scratched during installation.

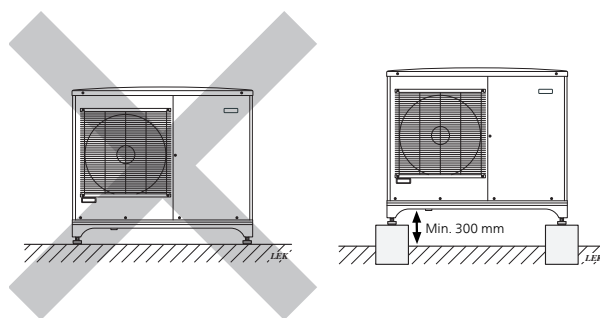


Do not place F2040 directly on the lawn or other non solid surface.

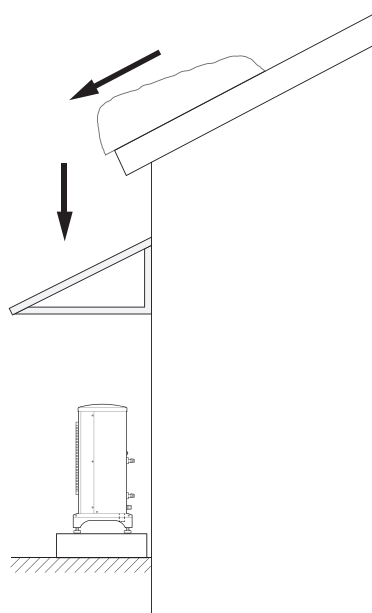

If there is a risk of snow slip from roof, a protective roof or cover must be erected to protect the heat pump, pipes and wiring.

## INSTALLATION AREA

The distance between F2040 and the house wall must be at least 150 mm. Clearance in front of F2040 should be at least one metre.

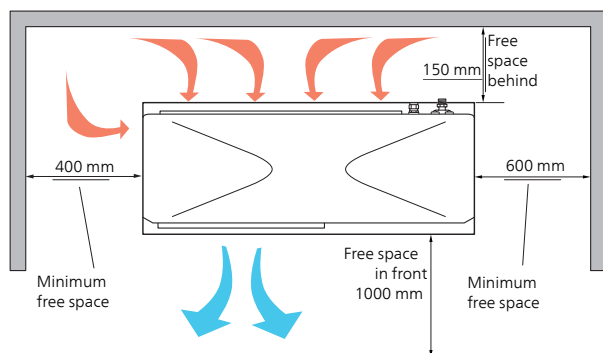

## CONDENSATION WATER TROUGH

The condensation water trough collects and leads away most of the condensation water from the heat pump.



### NOTE

It is important to the heat pump function that condensation water is led away and that the drain for the condensation water run off is not positioned so that it can cause damage to the house.

Condensation runoff should be checked regularly, especially during the autumn. Clean if necessary.



### NOTE

Pipe with heating cable for draining the condensation water trough is not included.

To ensure this function the accessory KVR 10 should be used.




### NOTE

The electrical installation and wiring must be carried out under the supervision of an authorised electrician.

- The condensation water (up to 50 litres/24 hrs) that collects in the trough should be routed away by a pipe to an appropriate drain, it is recommended that the shortest outdoor stretch possible is used.
- The section of the pipe that can be affected by frost must be heated by the heating cable to prevent freezing.
- Route the pipe downward from F2040.
- The outlet of the condensation water pipe must be at a depth that is frost free or alternatively indoors (with reservation for local ordinances and regulations).
- Use a water trap for installations where air circulation may occur in the condensation water pipe.
- The insulation must seal against the bottom of the condensation water trough.

## Recommended alternative for leading off condensation water


### Stone caisson

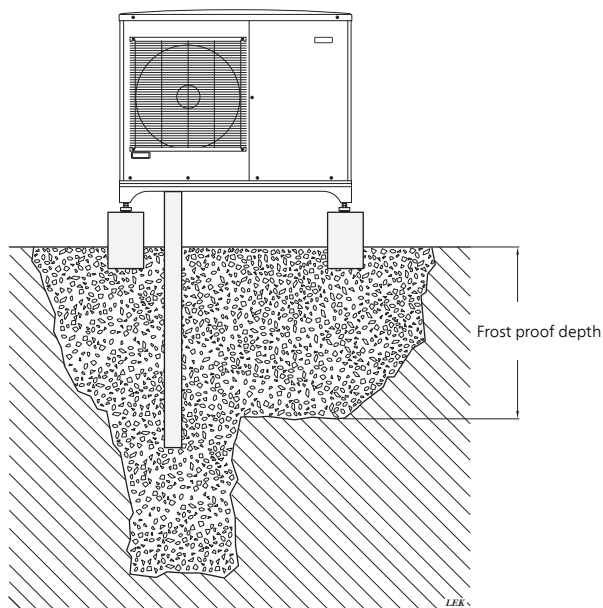

If the house has a cellar the stone caisson must be positioned so that condensation water does not affect the house. Otherwise the stone caisson can be positioned directly under the heat pump.

The outlet of the condensation water pipe must be at frost free depth.

### Drain indoors

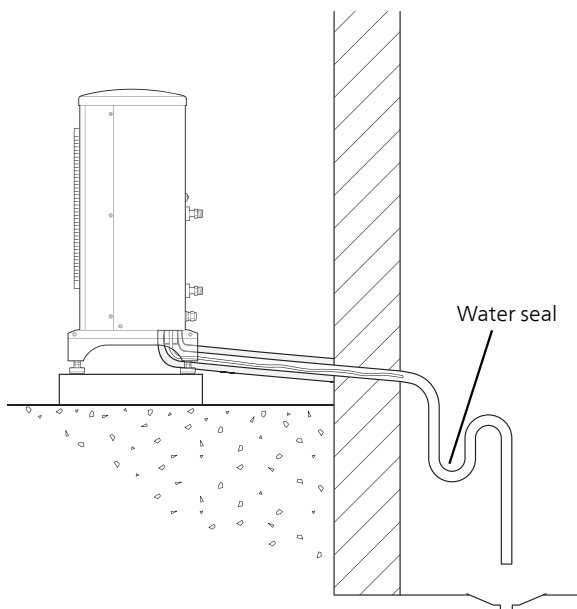


The condensation water is lead to an indoor drain (subject to local rules and regulations).

Route the pipe downward from F2040.

The condensation water pipe must have a water seal to prevent air circulation in the pipe.

KVR 10 spliced as illustrated. Pipe routing inside house not included.

## Gutter drainage

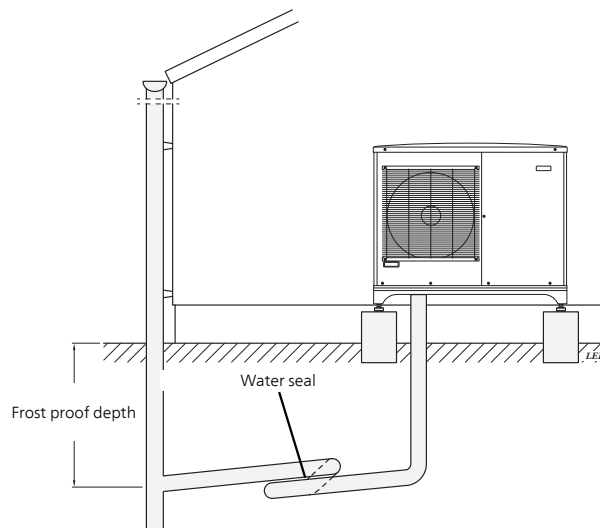

The outlet of the condensation water pipe must be at frost free depth.

Route the pipe downward from F2040.


The condensation water pipe must have a water seal to prevent air circulation in the pipe.




### Caution

If none of the recommended alternatives is used good lead off of condensation water must be assured.

## Supplied components

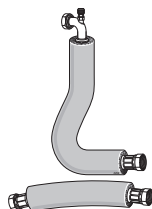


2 x flexible pipes (DN25, G1") with 4 x gaskets.




Filterball (G1").

# Removing the covers


F2040-6

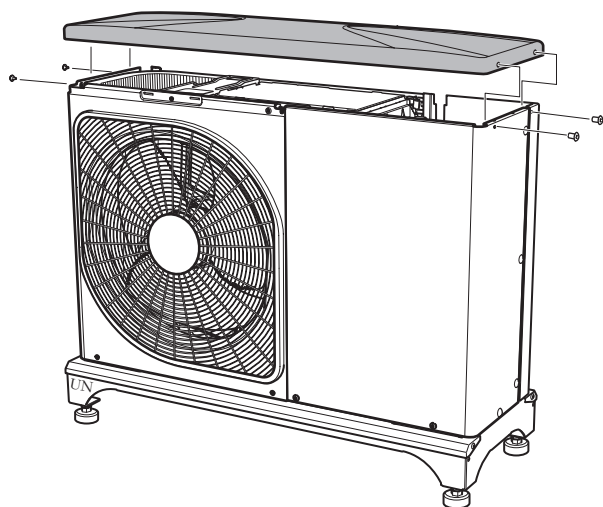


F2040-12

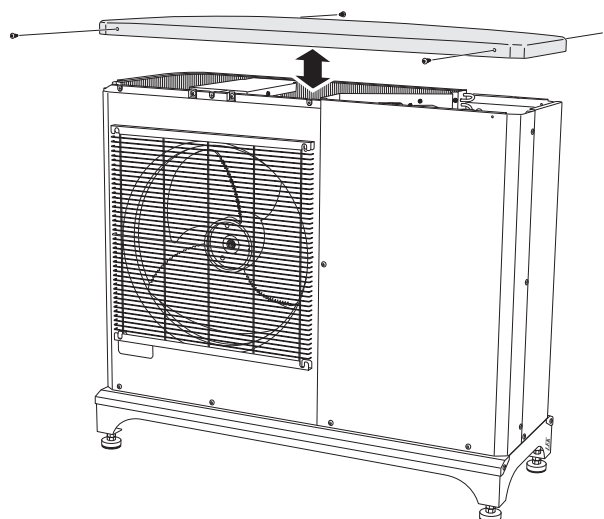

F2040-8

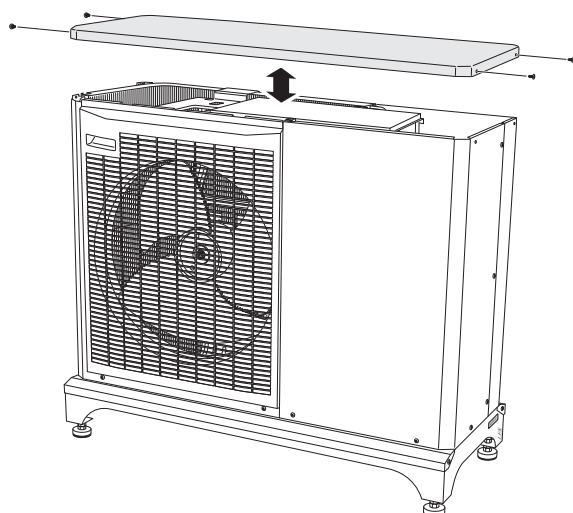


F2040-16

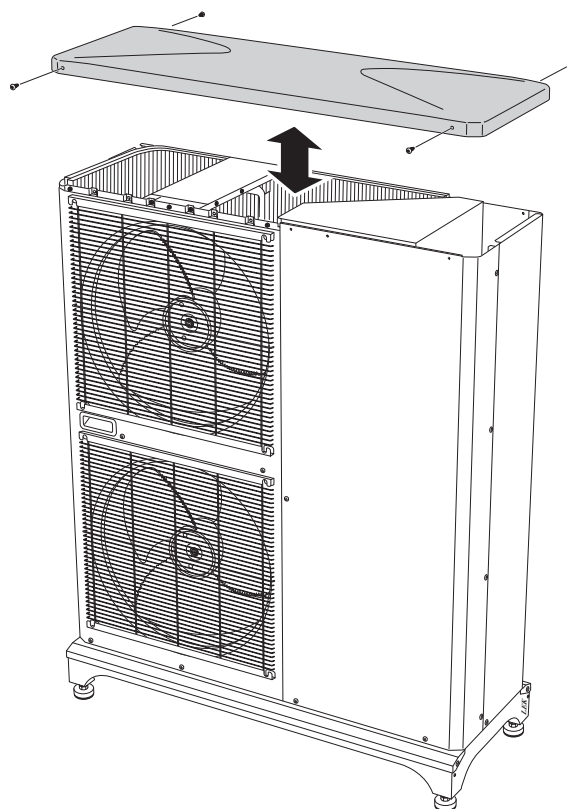




# Removing the front panel


F2040-6

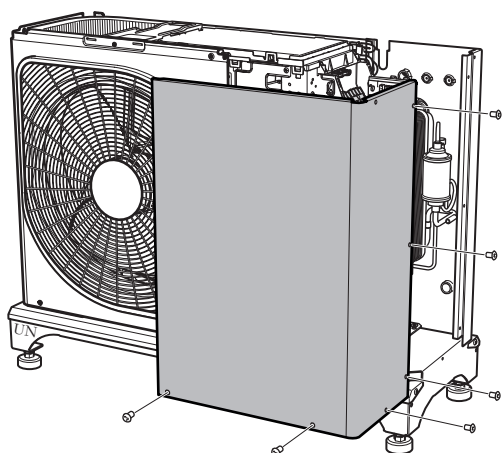


F2040-12

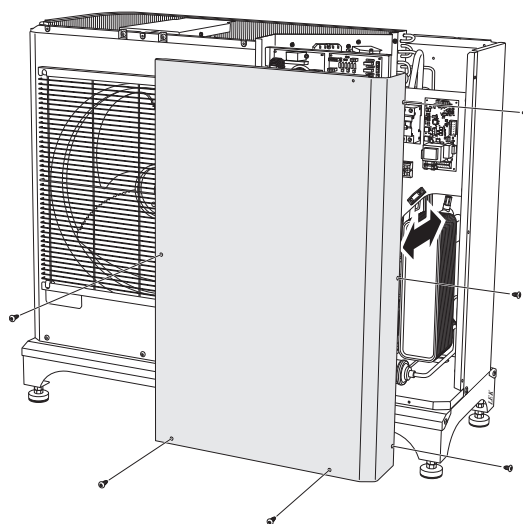

F2040-16

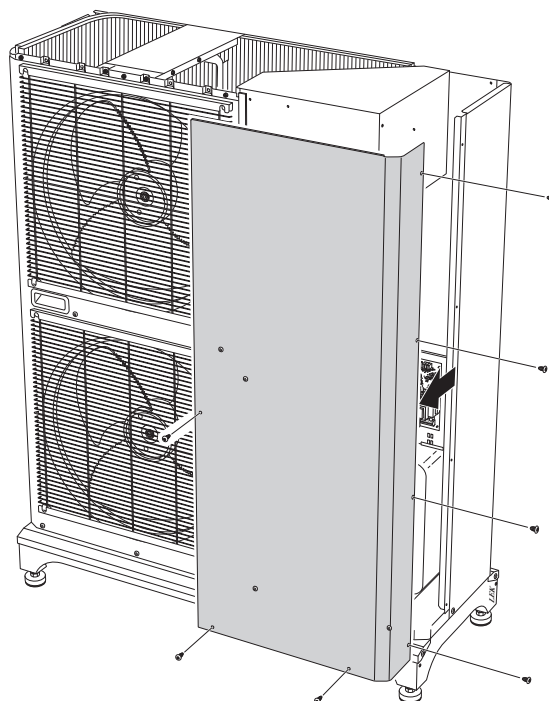


F2040-8

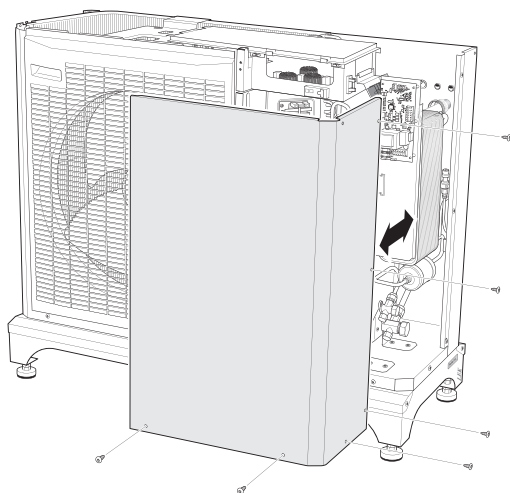


# Removing the side panel

F2040-12

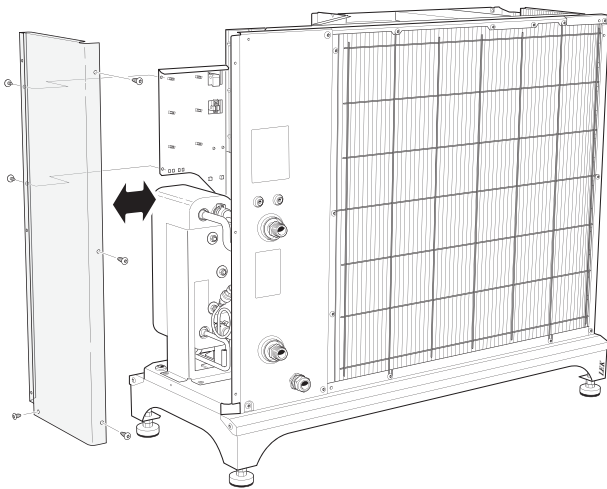


F2040-16


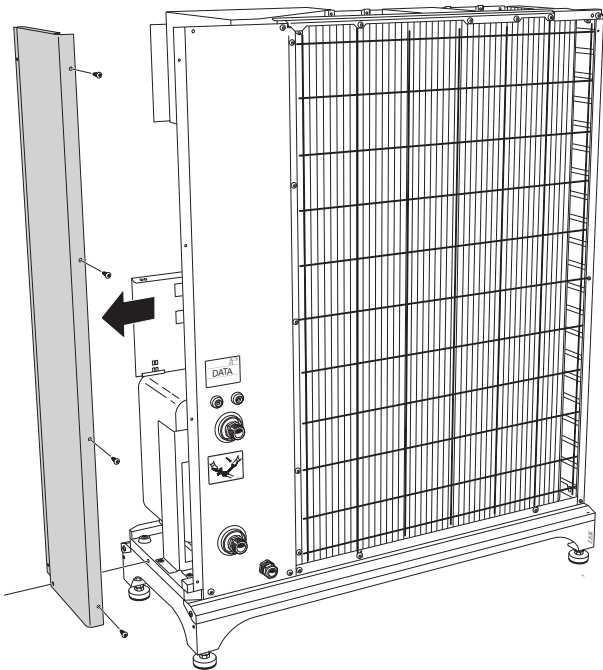



# 3 The heat pump design




## General

F2040-6



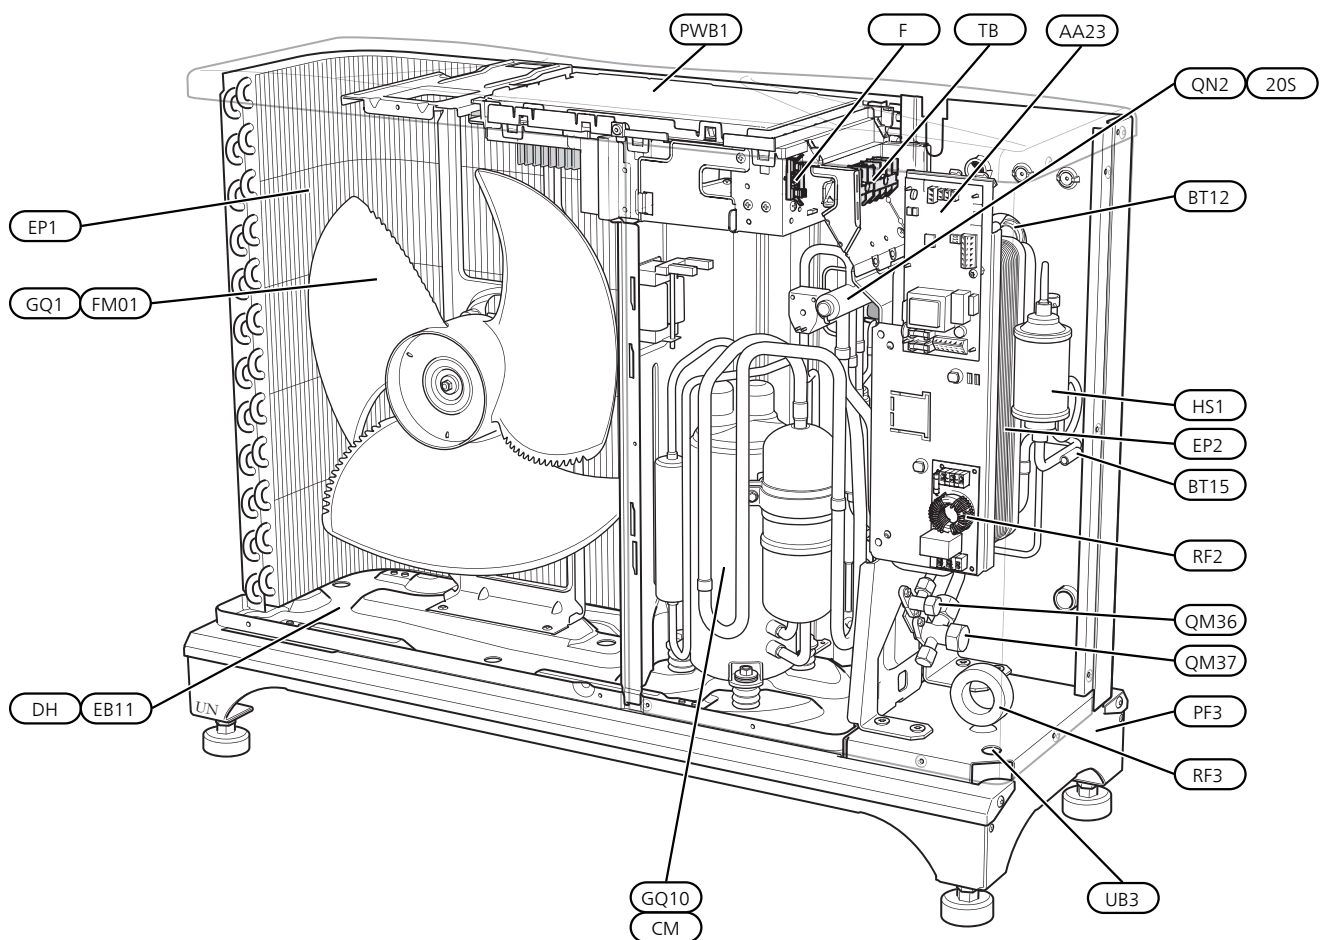


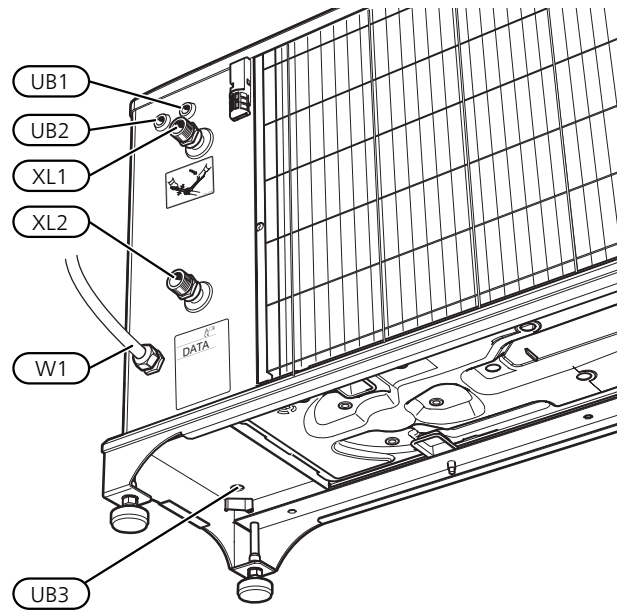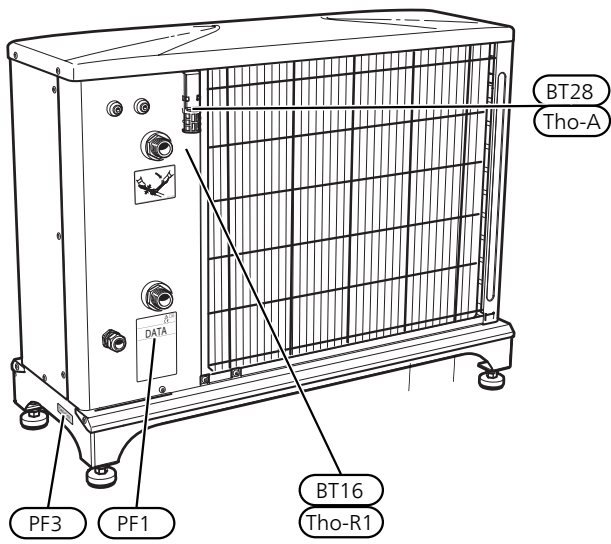


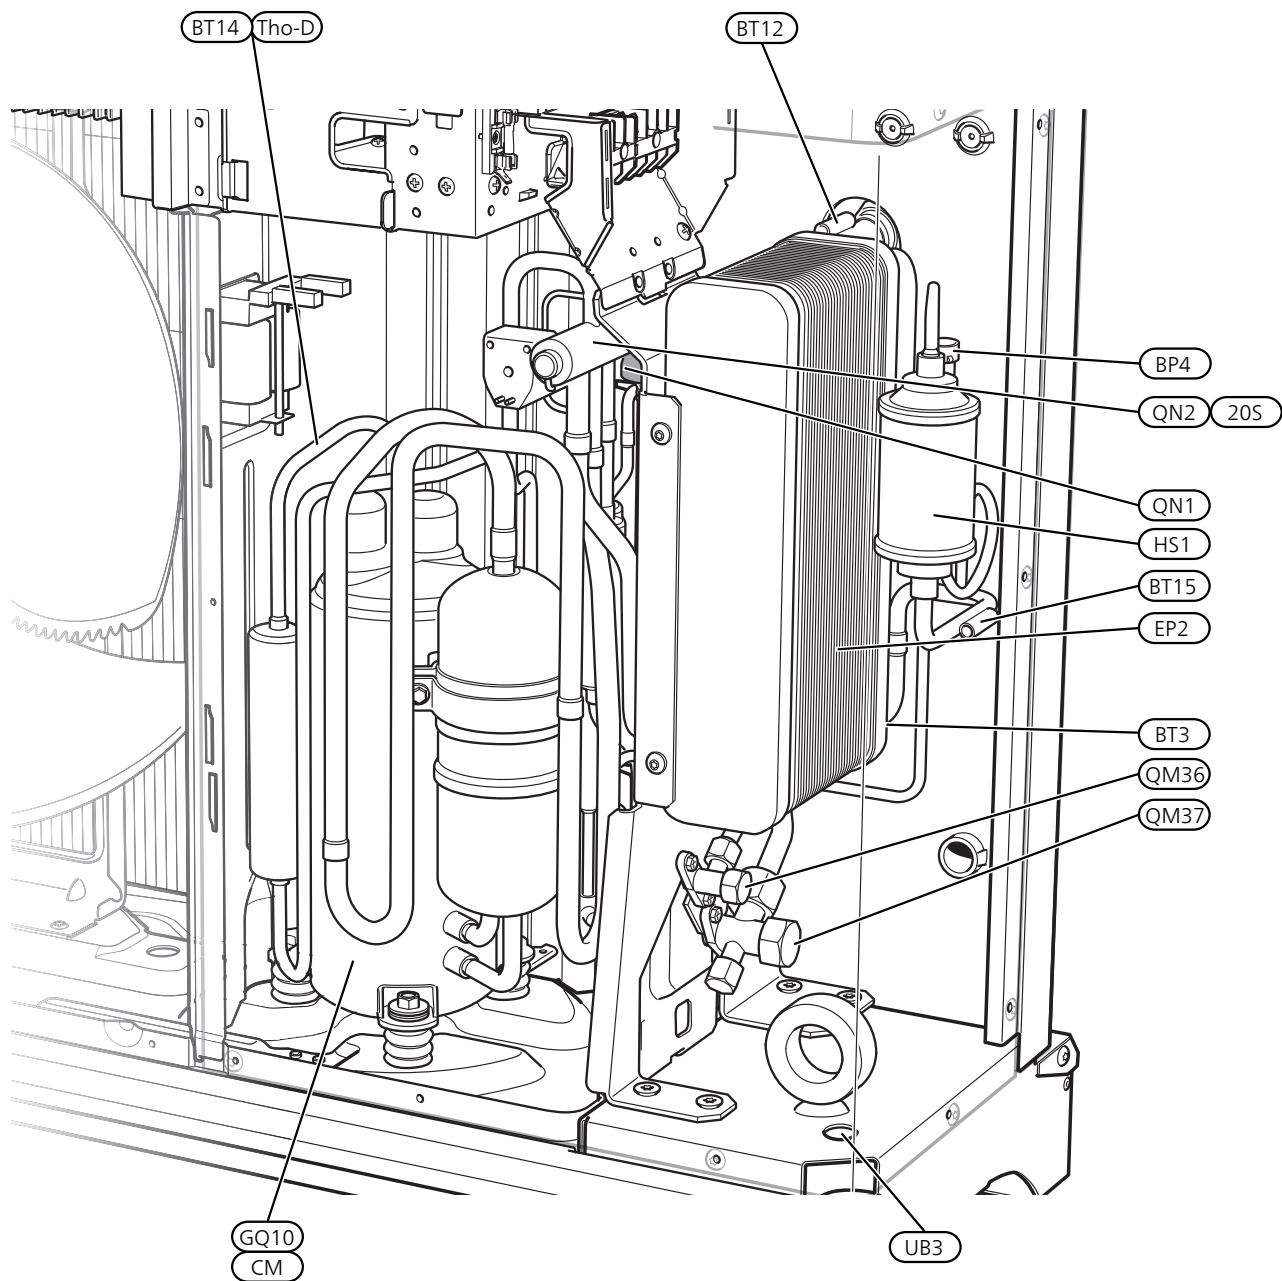

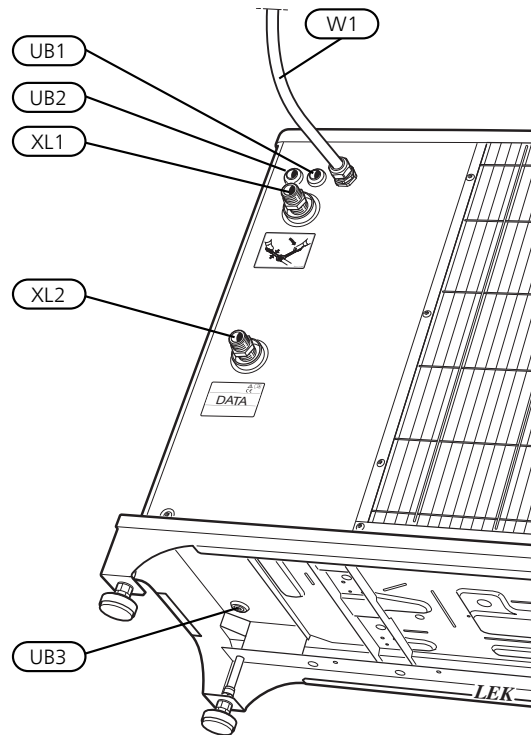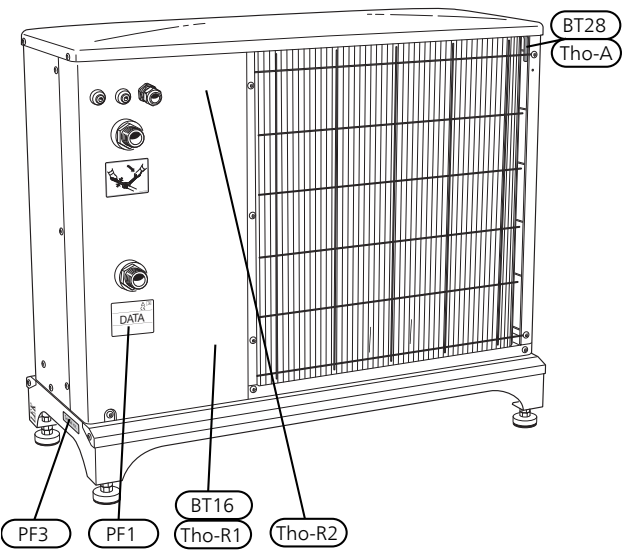
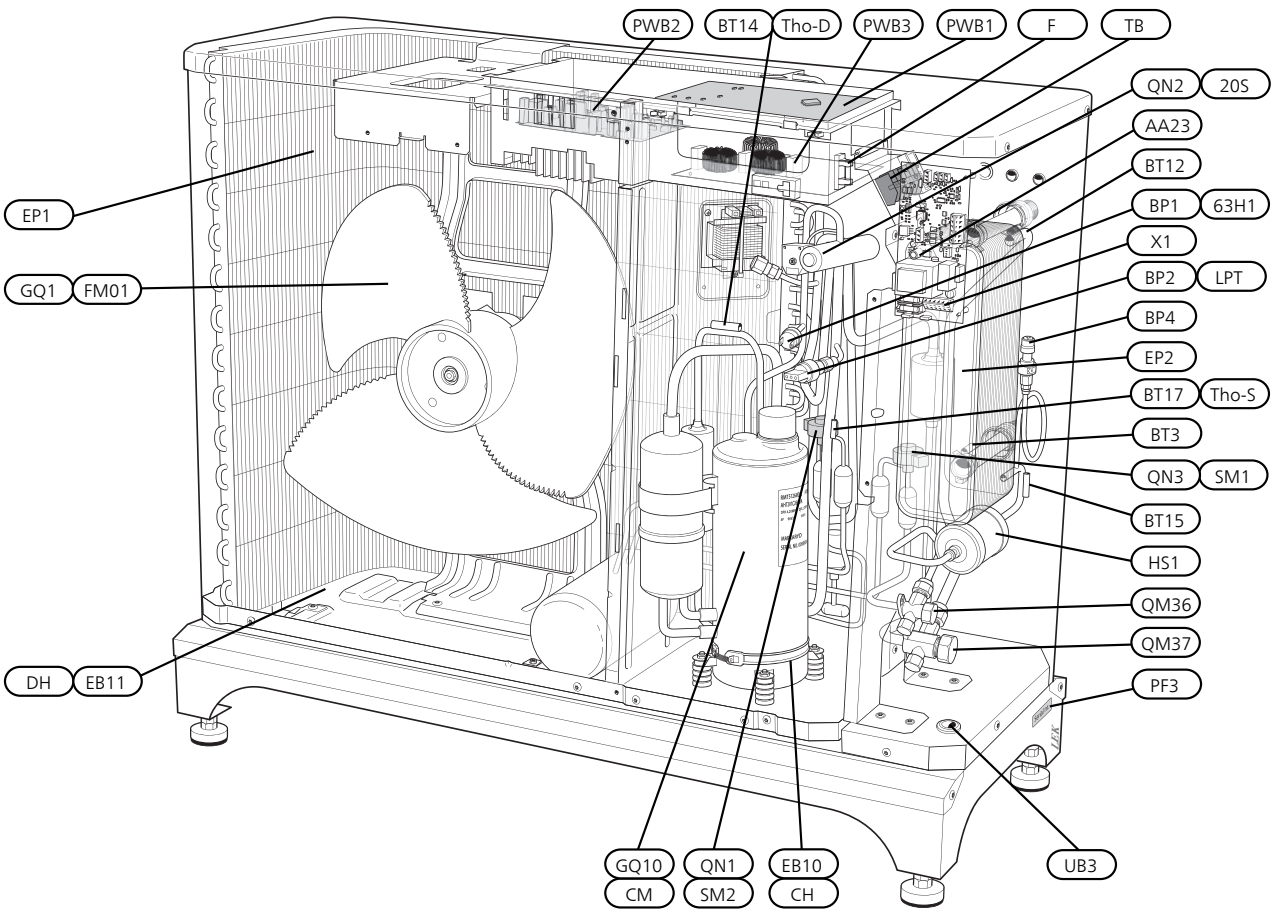




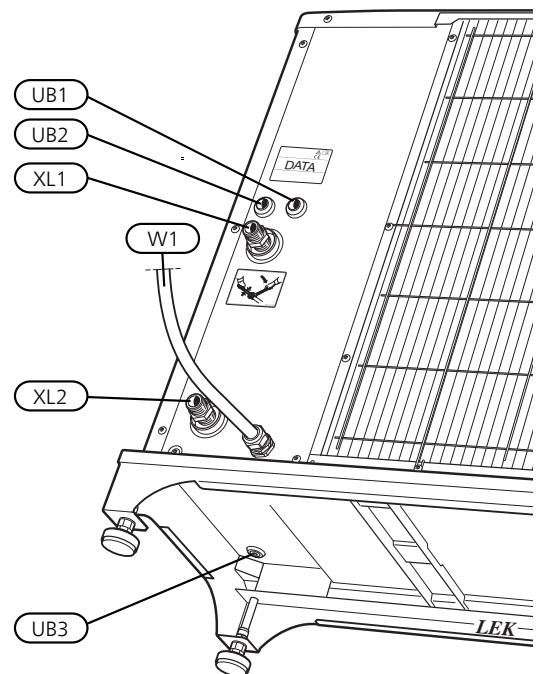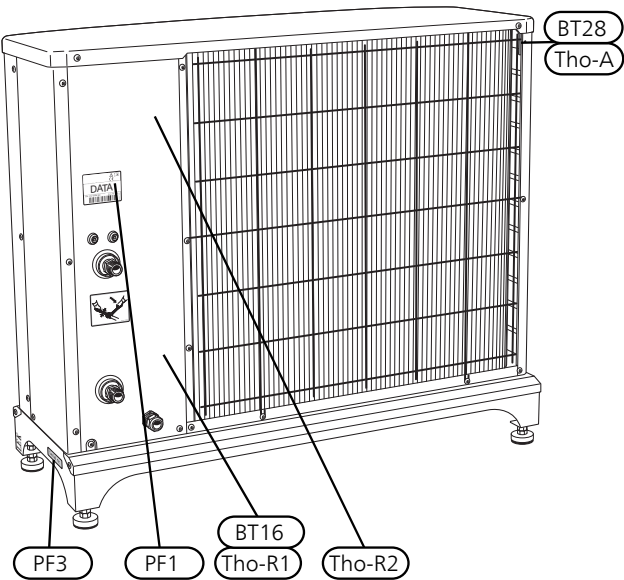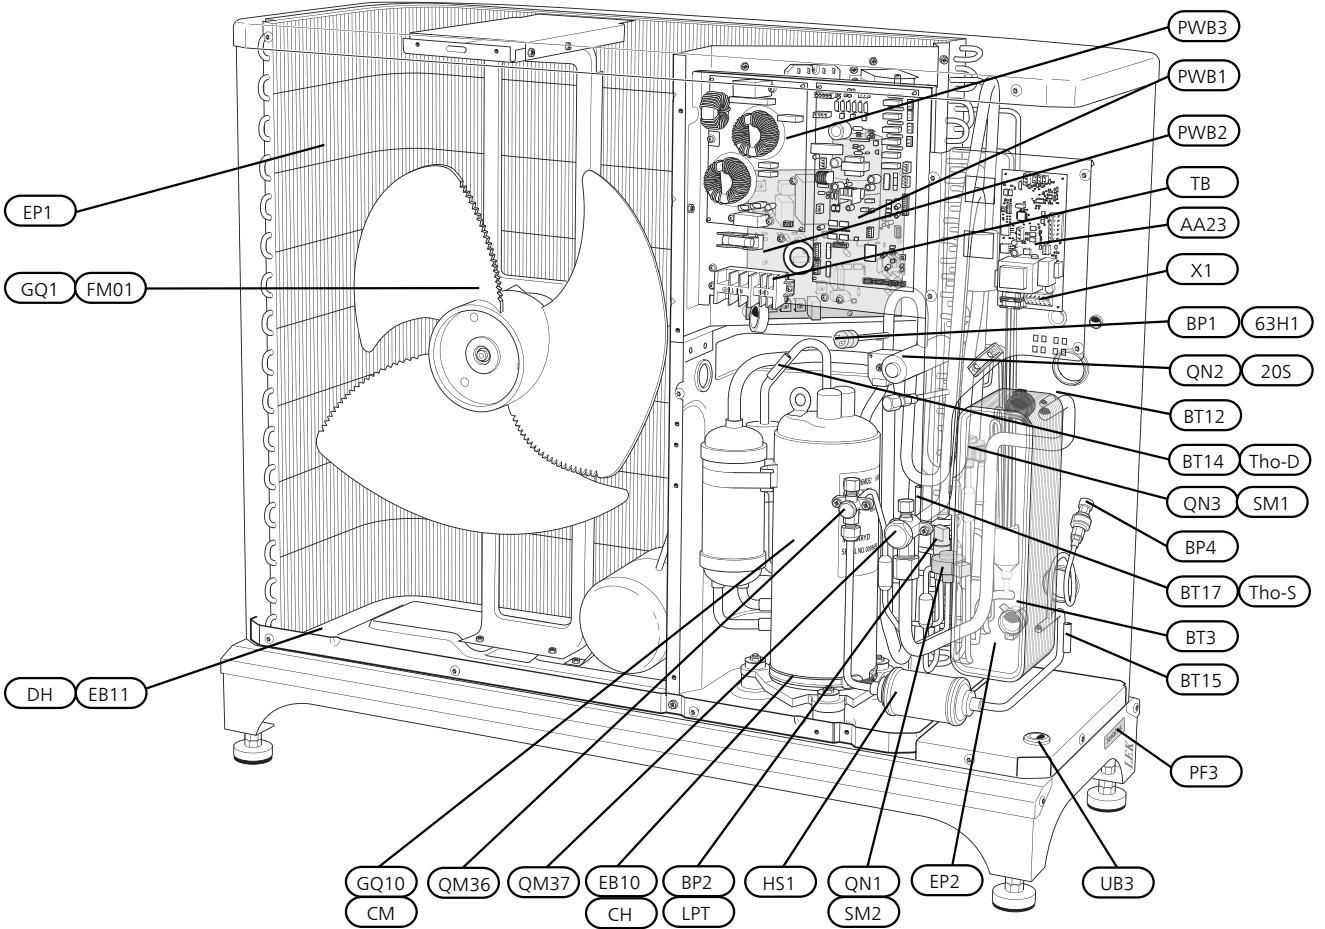

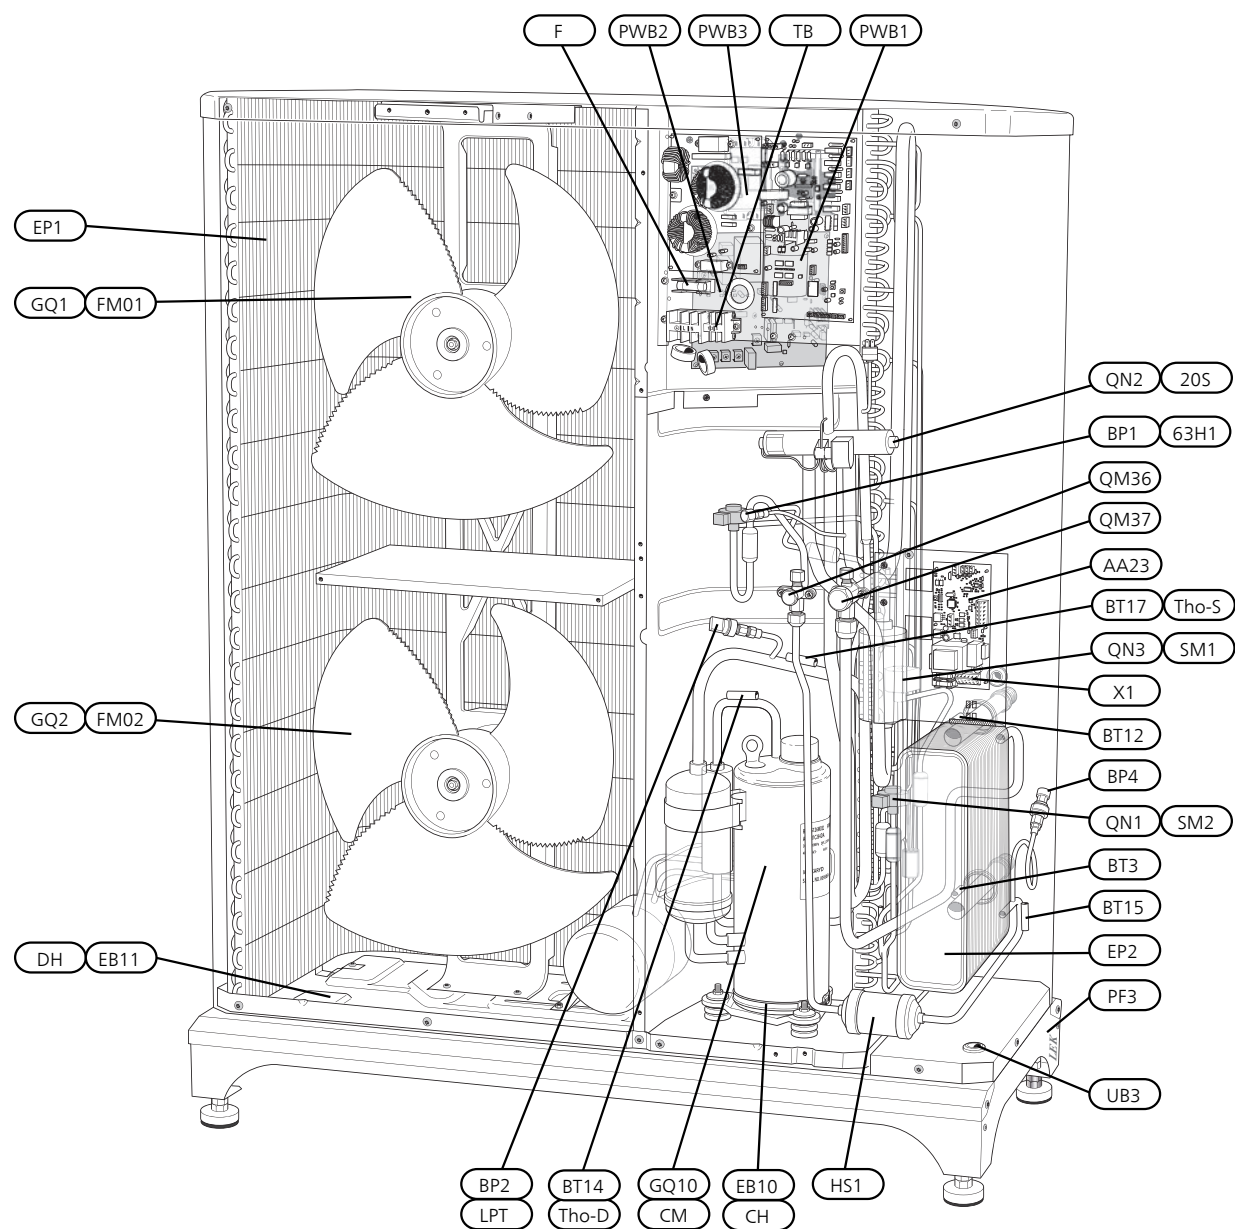



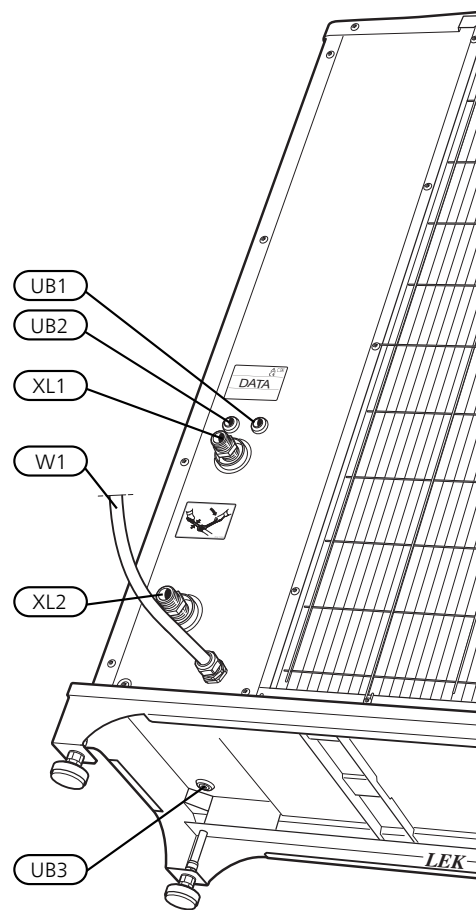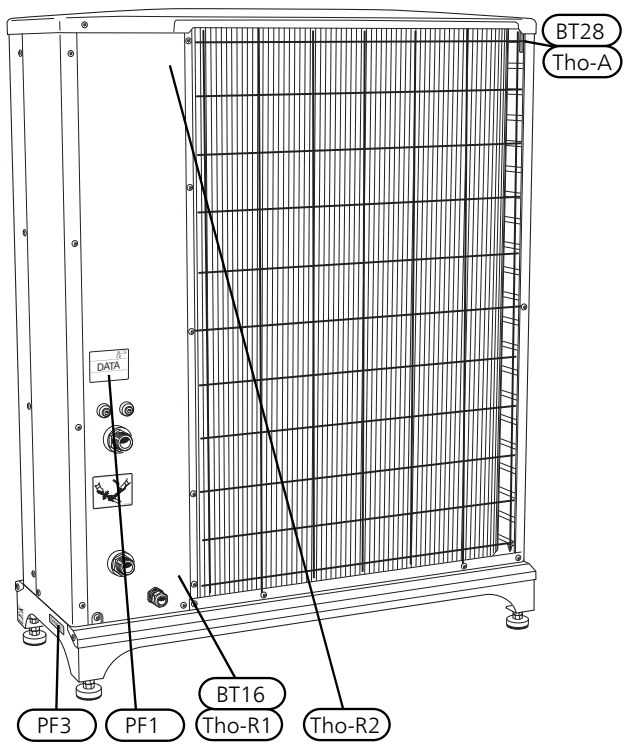

## LIST OF COMPONENTS F2040

### *Pipe connections*

QM36	Shut-off valve, liquid side
QM37	Shut-off valve, gas side
XL1	Connection, heating medium out from F2040, G1" (Ø28 mm)
XL2	Connection, heating medium in to F2040, G1" (Ø28 mm)

### *Sensors etc.*

BP1 (63H1)	High pressure pressostat
BT3	Temperature sensor, heating medium return line
BT12	Temperature sensor, condenser supply line
BT14 (Tho-D)	Temperature sensor, hot gas
BT15	Temperature sensor, fluid pipe
BT16 (Tho-R1)	Temperature sensor 1, evaporator
BT17 (Tho-S)	Temperature sensor, suction gas
BT28 (Tho-A)	Temperature sensor, ambient
BP2 (LPT)	Low pressure transmitter
BP4	High pressure sensor
Tho-R2	Temperature sensor 2, evaporator

### *Electrical components*

AA23	Communication board
AA23-F3	Fuse for external heating cable (250 mA), max 45 W.
AA23-S3	DIP switch, addressing of outdoor unit
AA23-X1	Terminal block, KVR
AA23-X4	Terminal block, communication from indoor module
AA23-X100	Communication with TB
EB10 (CH)	Compressor heater
EB11 (DH)	Drip tray heater
F	Main fuse compressor unit
GQ1 (FM01)	Fan
GQ2 (FM02)	Fan
PWB1	Control board
PWB2	Inverter board
PWB3	Filter board
RF2	EMC filter for inverter
RF3	EMC filter for incoming supply
TB	Terminal block, incoming supply and communication with board AA23

### *Cooling components*

QN2 (20S)	4-way valve
GQ10 (CM)	Compressor
QN3 (SM1)	Expansion valve, cooling
QN1 (SM2)	Expansion valve, heating
EP1	Evaporator (copper pipe with aluminium flange)
EP2	Condenser
HS1	Drying filter

## *Miscellaneous*





PF1	Type plate
PF3	Serial number
UB1	Cable gland, incoming supply
UB2	Cable grommet, communication
UB3	Cable gland, heating cable (EB14)
W1	Cable, incoming supply



Designations in component locations according to standard IEC 81346-2. Designations within brackets according to the supplier's standard.



# Electrical connection

F2040-8

F2040-6

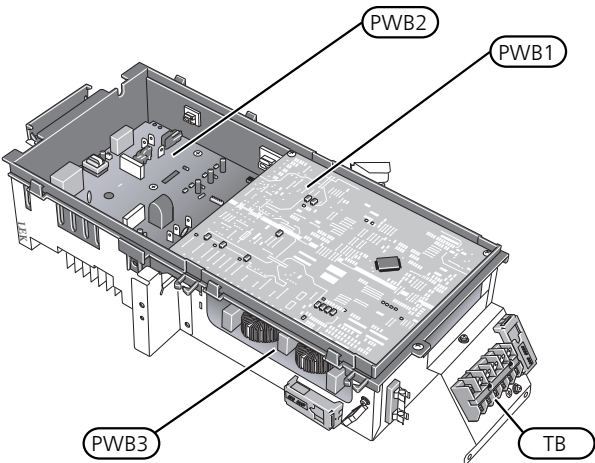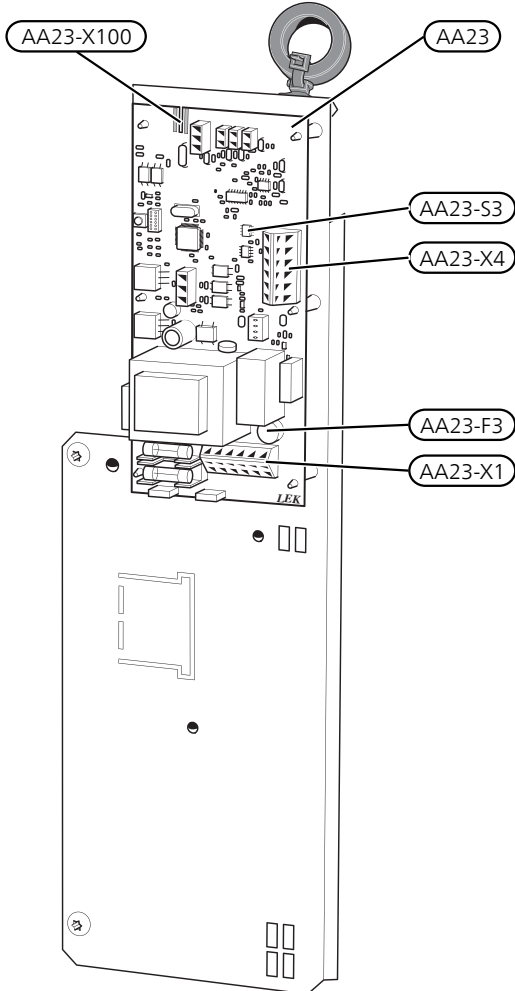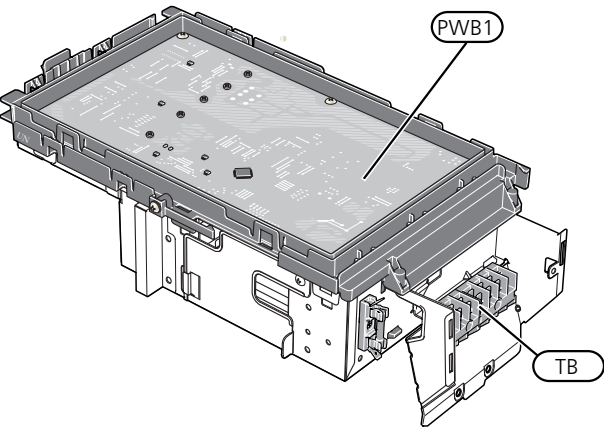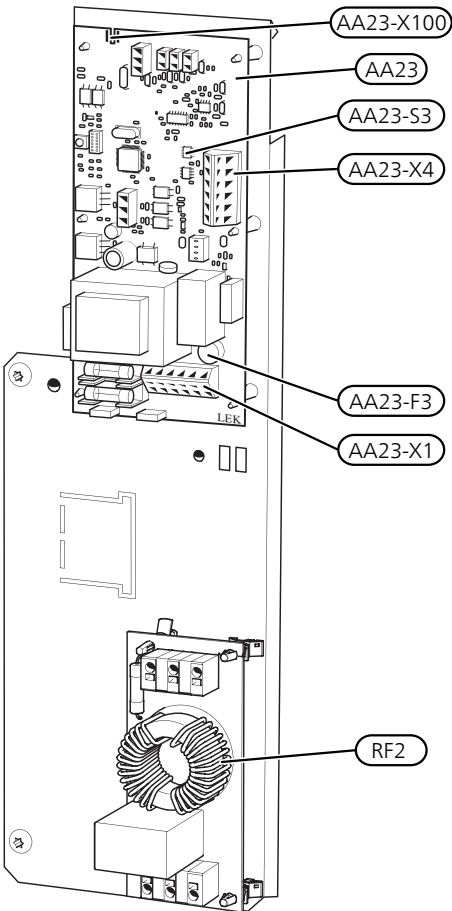

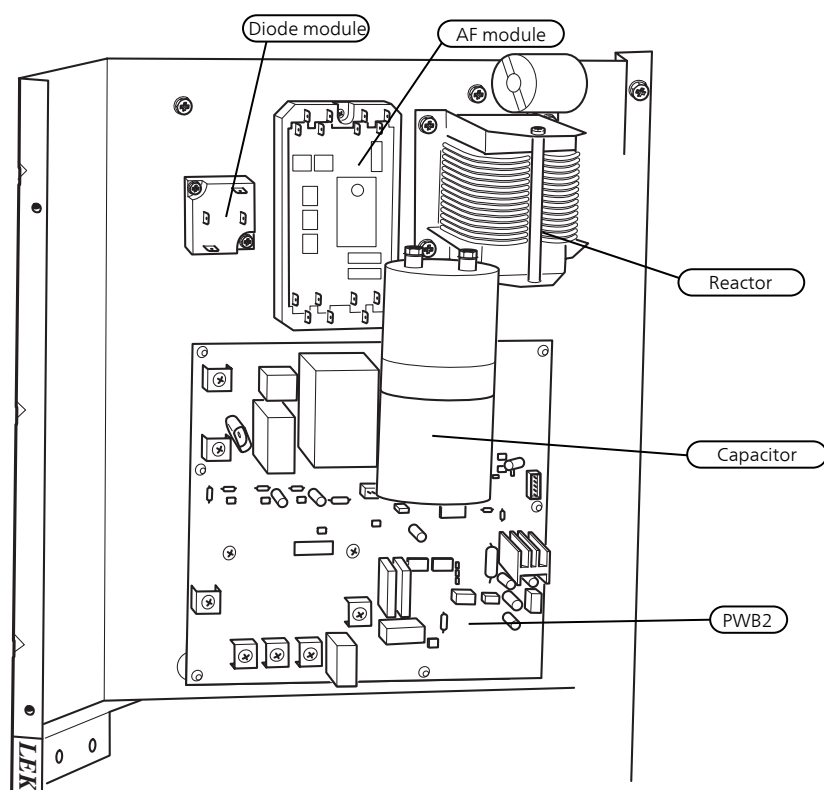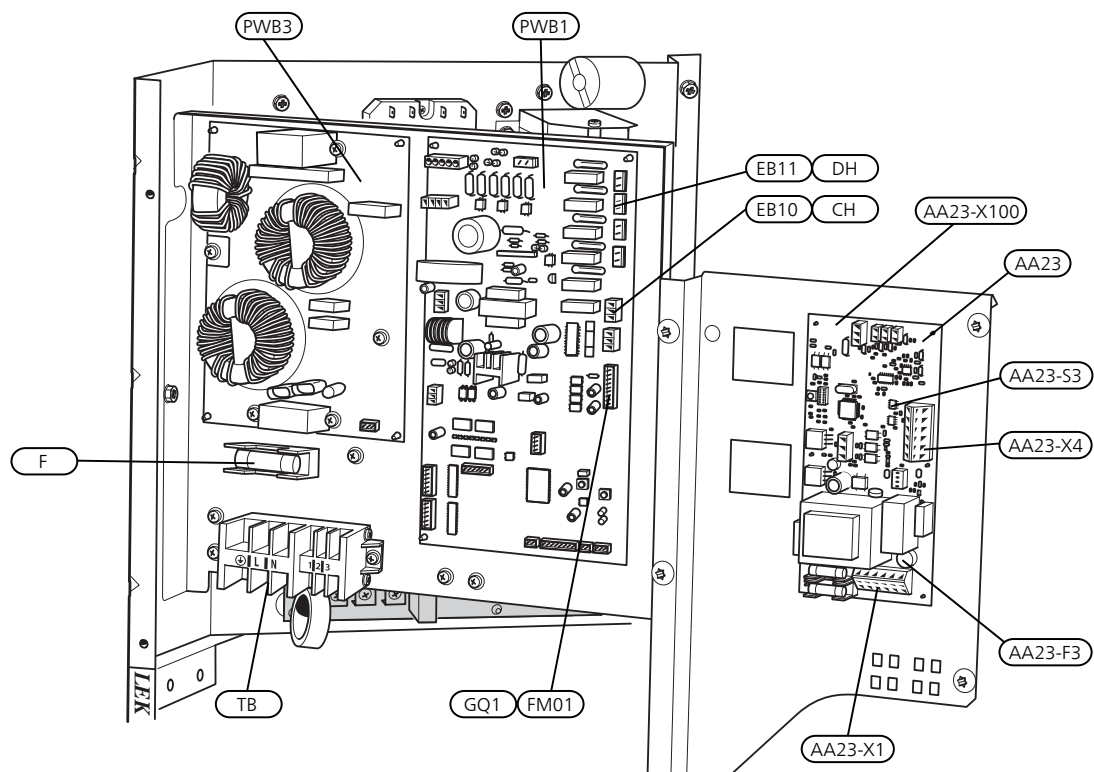

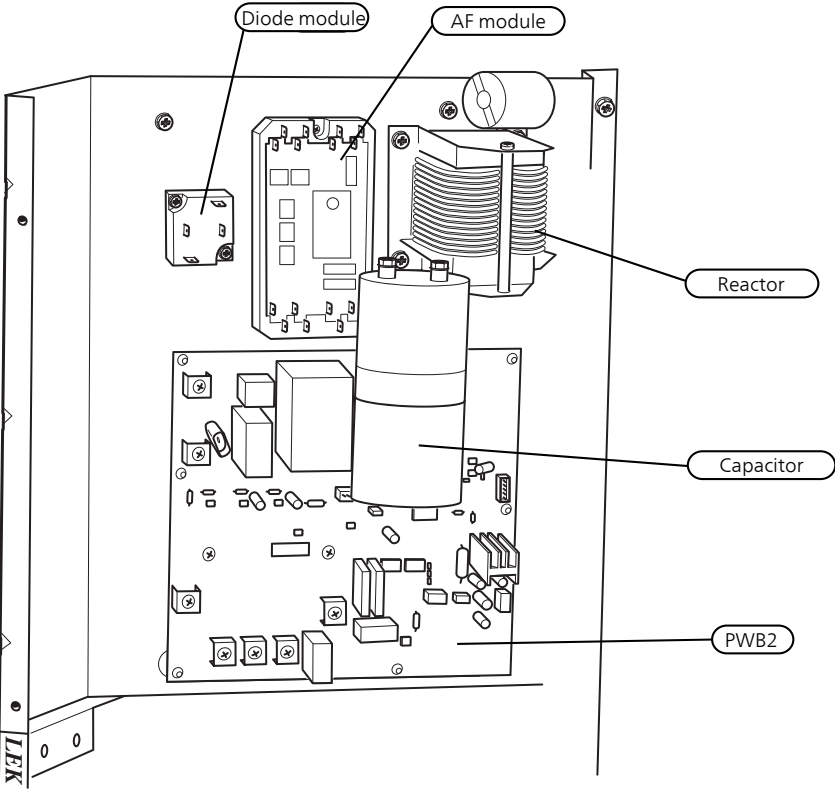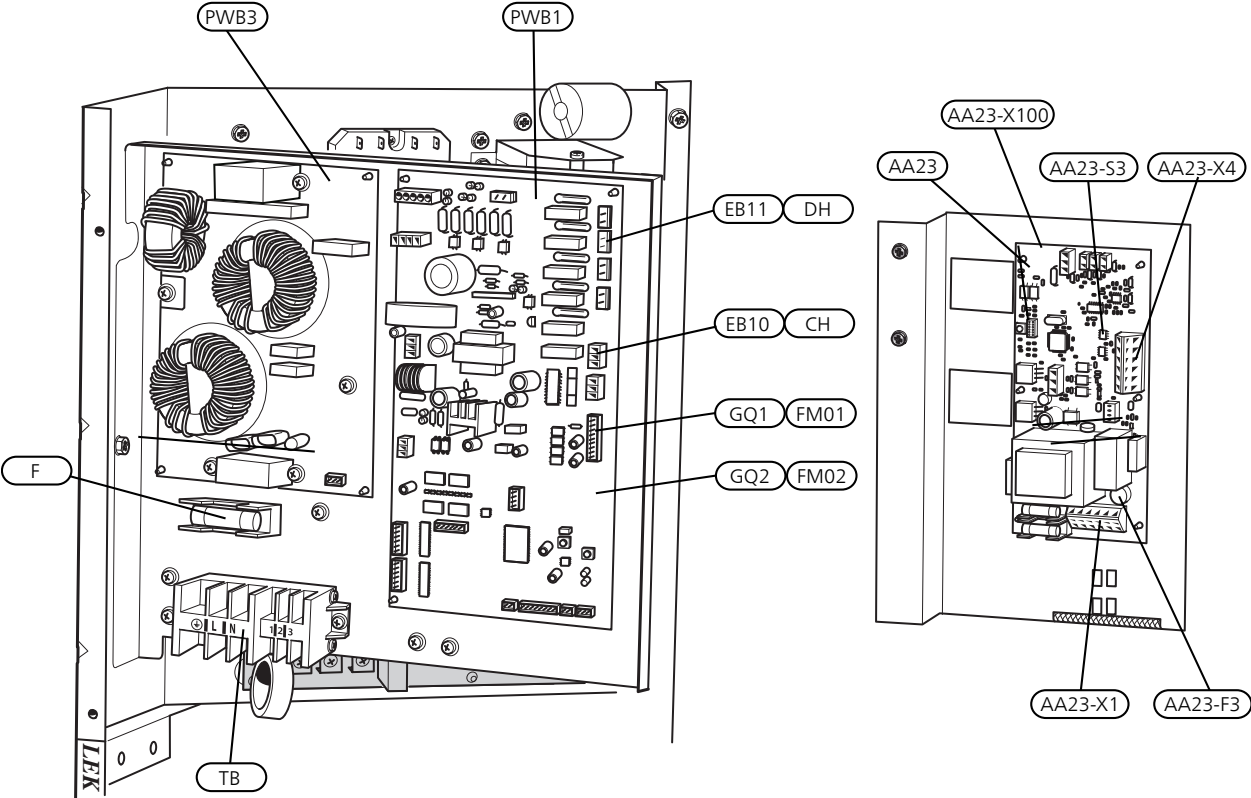

### *Electrical components*

AA23	Communication board
AA23-F3	Fuse for external heating cable (250 mA), max 45 W.
AA23-S3	DIP switch, addressing of outdoor unit
AA23-X1	Terminal block, KVR
AA23-X4	Terminal block, communication from indoor module
AA23-X100	Communication with TB
EB10 (CH)	Compressor heater
EB11 (DH)	Drip tray heater
F	Main fuse compressor unit
GQ1 (FM01)	Fan
GQ2 (FM02)	Fan
PWB1	Control board
PWB2	Inverter board
PWB3	Filter board
RF2	EMC filter for inverter
RF3	EMC filter for incoming supply
TB	Terminal block, incoming supply and communication with board AA23

Designations in component locations according to standard IEC 81346-2. Designations within brackets according to the supplier's standard.

# 4 Pipe connections

## General

Pipe installation must be carried out in accordance with current norms and directives.

F2040 can only operate up to a return temperature of about 55 °C and an outgoing temperature of about 58 °C from the heat pump.

F2040 is not equipped with external shut off valves on the water side; these must be installed to facilitate any future servicing. The return temperature is limited by the return line sensor.

## WATER VOLUMES

When docking with F2040 free flow in the climate system is recommended for correct heat transfer. This can be achieved by use of a bypass valve. If free flow cannot be ensured, it is recommended that a buffer tank (NIBE UKV) is installed.

*Following water volumes are recommended*

F2040	-6	-8	-12	-16
Minimum volume, climate system during heating/cooling	20 l	50 l	80 l	150 l
Minimum volume, climate system during under floor cooling	50 l	80 l	100 l	150 l



### NOTE

The pipe work must be flushed before the heat pump is connected, so that any contaminants do not damage the components.

## Pipe coupling heating medium circuit

- F2040 can be connected to the heating system according to one of the system solutions that can be downloaded from the website [www.nibe.co.uk](http://www.nibe.co.uk).

- The heat pump must be vented by the upper connection (XL1) using the venting nipple on the enclosed flexible hose.
- Install the enclosed particle filter before the inlet, i.e. the lower connection (XL2) on F2040.
- All outdoor pipes must be thermally insulated with at least 19 mm thick pipe insulation.
- Install shutoff and drain valves so that F2040 can be emptied in the event of prolonged power failures.
- The supplied flexible hoses act as vibration dampers. The flexible pipes are fitted so an elbow is created, thus acting as vibration damping.

Before installing the heat pump in an existing system, it is important that the system is properly flushed through.

Even if the heat pump is to be installed in a new system, the heat pump and system should be flushed.



### NOTE

Ensure that cleaning agent has been removed from the entire system before adding inhibitor.

After flushing an inhibitor should be used for long-term anti-corrosion protection.



NIBE Energy Systems Limited recommends water treatments (supplied by e.g. Fernox and Sentinel) specifically designed for heat pumps.

## CHARGE PUMP


The charge pump (not included in the product) is powered and controlled from the indoor module/control module. It has a built-in anti-freezing function and must therefore not be switched off when there is a risk of freezing.

At temperatures below +2 °C the charge pump runs periodically, to prevent the water from freezing in the charge circuit. The function also protects against excess temperatures in the charge circuit.

# Pressure drop diagram

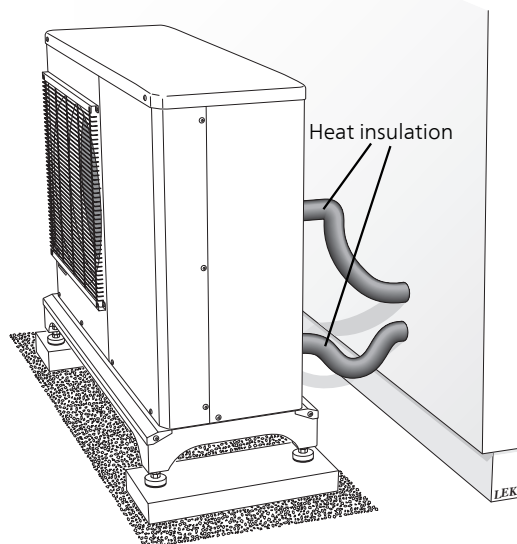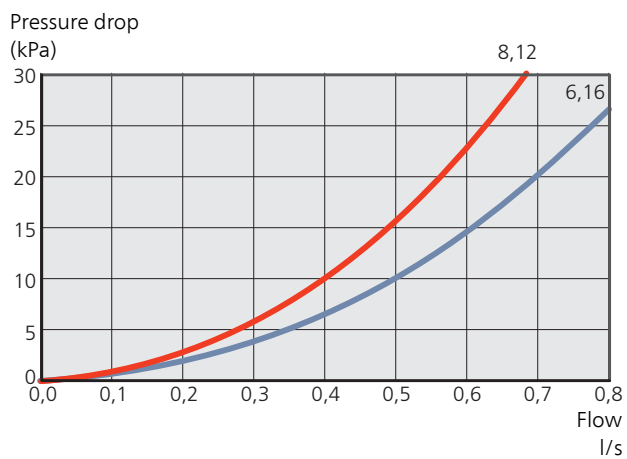

## Pipe connections flex hose

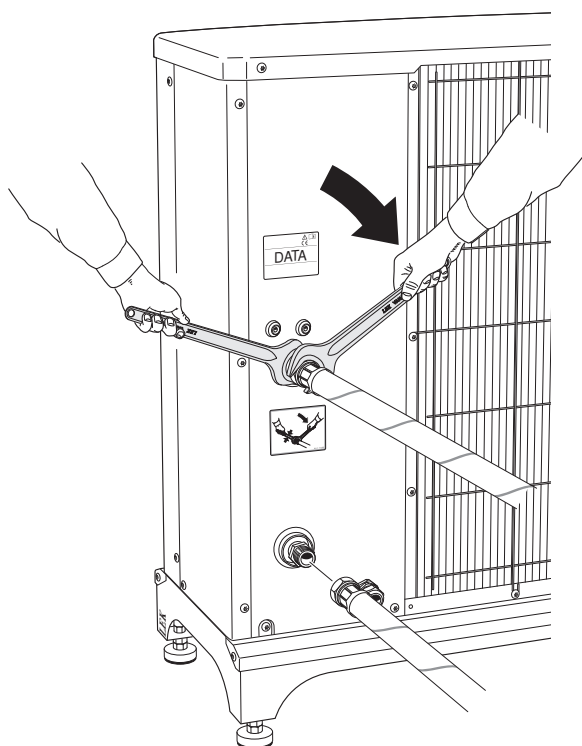



# Docking alternatives

F2040 can be installed with indoor module (VVM) or control module (SMO). The required safety equipment must be installed in accordance with current regulations for all docking options.

The safety equipment must be installed in accordance with current regulations for all docking options.

See [www.nibe.co.uk](http://www.nibe.co.uk) for more docking options.

## CONNECTING ACCESSORIES

Instructions for connecting accessories are in the installation instructions provided for the respective accessory.

See [page 59](#) for the list of the accessories that can be used with F2040.

# 5 Electrical connections

## General

- The heat pump must not be connected without the permission of the electricity supplier and must be connected under the supervision of a qualified electrician.
- If a miniature circuit-breaker is used, this must have motor characteristic "C" (compressor operation). For MCB size, see "Technical specifications".
- F2040 does not include an omnipolar circuit breaker on the incoming power supply. The heat pump's supply cable (W1) must therefore be connected to a circuit breaker with a breaking gap of at least 3 mm. If the building is equipped with a residual current device, the heat pump should be equipped with a separate one. The residual current device should have a nominal tripping current of no more than 30 mA. Incoming supply must be 230 V 50Hz via electrical distribution units with fuses.
- If an insulation test is to be carried out in the building, disconnect the heat pump.
- Communication cable (W2) is inserted from the rear side through UB2.
- Connect communication cable (W2) from terminal block (AA23-X4) to the indoor module.



### NOTE

The live external control must be taken into consideration when connecting.



### NOTE

If the supply cable is damaged, only NIBE, its service representative or similar authorised person may replace it to prevent any danger and damage.



### NOTE


Electrical installation and any servicing must be carried out under the supervision of a qualified electrician. Disconnect the current with the circuit breaker before carrying out any servicing. Electrical installation and wiring must be carried out in accordance with the national stipulations in force.




### NOTE

Check the connections, main voltage and phase voltage before starting the machine to prevent damage to the air/water heat pump's electronics.


F2040-6

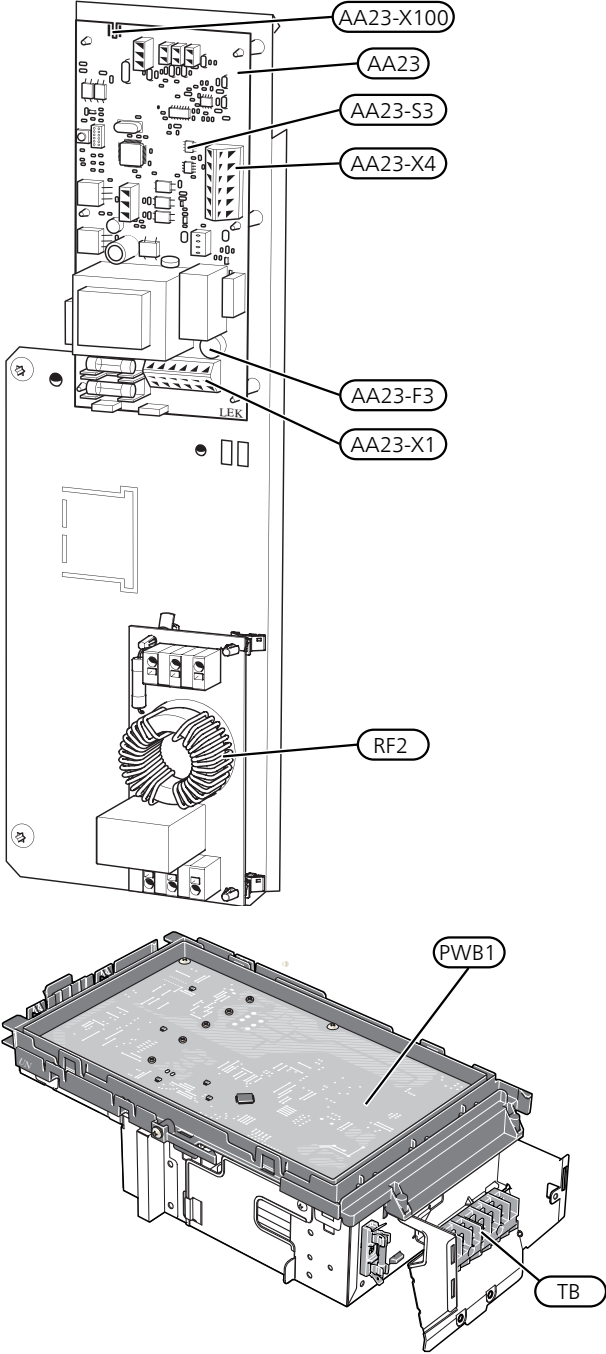




F2040-8

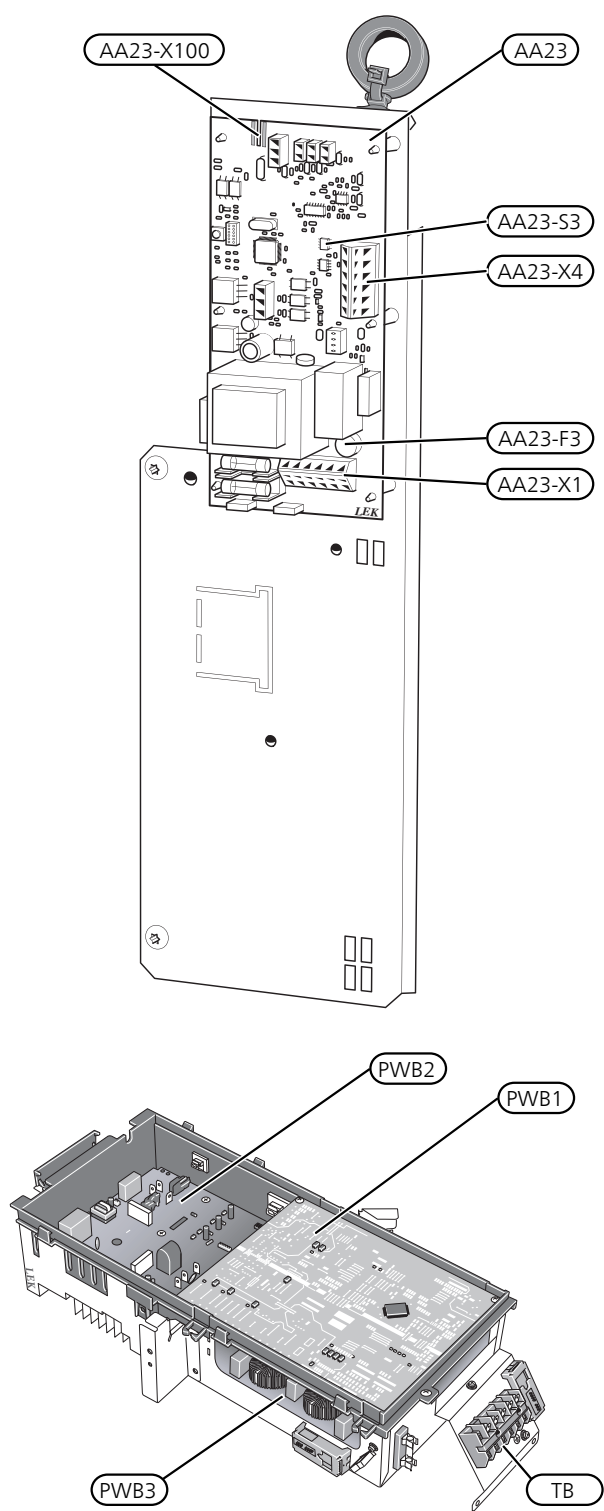

F2040-12

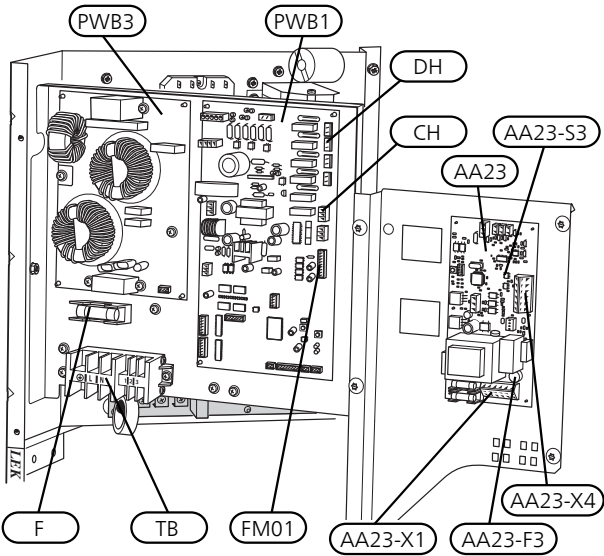

F2040-16

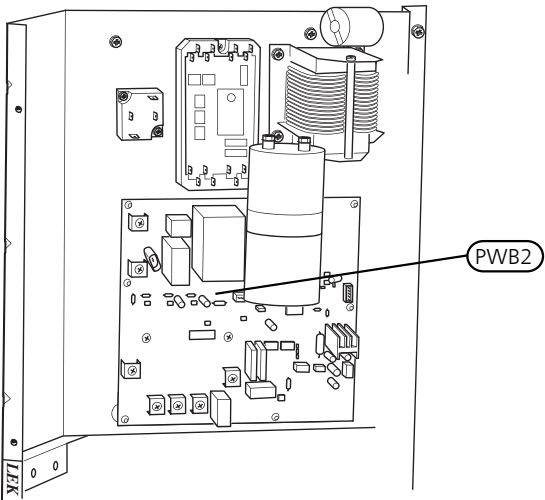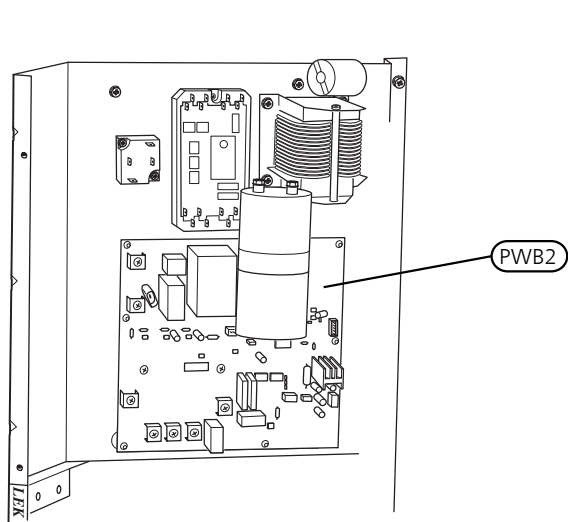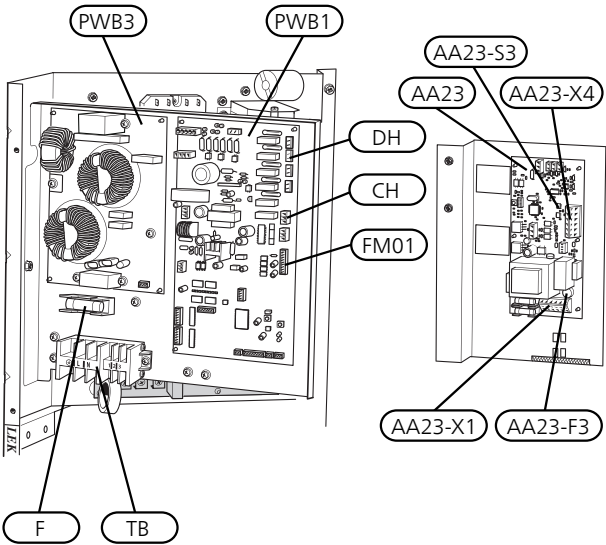

# Connections




## NOTE


To prevent interference, unscreened communication and/or sensor to external connections cables must not be laid closer than 20 cm to high voltage cables when cable routing.

## POWER CONNECTION



F2040-6

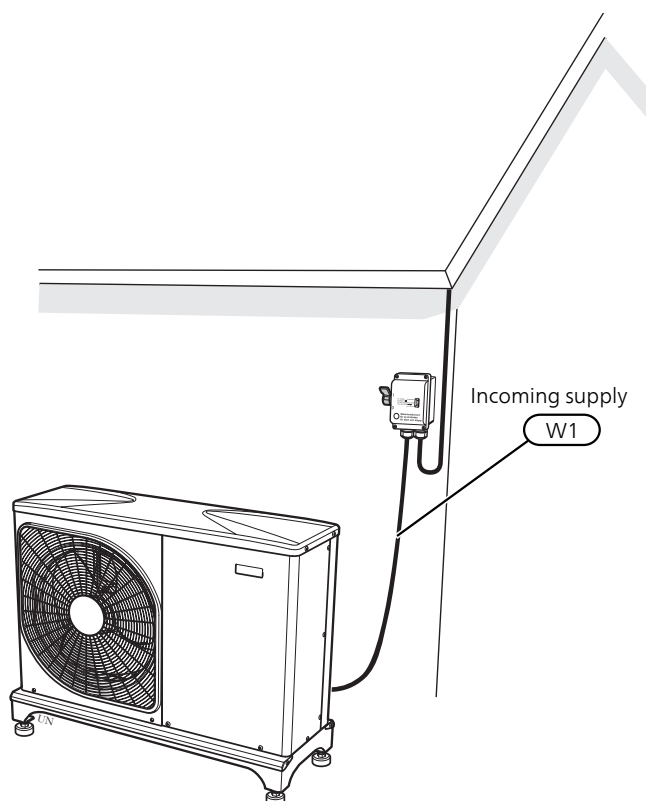



Power connection


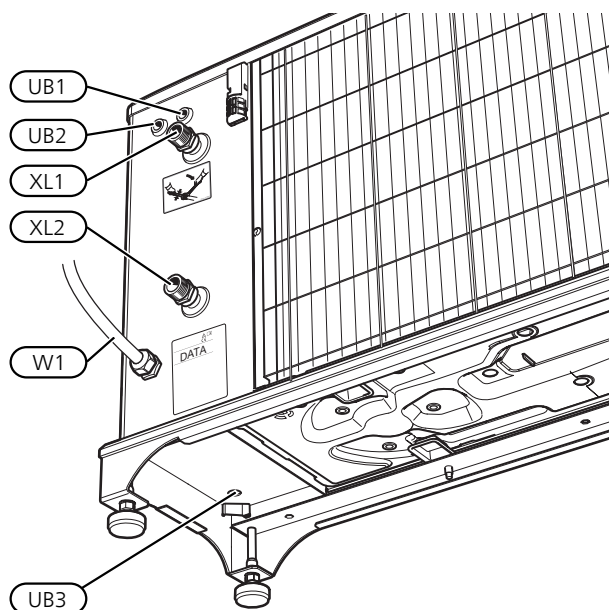


F2040-8

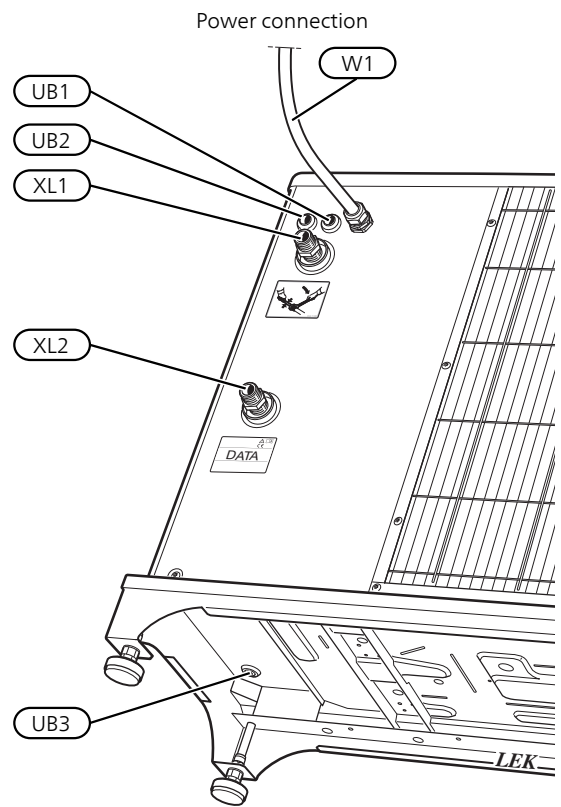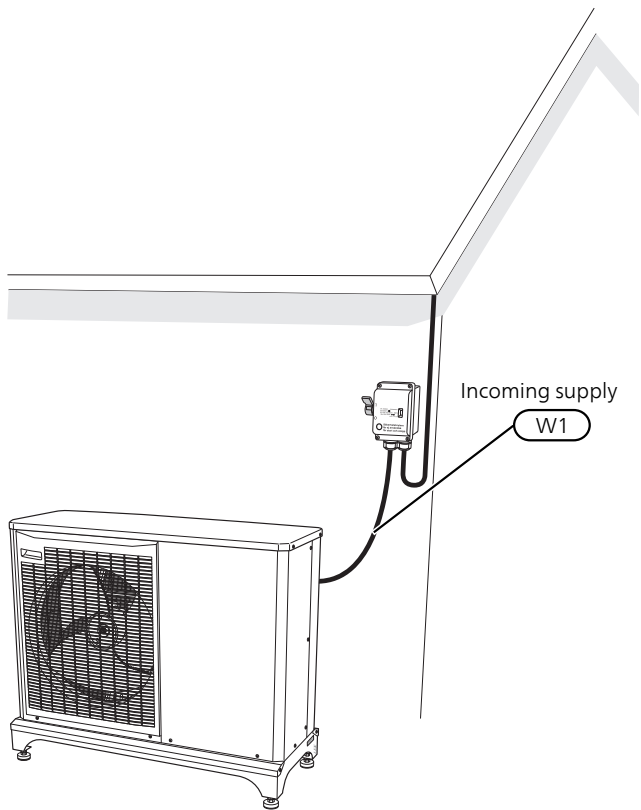

F2040-12

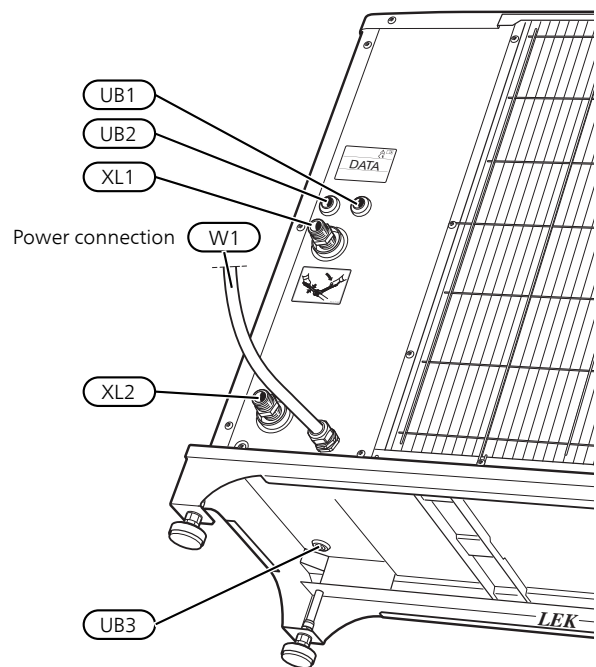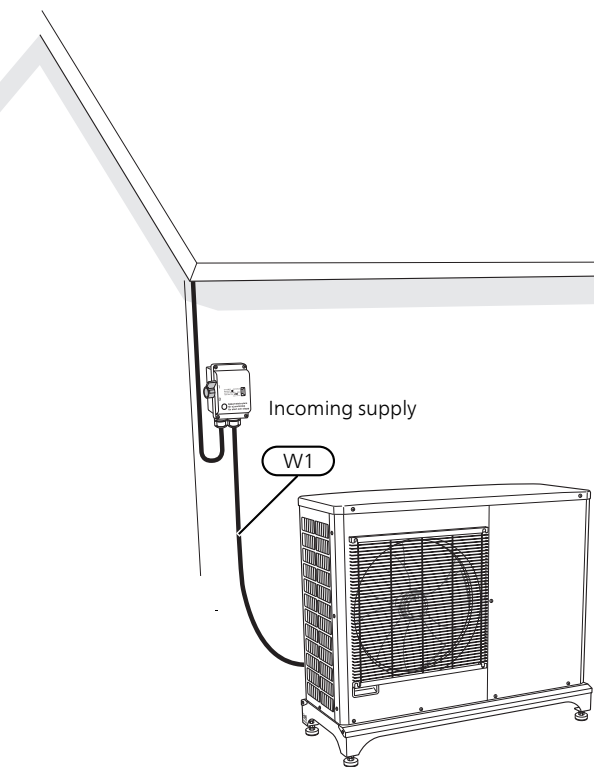

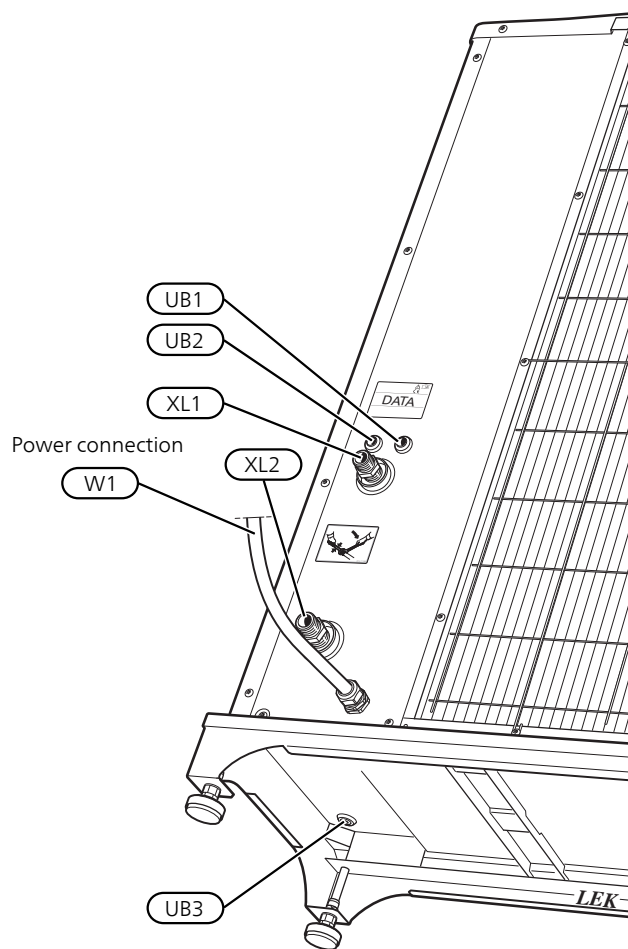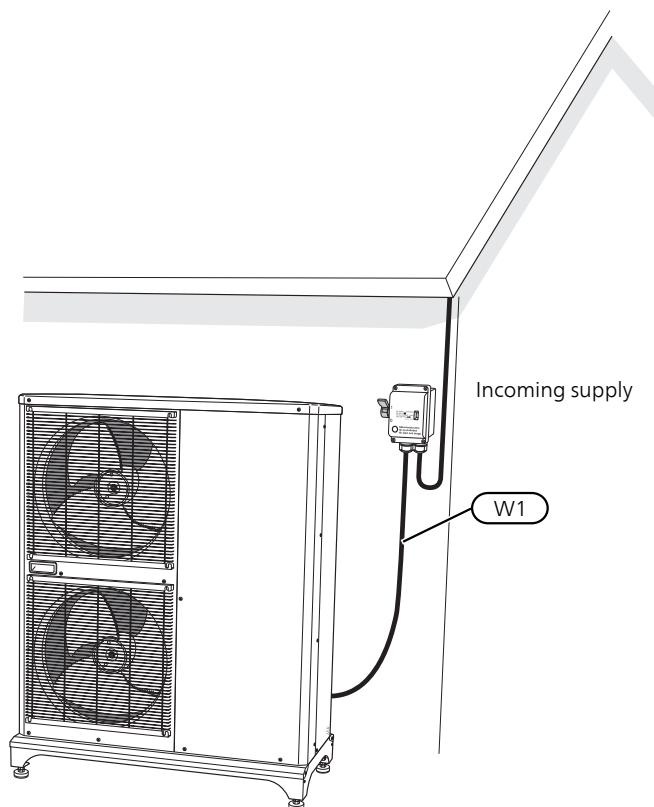

Incoming supply cable (W1) is enclosed and connected to terminal block X1 at the factory. Outside the heat pump there is approx. 1.8 m of cable available.


Connect communication cable (W2) (provided by installer) to terminal block AA23-X4 and secure with two cable ties, see image.

For connection of accessory KVR 10, heating cable (EB14) is connected via cable grommet UB3, see External heating cable KVR 10 (Accessory) on page 37.


## LIST OF COMPONENTS

UB1	Cable grommet, cascade connection
UB2	Cable grommet, communication
UB3	Cable grommet, heating cable (EB14)
W1	Cable, incoming supply

F2040-6

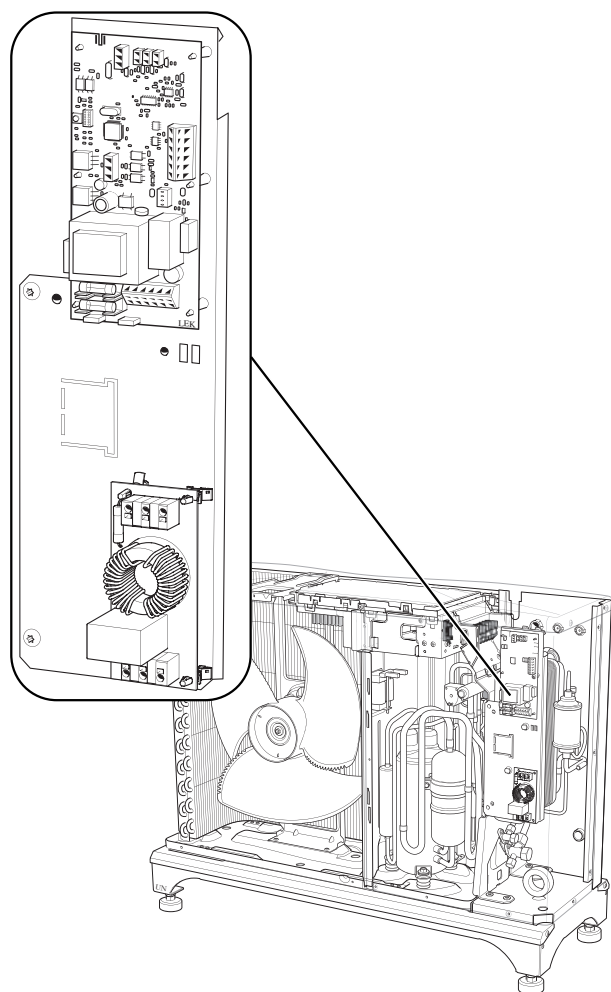


F2040-8

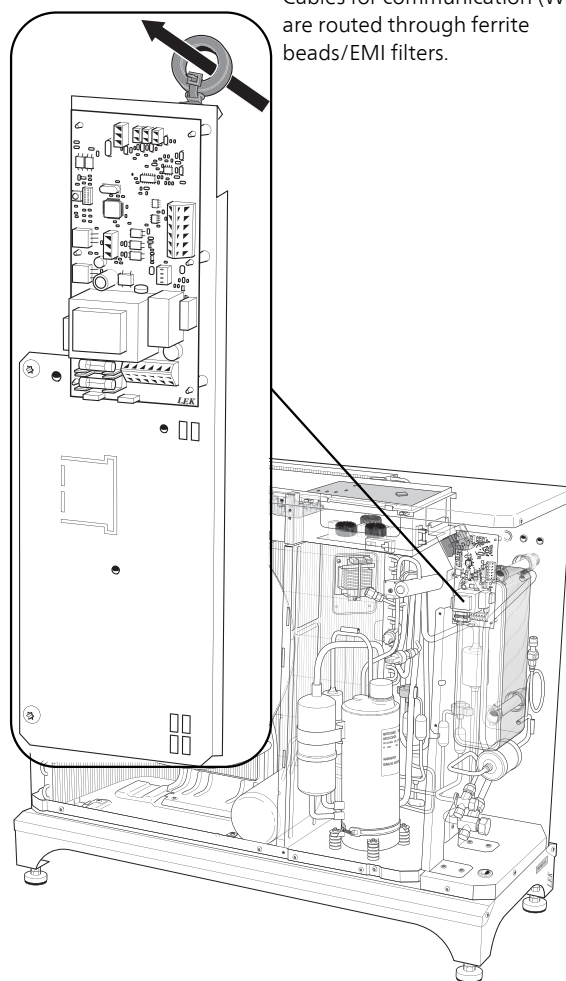

Cables for communication (W2) are routed through ferrite beads/EMI filters.


F2040-12

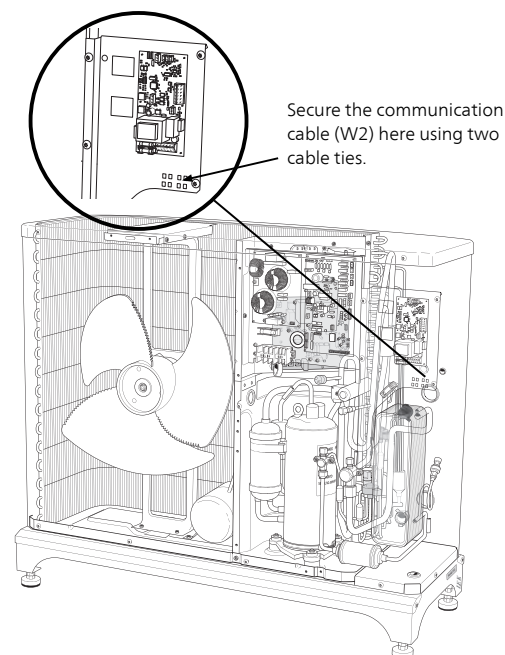

Secure the communication cable (W2) here using two cable ties.




F2040-16

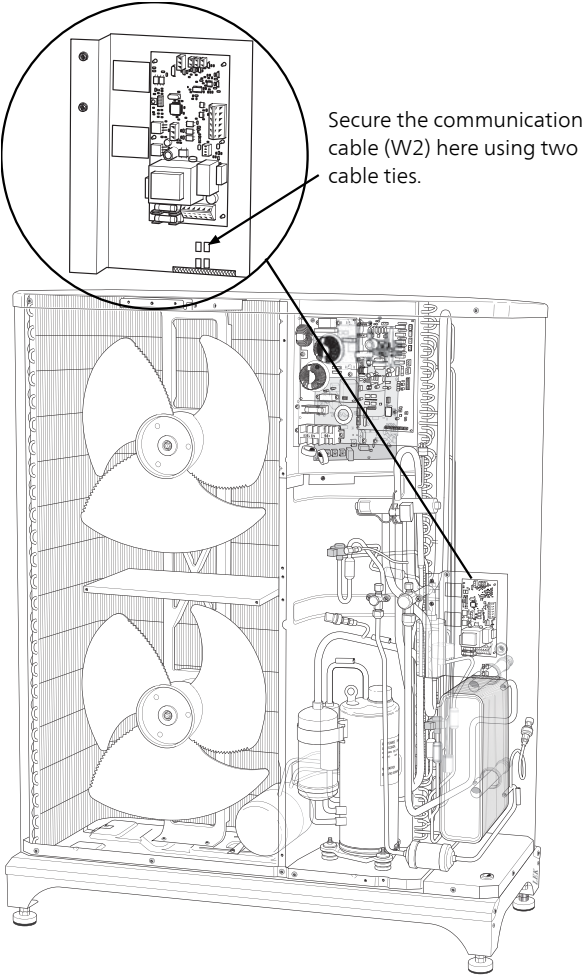


EXTERNAL HEATING CABLE KVR 10  
(ACCESSORY)


F2040 is equipped with a plinth for external heating cable EB14 not supplied). The connection is fused with 250 mA (F3 on the communication board AA23). If another cable is to be used, the fuse must be replaced with a suitable one (see table).

**NOTE**  
Self regulating heating cables must not be connected.

Length, heating cable (m)	$P_{tot}$ (W)	Fuse (F3)	Part No.
1	15	T100mA/250V	718 085
3	45	T250mA/250V	518 900*
6	90	T500mA/250V	718 086

\*Fitted at the factory.  
Connect external heating cable (EB14) to terminal block X1:4–6 according to following image:

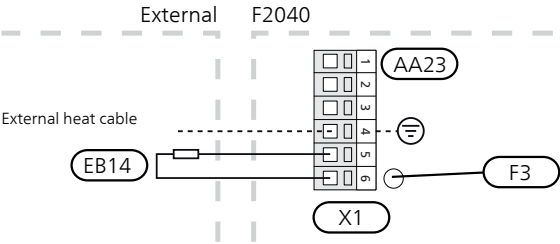


**NOTE**  
The pipe must be able to withstand the heat from the heating cable.  
To ensure this function the accessory KVR 10 should be used.


## Cable routing

The following images show recommended cable routing from the electrical connection to the condensation pipe. Route the heating cable (EB14) through the gland on the underside and secure with two cable ties at the electrical connection. The transition between the electrical cable and the heating cable must occur after the gland to the condensation pipe.


F2040-6

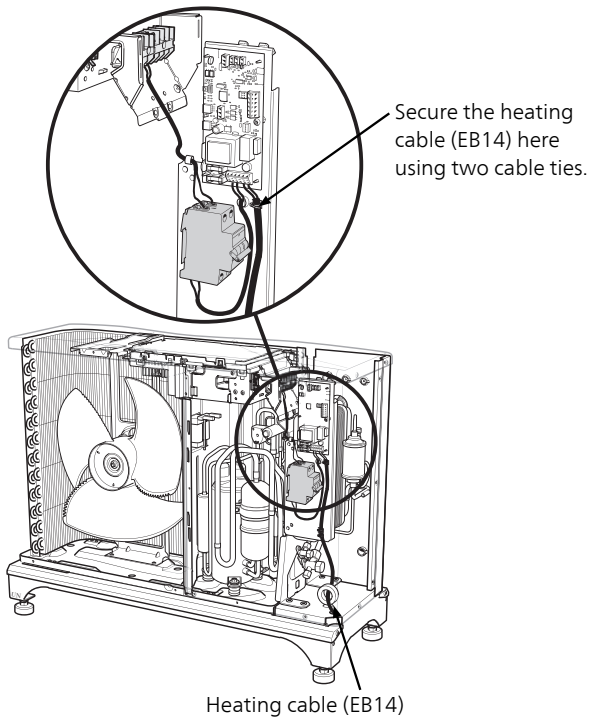


F2040-8

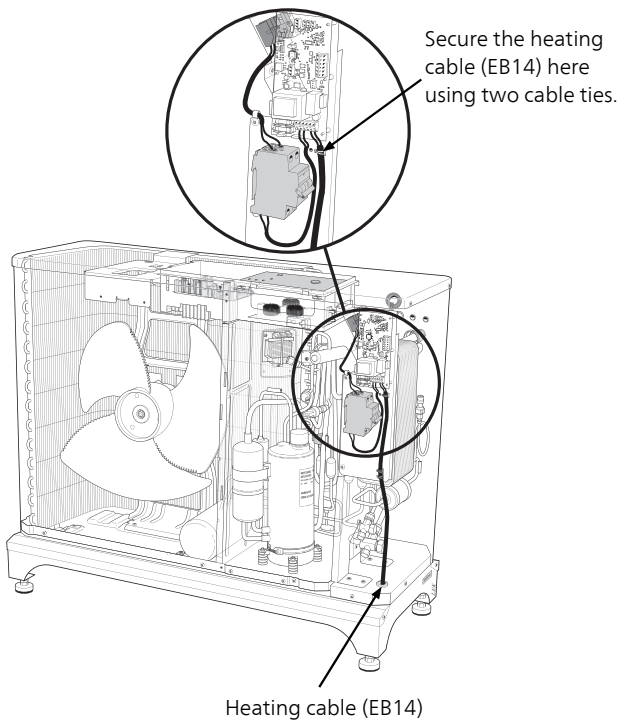

F2040-12

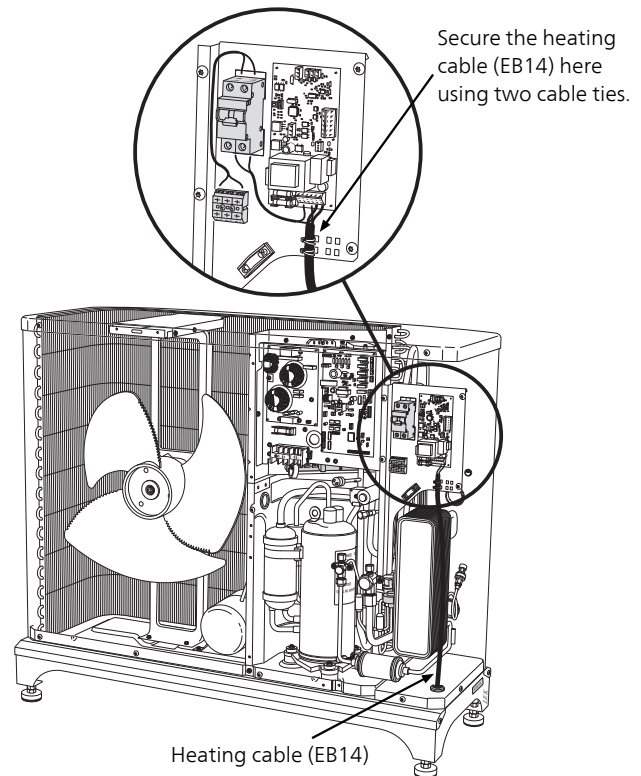

F2040-16

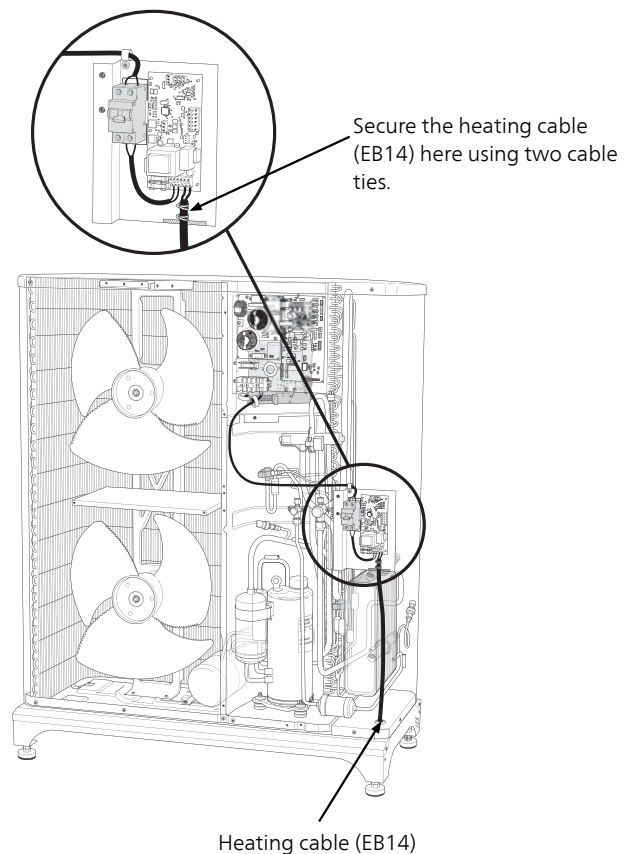


## AMBIENT TEMPERATURE SENSOR

An ambient temperature sensor BT28 (Tho-A) is located on the rear of F2040.

## COMMUNICATION INDOOR MODULE

F2040 can communicate with NIBE indoor modules, by connecting the indoor module to the terminal block X4:1–3 according to the following image:

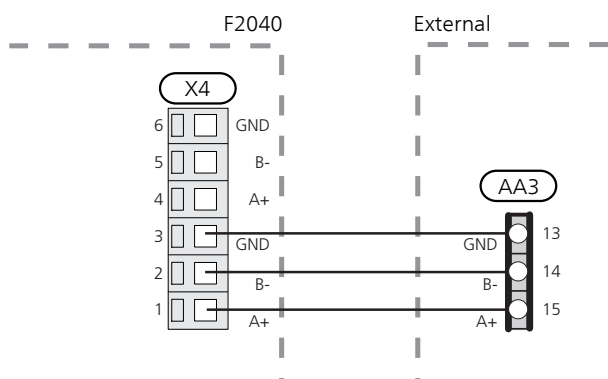


### NOTE

When installing F2040-6, the NIBE indoor module must have the correct software version. Please ensure that the indoor module, in this case, has at least software version v8320.

For connection of indoor module, see relevant manual on [www.nibe.co.uk](http://www.nibe.co.uk).

# CONNECTION BETWEEN F2040 AND CONTROL MODULE


**NOTE**

When installing F2040-6, the NIBE control module must have the correct software version. Please ensure that the control module, in this case, has at least software version v8320.

## SMO 20

The cable between the units must be connected between terminal block for communication (AA23-X4:1, 2, 3) in F2040 and terminal block for communication (X2-19(A), -20 (B), -21 (GND)) in SMO 20.


Stripped length of conductor is 6 mm.

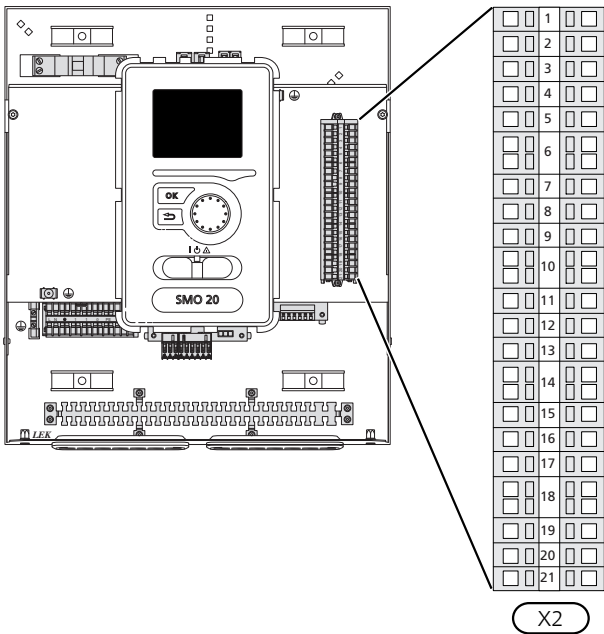


## SMO 20 and F2040

F2040 can communicate with the control module (SMO 20), by connecting to the terminal block in SMO 20, X2-19(A), -20 (B), -21 (GND), according to the following image:

## F2040

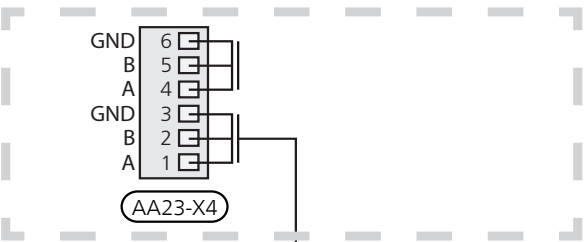


## Control module

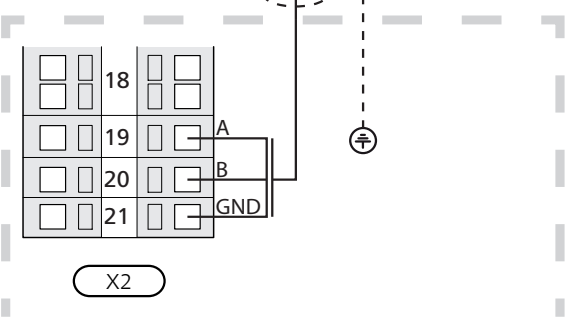

## SMO 40

The cable between the units must be connected between terminal block for communication (AA23-X4:1, 2, 3) in F2040 and terminal block for communication (AA5:X4-1(A), -2 (B), -3 (GND)) in SMO 40.


Stripped length of conductor is 6 mm.

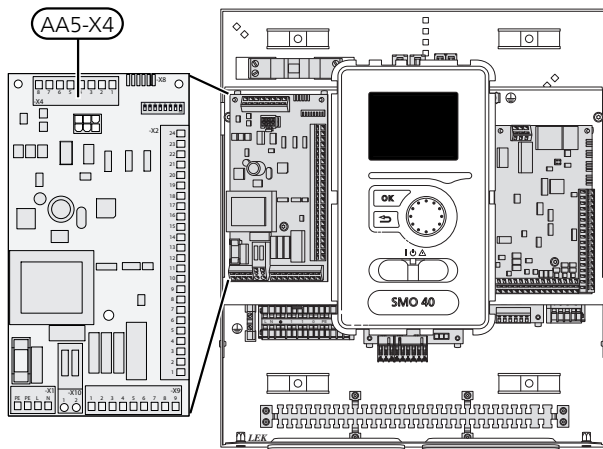


## SMO 40 and more F2040

F2040 (one or more) can communicate with the control module (SMO 40), by connecting to the terminal block in SMO 40, AA5:X4-1(A), -2 (B), -3 (GND), according to the following image:


### F2040

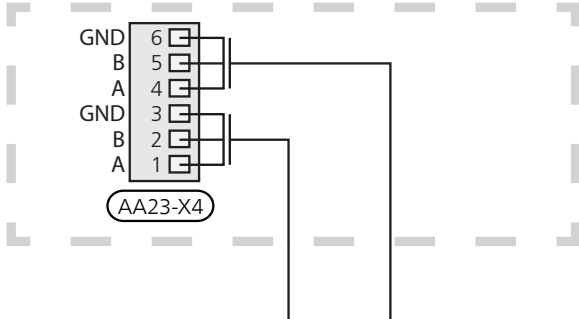

### F2040

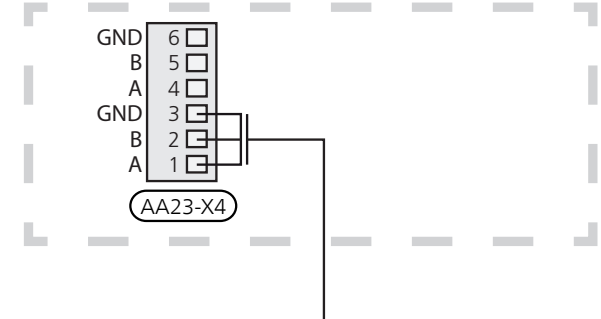

### Control module

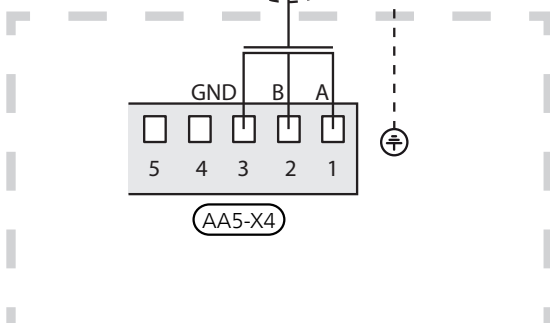

## ADDRESSING VIA CASCADE CONNECTION

On the communication board (AA23-S3), the communication address is selected for F2040 to the control module. The default address for F2040 is **1**. In a cascade connection, all F2040 must have a unique address. The address is coded in binary.

Address	S3:1	S3:2	S3:3
1	OFF	OFF	OFF
2	On	OFF	OFF
3	OFF	On	OFF
4	On	On	OFF
5	OFF	OFF	On
6	On	OFF	On
7	OFF	On	On
8	On	On	On

# 6 Commissioning and adjusting

## Preparations

- Before commissioning, check that the charge circuit and climate system are filled and well vented.
- Check the pipe system for leaks.



### NOTE

At the time of commissioning, complete all relevant sections of the Benchmark Checklist located at the back of this document.

Completion of the Benchmark Checklist is a condition of warranty. For full terms and conditions of warranty, please see our website [www.nibe.co.uk](http://www.nibe.co.uk).

## Compressor heater

F2040 (does not apply to F2040-6) is equipped with a compressor heater that heats the compressor before start-up and when the compressor is cold.




### NOTE

The compressor heater must have been connected for 6 – 8 hours before the first start, see the section “Start-up and inspection” in the Installer Manual for the indoor section

## Filling and venting

Filling and venting the heating medium system.

1. The heating medium system is filled with water to the required pressure.
2. Vent the system using the venting nipple (QM20) on the enclosed flexible hose and possibly the circulation pump.

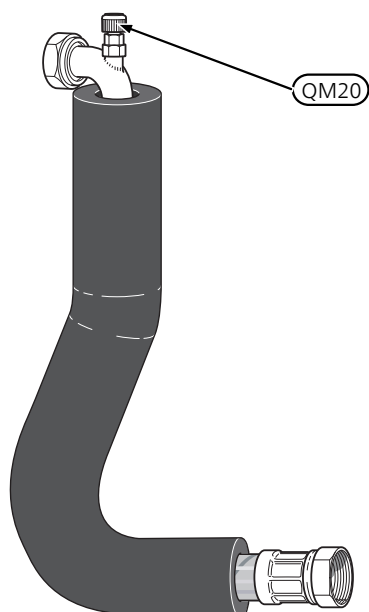

# Start-up and inspection

1. The compressor heater (CH) must have been operational for at least 6 - 8 hours before the compressor start can be initiated. This is done by switching on the control voltage and disconnecting the communication cable.
2. F2040 must be addressed if it is to have another address than 1. See chapter Addressing via cascade connection, on page 42.
3. The communication cable on the terminal block AA23-X4 must not be connected.
4. Turn the isolator switch on.
5. Ensure that the F2040 is connected to the power source.
6. After 6 – 8 hours, connect the communication cable (W2) to the terminal block AA23-X4.
7. Restart the indoor module. Follow the instructions for "Start-up and inspection" in the installation manual for the indoor module.

The heat pump starts 30 minutes after the outdoor unit has been powered up and the communication cable (W2) has been connected, if necessary.

If scheduled *silent operation* is required, it must be scheduled in the inner section or control unit.



## Caution


Silent mode should only be scheduled periodically because the maximum output is limited to approx. the nominal values.




## Caution

Do not start any electrical work until at least two minutes after cutting the power.

F2040-6 , -8

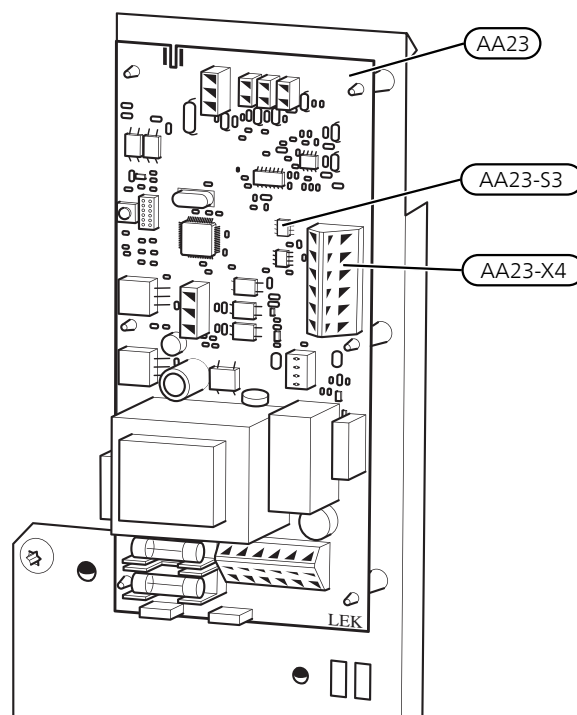

F2040-12 , -16

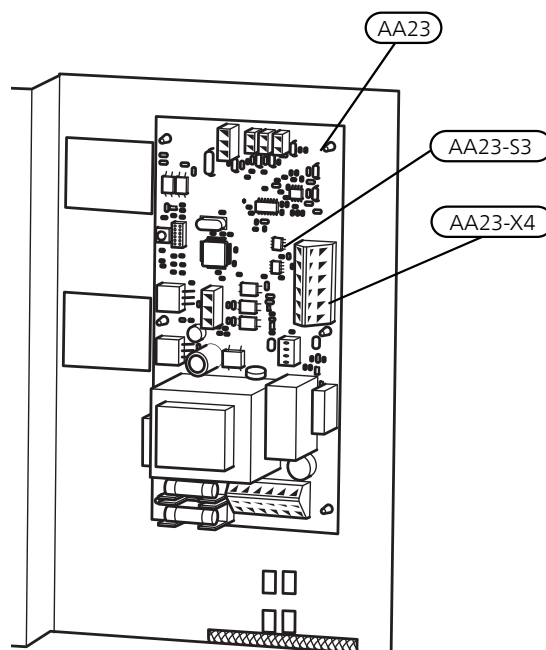



# Readjusting, heating medium side

Air is initially released from the hot water and venting may be necessary. If bubbling sounds can be heard from the heat pump, the circulation pump and radiators the entire system will require further venting. When the system is stable (correct pressure and all air eliminated) the automatic heating control system can be set as required.

# Adjustment, charge flow

Instructions for adjusting hot water charging are in the Installer Manual for the relevant indoor module. See page 59 for the list of the indoor units and accessories that can be connected to F2040.

# 7 Control

## Menu 5.11.1.1 – Heat pump EB101

These settings are made on the display in the indoor module.

### *Cooling permitted*

Here you can set whether the cooling function is to be activated for the heat pump.

### *Silent mode permitted*

Set whether silent mode is to be activated for the heat pump here.

### *Current limit*

Set whether the current limiting function is to be activated for the heat pump here. During active function you can limit the value of the maximum current.

Setting range: 6 – 32 A

Factory setting: 32 A

### *Stop temperature compressor*

Here you can limit the value for set outdoor temperature down to the value the heat pump is to work.

Setting range -20 – -2 °C

Factory setting -20 °C

### *blockFreq 1*

Select a frequency range within which the heat pump may work here.

### *blockFreq 2*

Select a frequency range within which the heat pump may work here.

# 8 Servicing and maintenance

## Important

The NIBE heat pump requires minimal maintenance but to ensure the continued efficient running of your heat pump and guarantee in the warranty period it is recommended that it is checked and serviced annually by a qualified engineer.

Any servicing must be carried out by a competent person.

When replacing a part on the appliance, use only spare parts supplied by NIBE.

If any electrical connections have been disconnected and re-connected, checks for earth continuity must be tested for with a suitable multimeter.

On completion the Benchmark service record should be completed.

## General inspection

Check the following:

1. Condition of casing
2. Check Inlet grille is not clogged with leaves
3. Check fan for any obstructions
4. Electrical supply connections
5. Water connections
6. Heating system pressure
7. Alarm log

Correct any fault before continuing.



### NOTE

Before removing any covers or replacing parts the heat pump must be isolated from the mains electrical supply.

## Heating System

1. Inspect start and stop temperatures. Correct if required.
2. Inspect heat curve (SMO & VVM only). Correct if required.
3. Check the heating system flow temperatures, the difference should be between 5-10°C. Adjust flow if required.
4. Inspect the heat pump charge flow temperature difference against charge flow with graphs on page 18. Adjust if required.



### NOTE

After servicing, complete the relevant Service Interval Record section of the Benchmark Checklist located at the back of this document.

Completion of the Service Interval Record is a condition of warranty. For full terms and conditions of warranty, please see our website [www.nibe.co.uk](http://www.nibe.co.uk).

# 9 Disturbances in comfort

## Troubleshooting



### NOTE

Work behind covers secured by screws may only be carried out by, or under the supervision of, a qualified installation engineer.



### NOTE

As F2040 can be connected to a large number of external units, these should also be checked.



### NOTE

In the event of action to rectify malfunctions that require work within screwed hatches the incoming electricity must be isolated at the safety switch.



### Caution

Alarms are acknowledged on the indoor module / control module (VVM / SMO).

The following tips can be used to rectify comfort disruption:

### BASIC ACTIONS

#### *First and foremost*

Start by checking any alarm messages in the info menu on the indoor module (VVM) / control module (SMO). Follow the instructions on the display on the indoor module (VVM) / control module (SMO).

#### *F2040 not in operation*

F2040 communicates all alarms to the indoor module/control module (VVM / SMO).

- Ensure that the F2040 is connected to the power source and that compressor operation is required.
- Check the indoor module/control module (VVM / SMO). See section "Disturbances in comfort" in the Installer Manual for the indoor module/control module (VVM / SMO).

#### *F2040 does not communicate*

- Check that the addressing of F2040 is correct.
- Check that the communication cable is correctly connected and working.

#### *Further possible measures*

If any components are disconnected from the power.

Start by checking the following items:

- That the heat pump is running or that the supply cable to F2040 is connected.
- Group and main fuses of the accommodation.
- The property's earth circuit breaker.
- The heat pump's fuse (F).

## LOW HOT WATER TEMPERATURE OR A LACK OF HOT WATER



### *Caution*

The hot water is always set on the indoor module (VVM) or the control module (SMO).

This part of the fault-tracing chapter only applies if the heat pump is docked to the hot water heater.

- Large hot water consumption.
  - Wait until the hot water has heated up.
- The hot water settings are adjusted on the display on the indoor module / control module.
  - See the manual for the indoor module or control module.
- Clogged particle filter.
  - Check whether alarm "high condenser out" (162) is an information message. Check and clean the particle filter.

## LOW ROOM TEMPERATURE

- Closed thermostats in several rooms.
  - Set the thermostats to max in as many rooms as possible.
- Incorrect settings in indoor module or control module.
  - See the manual for the indoor module / control module (VVM / SMO).
- Incorrect flow across the heat pump.
  - Check whether alarm "high condenser in" (163) or "high condenser out" (162) are info messages. Follow the instructions for adjusting charge flow.

## HIGH ROOM TEMPERATURE

- Incorrect settings in indoor module or control module.
  - See the manual for the indoor module or control module.

## LARGE AMOUNT OF WATER BELOW F2040


Check that the water drainage via the condensation pipe (KVR 10) is working.

## SENSOR PLACEMENT


### *Sensors etc.*


BE1 (CT)	Current sensor
BP1 (63H1)	High pressure pressostat
BP2 (LPT)	Low pressure transmitter
BP4	High pressure sensor
BT3	Temperature sensor, heating medium return line
BT12	Temperature sensor, condenser supply line
BT14 (Tho-D)	Temperature sensor, hot gas
BT15	Temperature sensor, fluid pipe
BT16 (Tho-R1)	Temperature sensor, heat exchanger, 1
BT17 (Tho-S)	Temperature sensor, suction gas
BT28 (Tho-A)	Temperature sensor, ambient
EB10 (CH)	Compressor heater
EB11 (DH)	Drip tray heater
EP2	Condenser
GQ1 (FM01)	Fan
GQ10 (CM)	Compressor
HS1	Drying filter
QN1 (EEV)	Expansion valve
QN1 (SM2)	Expansion valve, heating
QN2 (20S)	4-way valve
QN3 (SM1)	Expansion valve, cooling
Tho-R2	Temperature sensor, heat exchanger, 2

Connection to board (PWB1)  
F2040-6

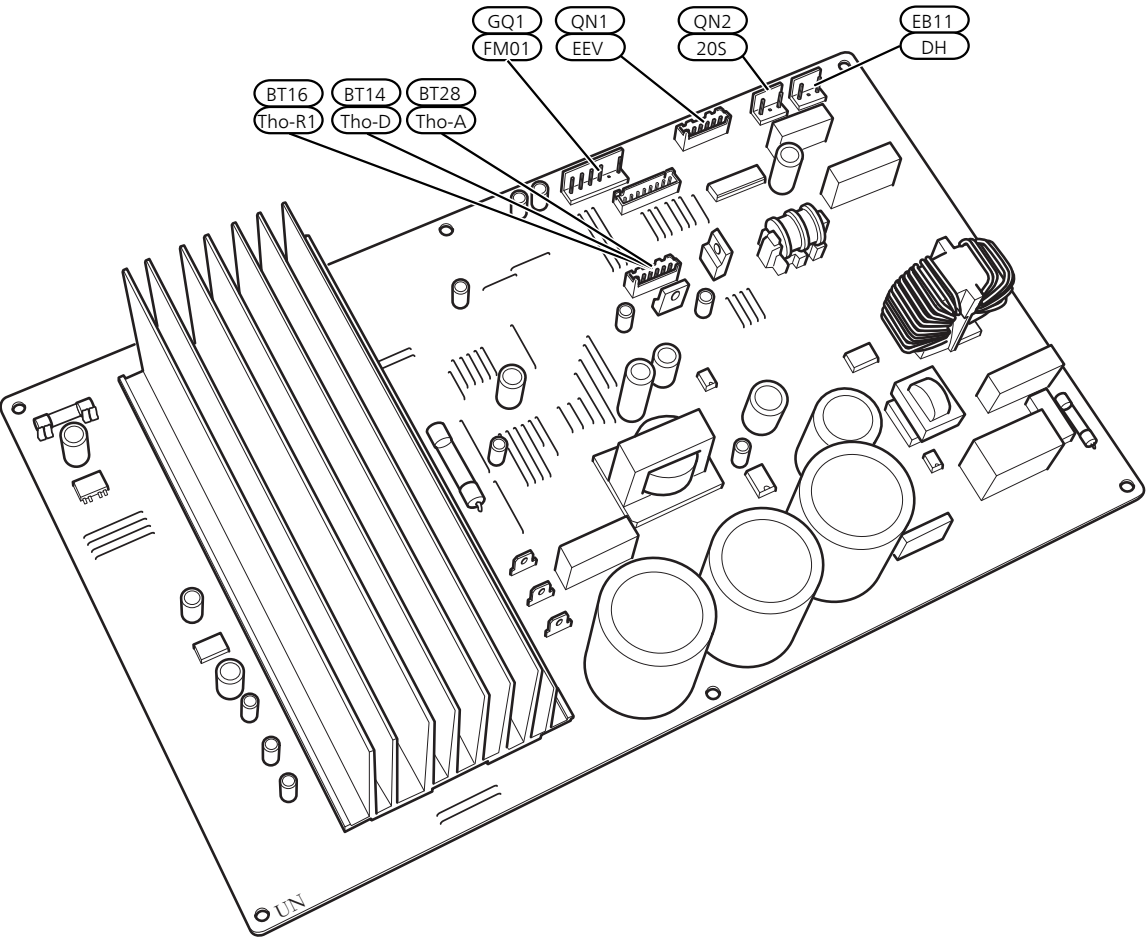


F2040-8

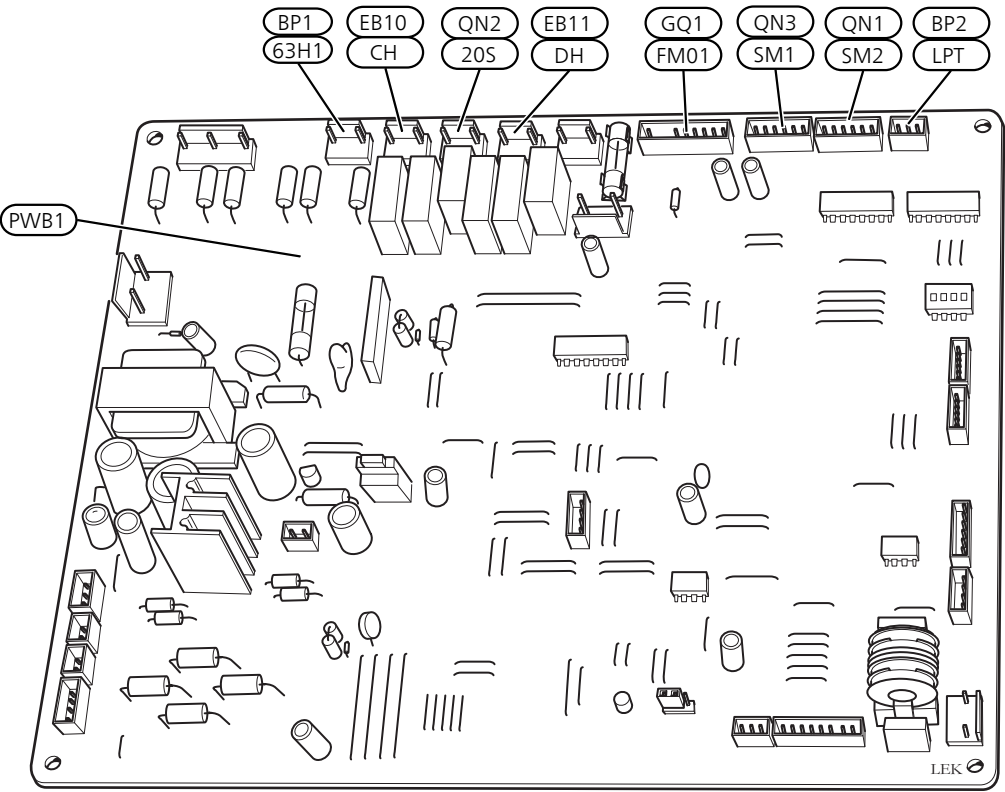

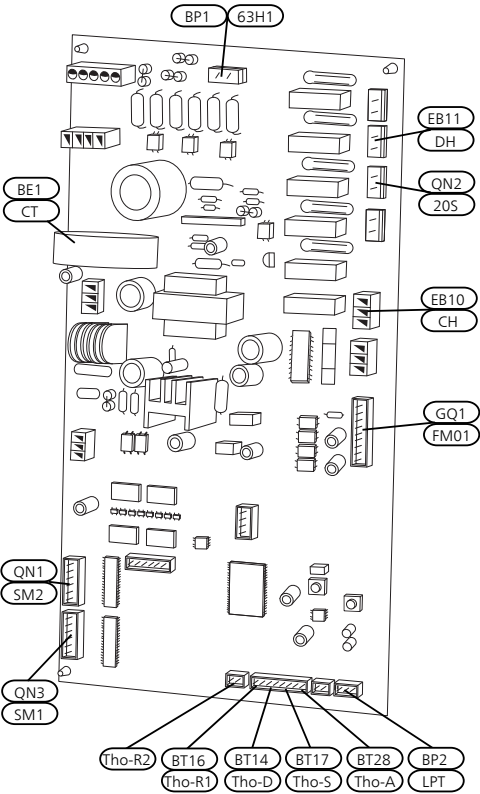


Connection to board (AA23)

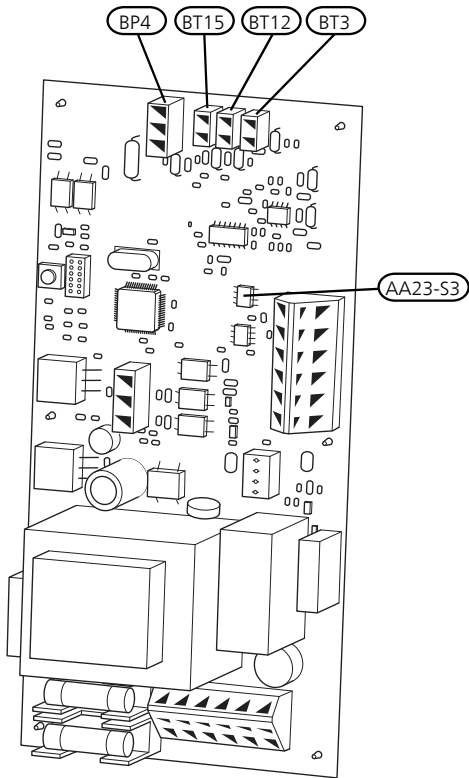





## Outdoor moduleF2040-6

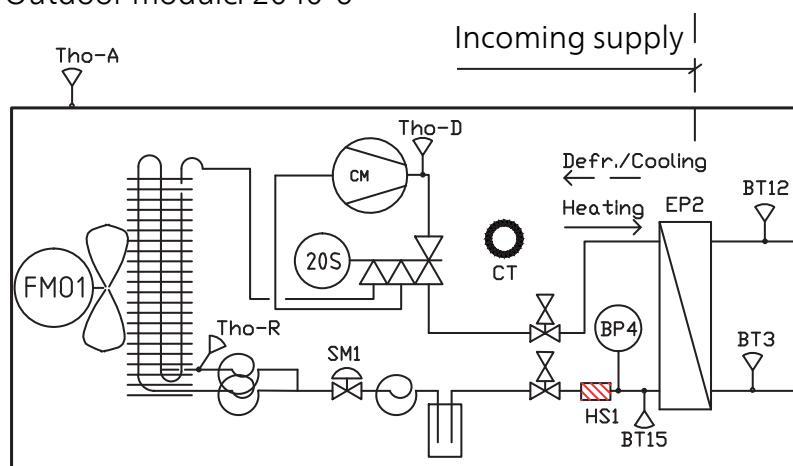


Outdoor moduleF2040-8, -12

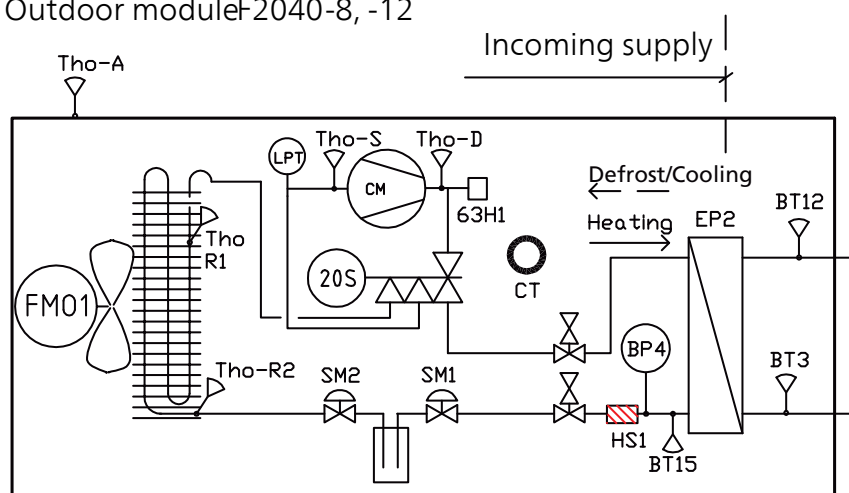


Outdoor moduleF2040-16

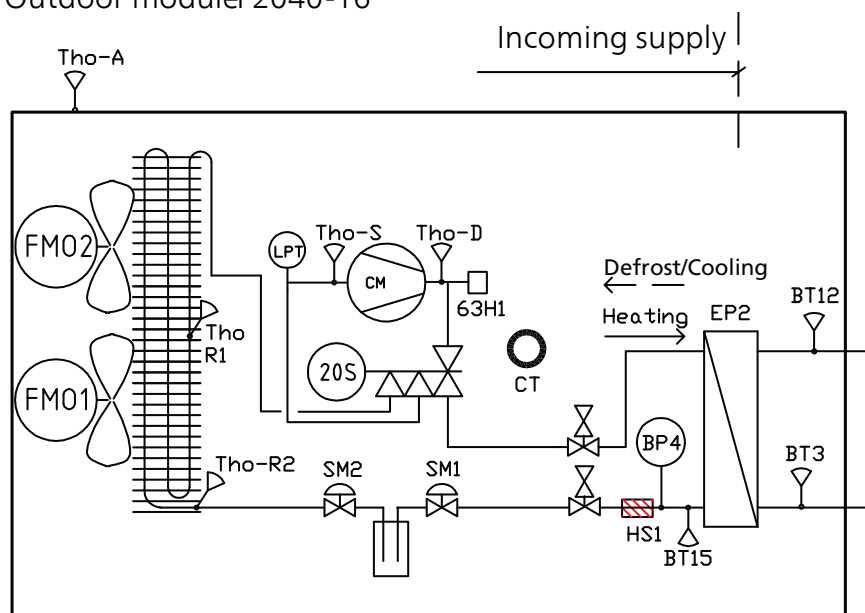


Data for temperature sensor in F2040-6  
Tho-D

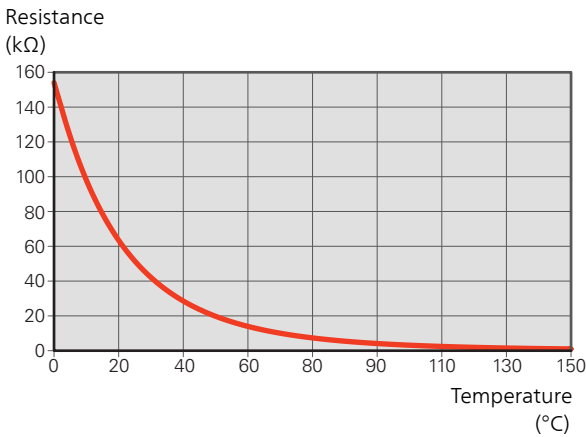


Data for temperature sensor in F2040-8, -12,  
-16  
Tho-D

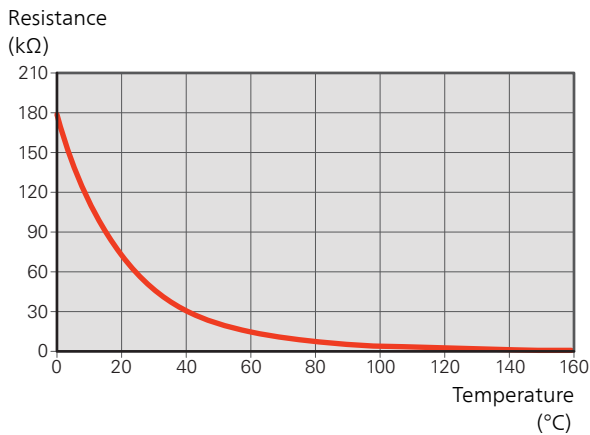


Tho-A, R

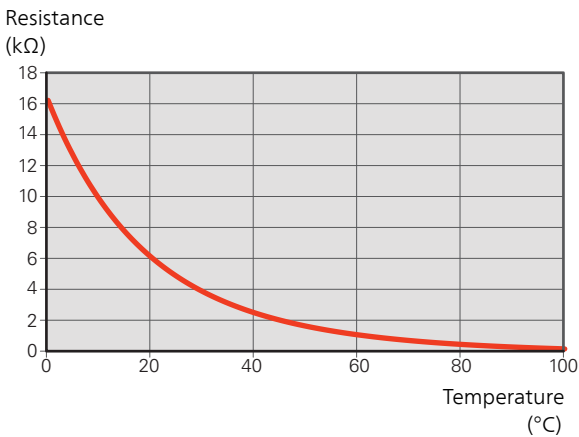

Tho-S, Tho-R1, Tho-R2

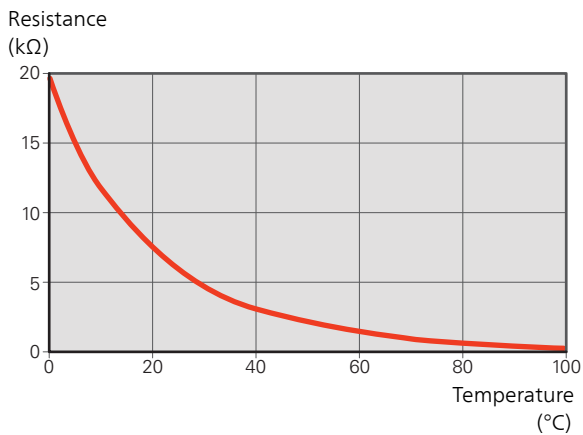

BT28 (Tho-A)

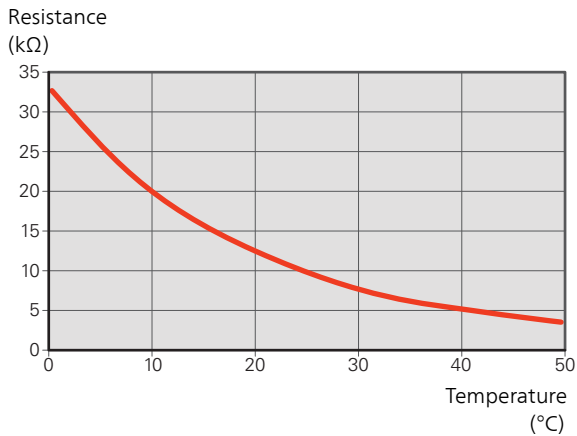

*Data for return line temperature sensor (BT3),  
condensor supply (BT12) and fluid pipe (BT15)*

<i>Temperature (°C)</i>	<i>Resistance (kOhm)</i>	<i>Voltage (VDC)</i>
-40	351.0	3.256
-35	251.6	3.240
-30	182.5	3.218
-25	133.8	3.189
-20	99.22	3.150
-15	74.32	3.105
-10	56.20	3.047
-5	42.89	2.976
0	33.02	2.889
5	25.61	2.789
10	20.02	2.673
15	15.77	2.541
20	12.51	2.399
25	10.00	2.245
30	8.045	2.083
35	6.514	1.916
40	5.306	1.752
45	4.348	1.587
50	3.583	1.426
55	2.968	1.278
60	2.467	1.136
65	2.068	1.007
70	1.739	0.891
75	1.469	0.785
80	1.246	0.691
85	1.061	0.607
90	0.908	0.533
95	0.779	0.469
100	0.672	0.414

# 10 Alarm list

Alarm	Alarm text on the display	Description	May be due to
3	Sensor fault BT3	Sensor fault, Sensor incoming water in F2040 (BT3).	<ul style="list-style-type: none"> <li>• Open circuit or short circuit on sensor input</li> <li>• Sensor does not work (see section "Disturbances in comfort")</li> <li>• Defective control board AA23 in F2040</li> </ul>
12	Sensor fault BT12	Sensor fault, Sensor outgoing water in F2040 (BT12).	<ul style="list-style-type: none"> <li>• Open circuit or short circuit on sensor input</li> <li>• Sensor does not work (see section "Disturbances in comfort")</li> <li>• Defective control board AA23 in F2040</li> </ul>
15	Sensor fault BT15	Sensor fault, Sensor fluid pipe in F2040 (BT15).	<ul style="list-style-type: none"> <li>• Open circuit or short circuit on sensor input</li> <li>• Sensor does not work (see section "Disturbances in comfort")</li> <li>• Defective control board AA23 in F2040</li> </ul>
162	High condenser out	Too high temperature out from the condenser. Self-resetting.	<ul style="list-style-type: none"> <li>• Low flow during heating operation</li> <li>• Too high set temperatures</li> </ul>
163	High condenser in	Too high temperature into the condenser. Self-resetting.	<ul style="list-style-type: none"> <li>• Temperature generated by another heat source</li> </ul>
183	Defrosting in progress	Not an alarm, but an operating status.	<ul style="list-style-type: none"> <li>• Set when the heat pump runs the defrosting procedure</li> </ul>
220	HP alarm	The high pressure switch (63H1) deployed 5 times within 60 minutes or for 60 minutes continuously.	<ul style="list-style-type: none"> <li>• Insufficient air circulation or blocked heat exchanger</li> <li>• Open circuit or short circuit on input for high pressure switch (63H1)</li> <li>• Defective high pressure switch</li> <li>• Expansion valve not correctly connected</li> <li>• Service valve closed</li> <li>• Defective control board in F2040</li> <li>• Low or no flow during heating operation</li> <li>• Defective circulation pump</li> <li>• Defective fuse, F(4A)</li> </ul>
221	LP alarm	Too low value on the low pressure sensor 3 times within 60 minutes.	<ul style="list-style-type: none"> <li>• Open circuit or short circuit on input for low pressure sensor</li> <li>• Defective low pressure sensor</li> <li>• Defective control board in F2040</li> <li>• Open circuit or short circuit on input for suction gas sensor (Tho-S)</li> <li>• Defective suction gas sensor (Tho-S)</li> </ul>

Alarm	Alarm text on the display	Description	May be due to
223	OU Com. error	Communication between the control board and the communication board is interrupted. There must be 22 volt direct current (DC) at the switch CNW2 on the control board (PWB1).	<ul style="list-style-type: none"> <li>Any circuit breakers for F2040 off</li> <li>Incorrect cable routing</li> </ul>
224	Fan alarm	Deviations in the fan speed in F2040.	<ul style="list-style-type: none"> <li>The fan cannot rotate freely</li> <li>Defective control board in F2040</li> <li>Defective fan motor</li> <li>Control board in F2040 dirty</li> <li>Fuse (F2) blown</li> </ul>
230	Continuously high hot gas	Temperature deviation on the hot gas sensor (Tho-D) twice within 60 minutes or for 60 minutes continuously.	<ul style="list-style-type: none"> <li>Sensor does not work (see section "Ambient temperature sensor")</li> <li>Insufficient air circulation or heat exchanger</li> <li>Blocked</li> <li>If the fault persists during cooling, there may be an insufficient amount of refrigerant.</li> <li>Defective control board in F2040</li> </ul>
254	Communication error	Communication fault with accessory board	<ul style="list-style-type: none"> <li>F2040 not powered</li> <li>Fault in the communication cable.</li> </ul>
261	High temperature in heat exchanger	Temperature deviation on the heat exchanger sensor (Tho-R1/R2) five times within 60 minutes or for 60 minutes continuously.	<ul style="list-style-type: none"> <li>Sensor does not work (see section "Disturbances in comfort")</li> <li>Insufficient air circulation or blocked heat exchanger</li> <li>Defective control board in F2040</li> <li>Too much refrigerant</li> </ul>
262	Power transistor too hot	When IPM (Intelligent power module) displays FO-signal (Fault Output) five times during a 60-minute period.	<ul style="list-style-type: none"> <li>Can occur when 15V power supply to the inverter PCB is unstable.</li> </ul>
263	Inverter error	Voltage from the inverter outside the parameters four times within 30 minutes.	<ul style="list-style-type: none"> <li>Incoming power supply interference</li> <li>Service valve closed</li> <li>Insufficient amount of refrigerant</li> <li>Compressor fault</li> <li>Defective circuit board for inverter in F2040</li> </ul>
264	Inverter error	Communication between circuit board for inverter and control board broken.	<ul style="list-style-type: none"> <li>Open circuit in connection between boards</li> <li>Defective circuit board for inverter in F2040</li> <li>Defective control board in F2040</li> </ul>
265	Inverter error	Continuous deviation on power transistor for 15 minutes.	<ul style="list-style-type: none"> <li>Defective fan motor</li> <li>Defective circuit board for inverter in F2040</li> </ul>
266	Insufficient refrigerant	Insufficient refrigerant is detected upon start-up in cooling mode.	<ul style="list-style-type: none"> <li>Service valve closed</li> <li>Loose connection sensor (BT15, BT3)</li> <li>Defective sensor (BT15, BT3)</li> <li>Too little refrigerant</li> </ul>
267	Inverter error	Failed start for compressor	<ul style="list-style-type: none"> <li>Defective circuit board for inverter in F2040</li> <li>Defective control board in F2040</li> <li>Compressor fault</li> </ul>
268	Inverter error	Overcurrent, Inverter A/F module	<ul style="list-style-type: none"> <li>Sudden power failure</li> </ul>

<i>Alarm</i>	<i>Alarm text on the display</i>	<i>Description</i>	<i>May be due to</i>
271	Cold outdoor air	Temperature of BT28 below the value that permits operation	<ul style="list-style-type: none"> <li>• Cold weather conditions</li> <li>• Sensor fault</li> </ul>
272	Hot outdoor air	Temperature of BT28 above the value that permits operation	<ul style="list-style-type: none"> <li>• Warm weather conditions</li> <li>• Sensor fault</li> </ul>
277	Sensor fault Tho-R	Sensor fault, heat exchanger in F2040(Tho-R).	<ul style="list-style-type: none"> <li>• Open circuit or short circuit on sensor input</li> <li>• Sensor does not work (see section "Disturbances in comfort")</li> <li>• Defective control board in F2040</li> </ul>
278	Sensor fault Tho-A	Sensor fault, outdoor temperature sensor in F2040 (Tho-A).	<ul style="list-style-type: none"> <li>• Open circuit or short circuit on sensor input</li> <li>• Sensor does not work (see section "Disturbances in comfort")</li> <li>• Defective control board in F2040</li> </ul>
279	Sensor fault Tho-D	Sensor fault, hot gas in F2040 (Tho-D).	<ul style="list-style-type: none"> <li>• Open circuit or short circuit on sensor input</li> <li>• Sensor does not work (see section "Disturbances in comfort")</li> <li>• Defective control board in F2040</li> </ul>
280	Sensor fault Tho-S	Sensor fault, suction gas in F2040 (Tho-S).	<ul style="list-style-type: none"> <li>• Open circuit or short circuit on sensor input</li> <li>• Sensor does not work (see section "Disturbances in comfort")</li> <li>• Defective control board in F2040</li> </ul>
281	Sensor fault LPT	Sensor fault, low pressure transmitter in F2040.	<ul style="list-style-type: none"> <li>• Open circuit or short circuit on sensor input</li> <li>• Sensor does not work (see section "Disturbances in comfort")</li> <li>• Defective control board in F2040</li> <li>• Fault in the refrigerant circuit</li> </ul>
294	Non-compatible air/water heat pump	Heat pump and indoor module do not work properly together due to technical parameters.	<ul style="list-style-type: none"> <li>• Outdoor module and indoor module are not compatible.</li> </ul>
404	Sensor fault BP4	Sensor fault, Sensor high pressure heating/low pressure cooling in F2040 (BP4).	<ul style="list-style-type: none"> <li>• Open circuit or short circuit on sensor input</li> <li>• Sensor does not work (see section "Disturbances in comfort")</li> <li>• Defective control board AA23 in F2040</li> </ul>

# 11 Accessories

## ACCESSORY CARD AXC 30

An accessory board for active cooling (4-pipe system), extra climate system, hot water comfort or if more than four charge pumps are to be connected to F2040. It can also be used for step controlled additional heat (e.g. external electric boiler), shunt controlled additional heat (e.g. wood/oil/gas/pellet boiler).

An accessory board is required if for example an HWC pump is to be connected to F2040 at the same time that the common alarm indication is activated.

Part no. 067 304

## CHARGE PUMP CPD 11

Charge pump for heat pump

*CPD 11-25/65*

Part no. 067 321

*CPD 11-25/75*

Part no. 067 320

## CONDENSATION WATER PIPE

Condensation water pipe, different lengths.

Earth circuit breaker 1-phase.

*KVR 10-10 F2040 / HBS05*

1 metres

Part no. 067 614

*KVR 10-30 F2040 / HBS05*

3 metres

Part no. 067 616

*KVR 10-60 F2040 / HBS05*

6 metres

Part no. 067 618

## HOT WATER CONTROL

*VST 05*

Reversing valve, Cu pipe Ø22 mm

Max. heat pump size 8 kW

Part no. 089 982

*VST 11*

Reversing valve, Cu pipe Ø28 mm

Max. recommended power, 17 kW

Part no. 089 152

## STAND AND BRACKETS

*Ground stand*

F2040-6, -8, -12, -16

Part no. 067 599

*Wall bracket*

F2040-6, -8, -12

Part no. 067 598

## WATER HEATER/ACCUMULATOR TANK

*HA-WH5*

Megacoil, 160 litre

Art. no G1110001

Megacoil, 200 litre

Art. no G1110002

Megacoil, 300 litre

Art. no G1110003

Megacoil, Solar 200 litre

Art. no G1110004


Megacoil, Solar 300 litre

Art. no G1110005

# 12 Technical data

## Dimensions and setting-out coordinates


F2040-6

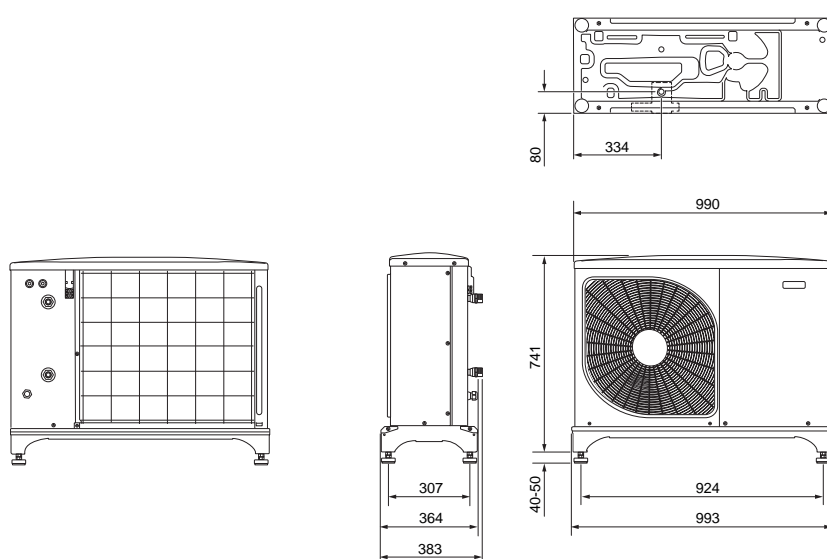


\* Accessory KVR 10 is required.




F2040-8

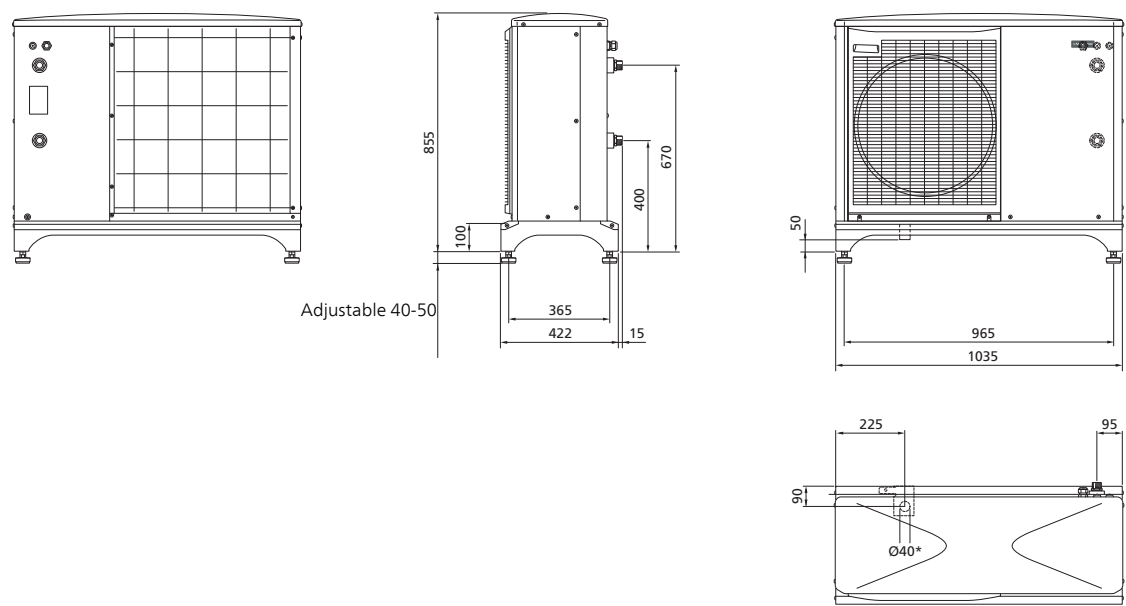


\* Accessory KVR 10 is required.

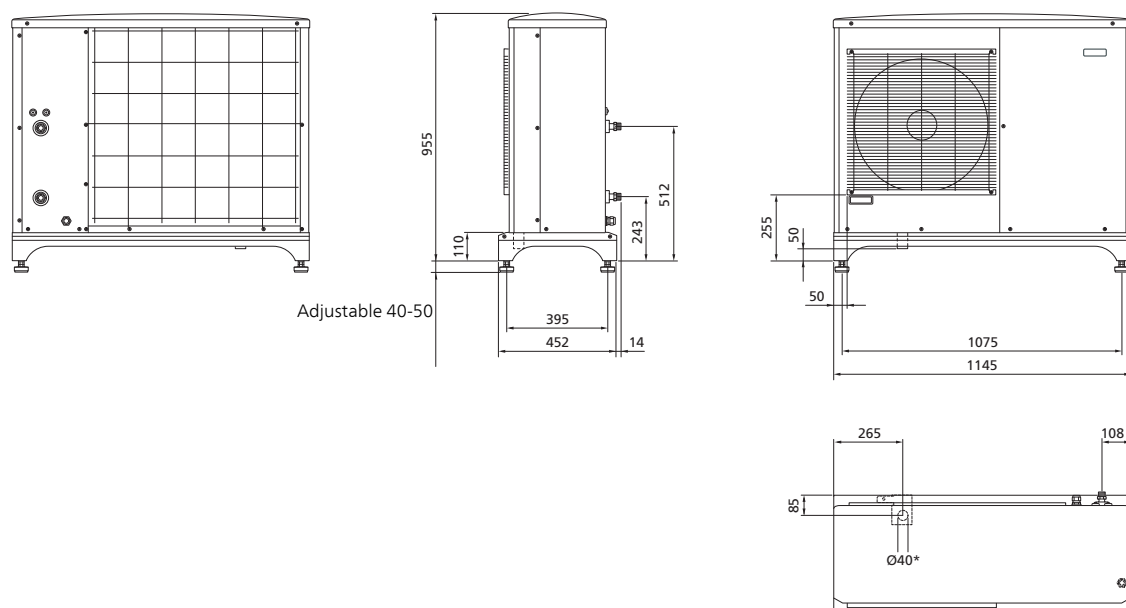

\* Accessory KVR 10 is required.

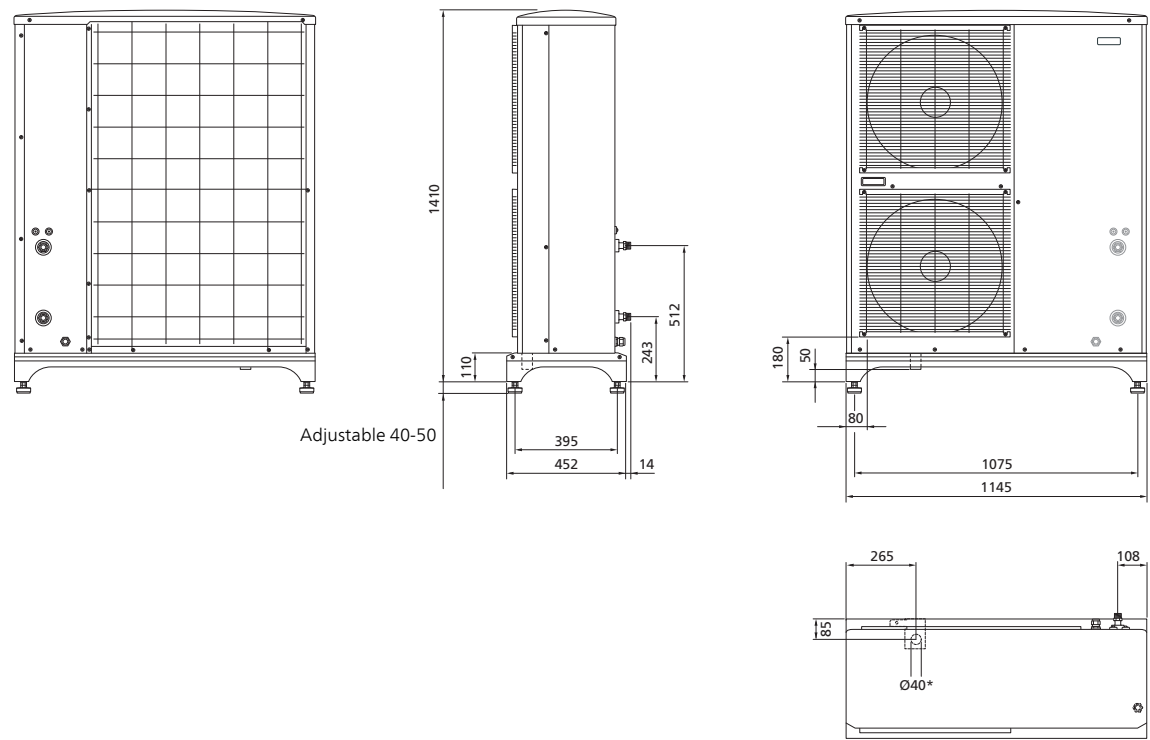


\* Accessory KVR 10 is required.

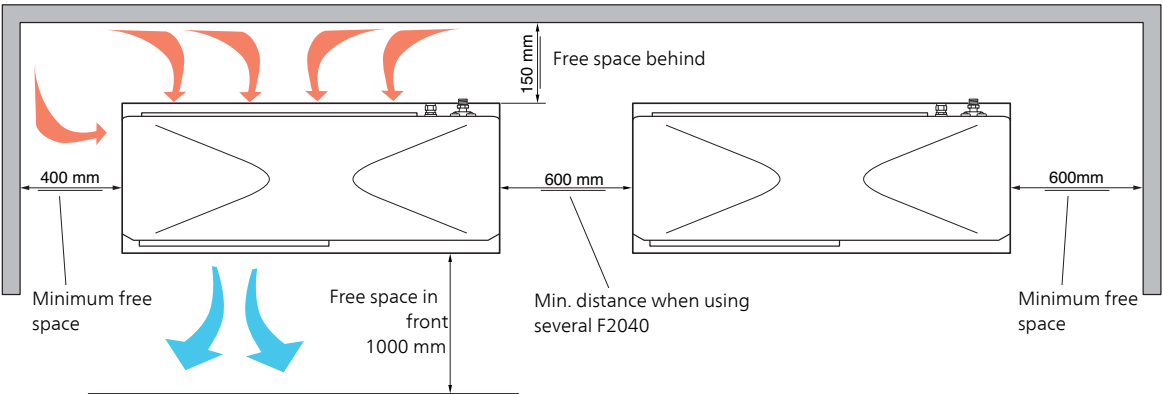

# Sound pressure levels

F2040 is usually placed next to a house wall, which gives a directed sound distribution that should be considered. Accordingly, you should always attempt when positioning to choose the side that faces the least sound sens-

itive neighbouring area.  
The sound pressure levels are further affected by walls, bricks, differences in ground level, etc and should therefore only be seen as guide values.  
F2040 adjusts the fan speed depending on the ambient temperature and evaporation temperature.

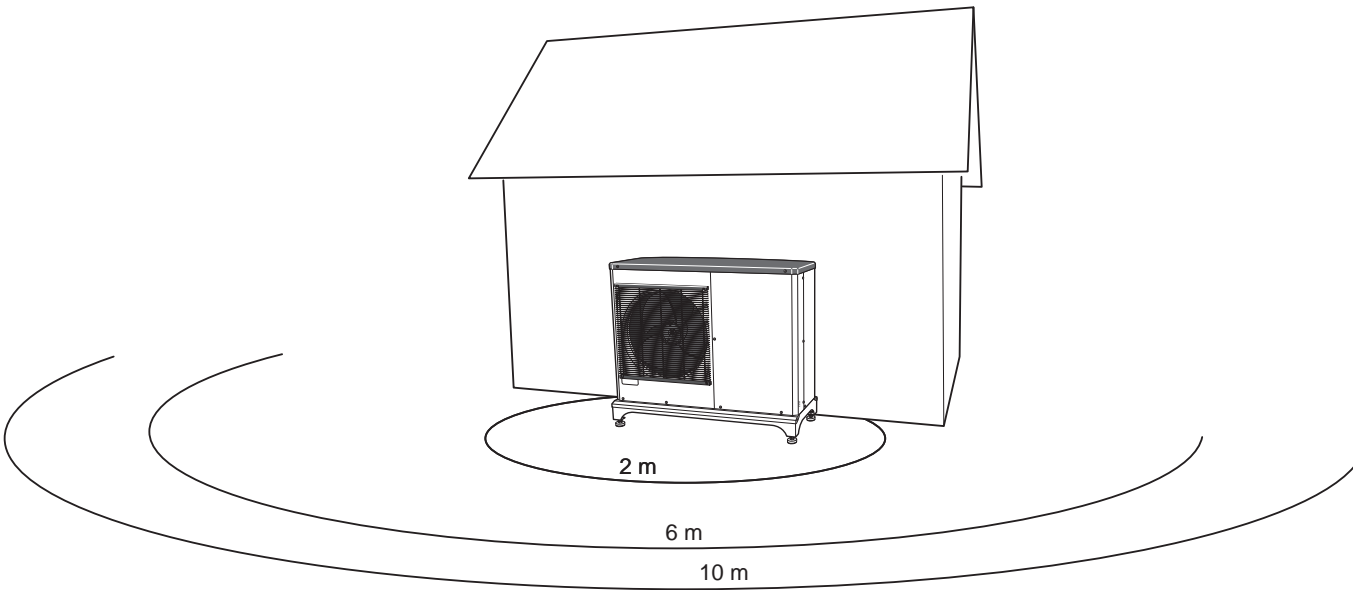

Air/water heat pump		F2040-6	F2040-8	F2040-12	F2040-16
Sound power level* According to EN12102 at 7/45 (nominal)	L <sub>W</sub> (A)	50	54	57	61
Sound pressure level at 2 m free standing.*	dB(A)	36	40	43	47
Sound pressure level at 6 m free standing.*	dB(A)	26.5	30.5	33.5	37.5
Sound pressure level at 10 m free standing.*	dB(A)	22	26	29	33

\* Free space.

# Technical specifications



Air/water heat pump		F2040-6	F2040-8	F2040-12	F2040-16
Output data according to EN 14511 $\Delta T5K$	Outdoor temp./ Supply temp.				
Heating	-7/35 °C (floor)	2.57/0.56/4.60	2.68/0.41/6.60	2.75/0.31/9.00	2.80/0.23/12.10
Capacity / Power input / COP (kW/kW/-) at nominal flow	7/35 °C (floor)	2.67/0.50/5.32	3.86/0.83/4.65	5.21/1.09/4.78	7.03/1.45/4.85
	2/35 °C (floor)	2.32/0.55/4.20	5.11/1.36/3.76	6.91/1.79/3.86	9.33/2.38/3.92
	7/45 °C	2.28/0.63/3.62	3.70/1.00/3.70	5.00/1.31/3.82	6.75/1.74/3.88
	2/45 °C	1.93/0.67/2.88	5.03/1.70/2.96	6.80/2.24/3.04	9.18/2.98/3.08
Cooling	27/7 °C	5.87/1.65/3.56	7.52/2.37/3.17	9.87/3.16/3.13	13.30/3.99/3.33
Capacity / Power input / EER (kW/kW/-) at maximum flow	27/18 °C	7.98/1.77/4.52	11.20/3.20/3.50	11.70/3.32/3.52	17.70/4.52/3.91
	35/7 °C	4.86/1.86/2.61	7.10/2.65/2.68	9.45/3.41/2.77	13.04/4.53/2.88
	35/18 °C	7.03/2.03/3.45	9.19/2.98/3.08	11.20/3.58/3.12	15.70/5.04/3.12
Electrical data					
Rated voltage		230V ~ 50Hz, 230V 2 ~ 50Hz			
Max operating current, heat pump	A <sub>rms</sub>	15	16	23	25
Max operating current, compressor	A <sub>rms</sub>	14	15	22	24
Starting current	A <sub>rms</sub>	5			
Nominal output, fan	W	50	86	86	2 x 86
Fuse <sup>1)</sup>	A <sub>rms</sub>	16	16	25	25
Enclosure class		IP 24			
Refrigerant circuit					
Type of refrigerant		R410A			
GWP refrigerant		2,088			
Type of compressor		Twin Rotary			
Compressor oil		M-MA68			
Volume	kg	1.5	2.55	2.9	4.0
CO <sub>2</sub> equivalent	t	3.13	5.32	6.06	8.35
Cut-out value pressostat HP	MPa	-	4.15 (41.5 bar)		
Cut-out value HP		4.15 (41.5 bar)	-		
Cut-out value pressostat LP	MPa	-	0.079 (0.79 bar)		
Brine					
Airflow	m³/h	2,530	3,000	4,380	6,000
Min. / Max. air temp.	°C	-20 / 43			
Defrosting system		Reverse cycle			
Heating medium circuit					
Min/Max system pressure heating medium	MPa	0.05/0.25 (0.5/4.5bar)			
Min volume, climate system, heating/cooling	l	20	50	80	150
Min volume, climate system, under floor cooling	l	50	80	100	150
Max flow, climate system	l/s	0.29	0.38	0.57	0.79
Min flow, climate system, at 100% circulation pump speed (defrosting flow)	l/s	0.19	0.19	0.29	0.39
Min flow, heating	l/s	0.09	0.12	0.15	0.25
Min flow, cooling	l/s	0.11	0.15	0.20	0.32
Min. / Max. HM temp continuous operation	°C	25 / 58			
Connection heating medium ext thread		G1"			
Dimensions and weight					
Width	mm	993	1035	1145	1145
Depth	mm	364	422	452	452
Height with stand	mm	791 (+50/-0)	895 (+50/-0)	995 (+50/-0)	1450 (+50/-0)
Weight (excl. packaging)	kg	66	90	105	135
Miscellaneous					
Part No.		064 206	064 109	064 092	064 108

<sup>1)</sup>Specified output is limited with lower fusing.

## SCOP & P<sub>DESIGNH</sub>

SCOP & P <sub>designh</sub> F2040 according to EN 14825								
F2040	6		8		12		16	
	P <sub>designh</sub>	SCOP	P <sub>designh</sub>	SCOP	P <sub>designh</sub>	SCOP	P <sub>designh</sub>	SCOP
SCOP 35 Average climate	4.8	4.8	8.2	4.38	11.5	4.43	14,5	4.48
SCOP 55 Average climate	5,3	3.46	7.0	3.25	10	3,38	14	3.43
SCOP 35 Cold climate	4,0	3,65	9	3.55	11.5	3.63	15	3.68
SCOP 55 Cold climate	5,6	2.97	10	2.78	13	2.85	16	2,9
SCOP 35 Warm climate	4,2	6.45	8	5,7	12	5.8	15	5.95
SCOP 55 Warm climate	4.76	4.58	8	4.58	12	4.7	15	4.8

## ENERGY RATING, AVERAGE CLIMATE

Model		F2040-6	F2040-8	F2040-12	F2040-16
Control module model		SMO	SMO	SMO	SMO
Temperature application	°C	35 / 55	35 / 55	35 / 55	35 / 55
The product's room heating efficiency class <sup>1)</sup>		A++ / A++	A++ / A++	A++ / A++	A++ / A++
Space heating efficiency class of the system <sup>2)</sup>		A+++ / A++	A+++ / A++	A+++ / A++	A+++ / A++

<sup>1)</sup>Scale for the product's room heating efficiency class A++ to G.


<sup>2)</sup>Scale for the system's room heating efficiency class A+++ to G.

The reported efficiency of the package also takes the controller into account. If an external supplementary boiler or solar heating is added to the package, the overall efficiency of the package should be recalculated.

# Working area

## Compressor operation – heating


Water temperature  
(°C)

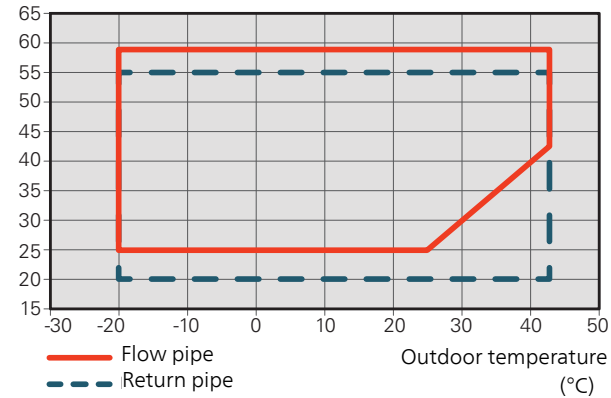

During shorter time it is allowed to have lower working temperatures on the water side, e.g. during start up.

## Compressor operation – cooling


Water temperature  
(°C)

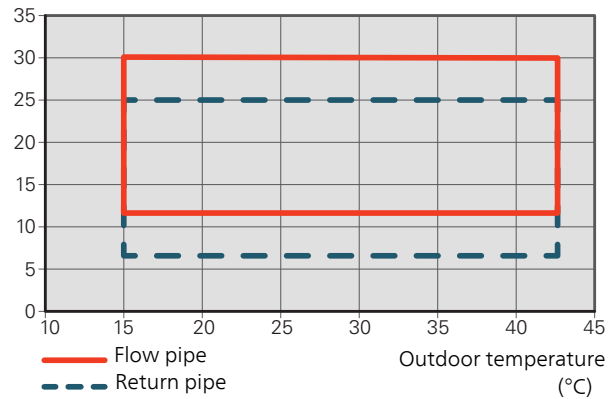


# Capacity and COP

Capacity and COP at different supply temperatures.  
Maximum capacity including defrosting.


Max. capacity F2040-6

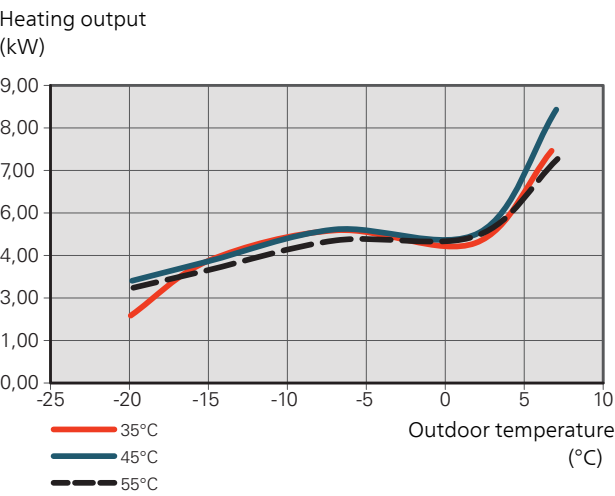


COP F2040-6

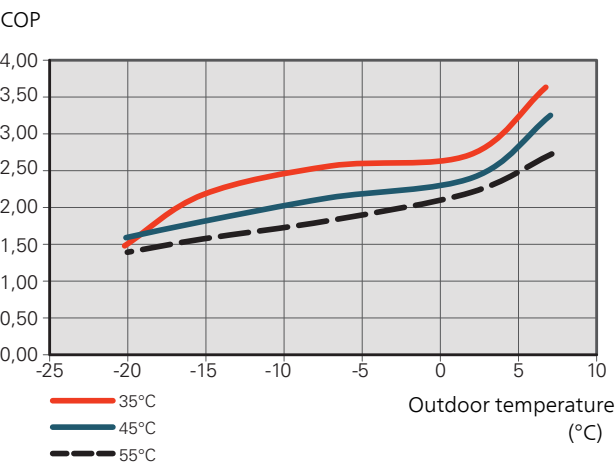

Max specified output F2040-8

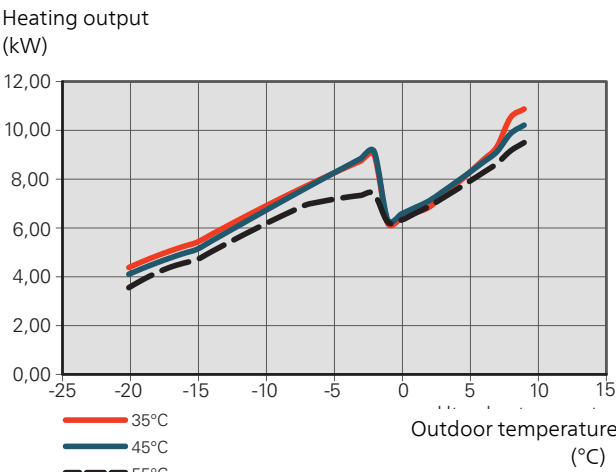


COP F2040-8

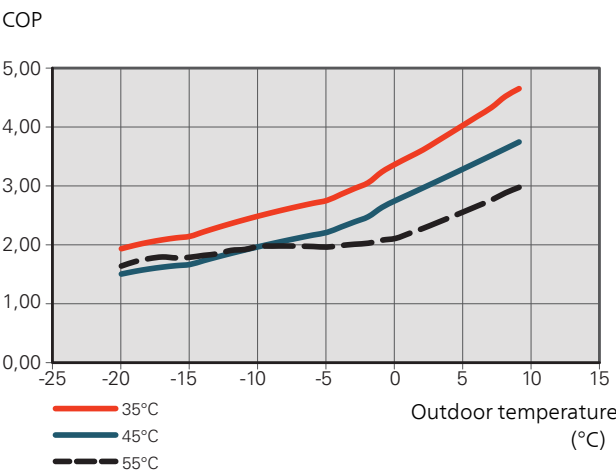




### Max specified output F2040-12

Heating output  
(kW)

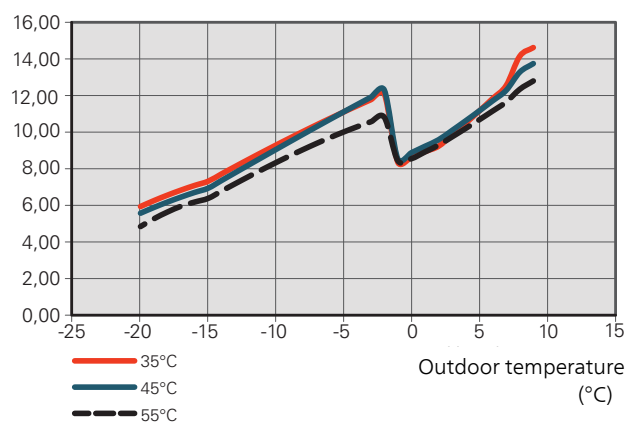


### Max specified output F2040-16

Heating output  
(kW)

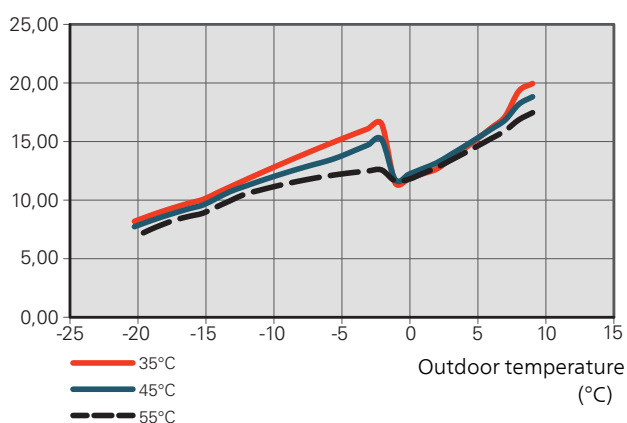


### COP F2040-12

COP

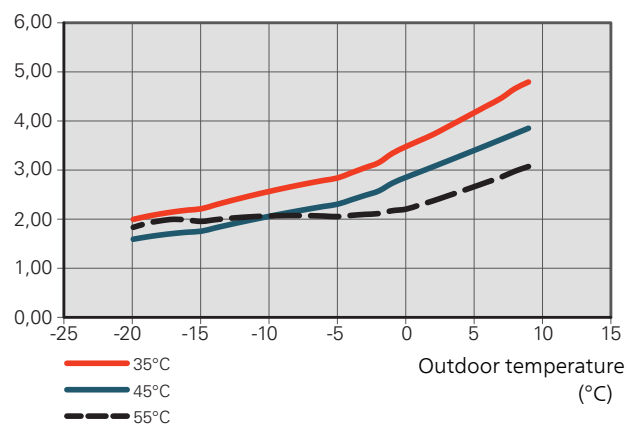

### COP F2040-16


COP

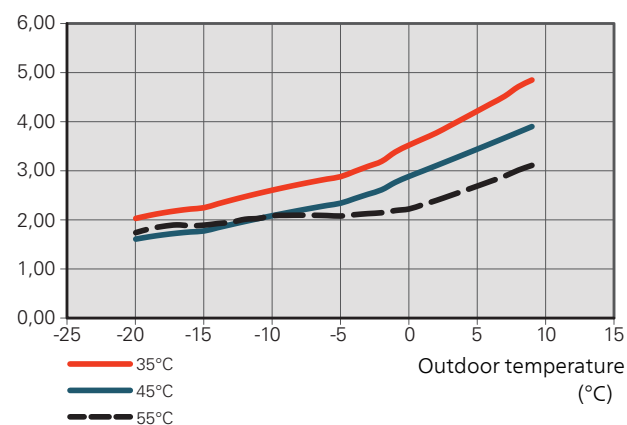

# Output with lower fuse rating than recommended


Supplied power F2040-12 , fuse rating 16A

Heating output  
(kW)

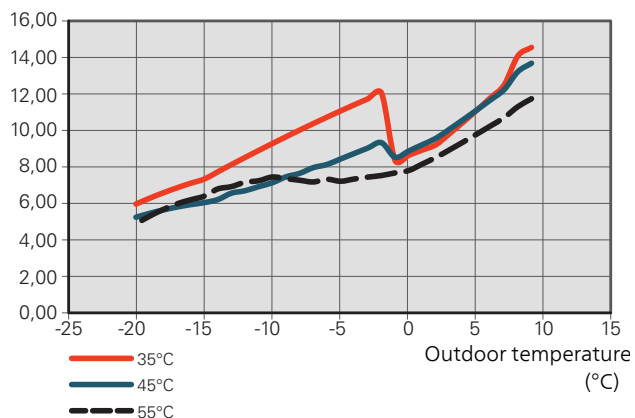


Supplied power F2040-12 , fuse rating 20A

Heating output  
(kW)

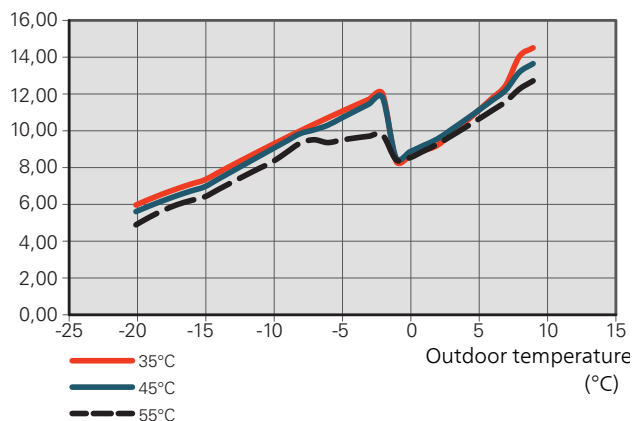

Supplied power F2040-16 , fuse rating 20A

Heating output  
(kW)

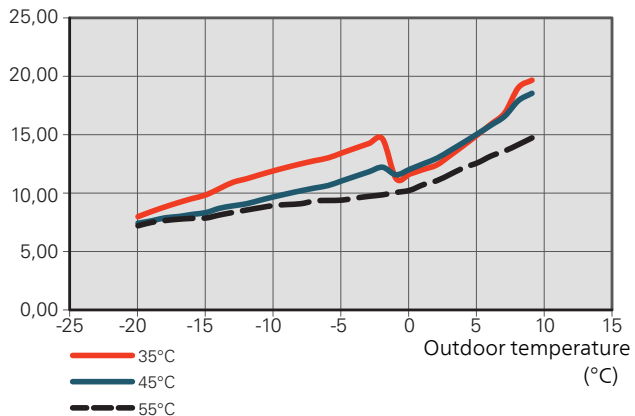

# Energy labelling

## INFORMATION SHEET

Supplier		NIBE			
Model		F2040-6	F2040-8	F2040-12	F2040-16
Temperature application	°C	35 / 55	35 / 55	35 / 55	35 / 55
Seasonal space heating energy efficiency class, average climate		A++ / A++	A++ / A++	A++ / A++	A++ / A++
Rated heat output ( $P_{\text{designh}}$ ), average climate	kW	5 / 5	8 / 7	12 / 10	15 / 14
Annual energy consumption space heating, average climate	kWh	2,089 / 3,248	3,882 / 4,447	5,382 / 6,136	6,702 / 8,431
Seasonal space heating energy efficiency, average climate	%	188 / 131	172 / 127	174 / 132	176 / 134
Sound power level $L_{\text{WA}}$ indoors	dB	35	35	35	35
Rated heat output ( $P_{\text{designh}}$ ), cold climate	kW	4 / 6	9 / 10	12 / 13	15 / 16
Rated heat output ( $P_{\text{designh}}$ ), warm climate	kW	4 / 5	8 / 8	12 / 12	15 / 15
Annual energy consumption space heating, cold climate	kWh	2,694 / 4,610	6,264 / 8,844	7,798 / 11,197	10,040 / 13,629
Annual energy consumption space heating, warm climate	kWh	872 / 1,398	1,879 / 2,333	2,759 / 3,419	3,370 / 4,183
Seasonal space heating energy efficiency, cold climate	%	143 / 116	139 / 108	142 / 111	144 / 113
Seasonal space heating energy efficiency, warm climate	%	252 / 179	225 / 180	229 / 185	235 / 189
Sound power level $L_{\text{WA}}$ outdoors	dB	50	54	57	61

## DATA FOR ENERGY EFFICIENCY OF THE PACKAGE

Model		F2040-6	F2040-8	F2040-12	F2040-16
Control module model		SMO	SMO	SMO	SMO
Temperature application	°C	35 / 55	35 / 55	35 / 55	35 / 55
Controller, class		VI			
Controller, contribution to efficiency	%	4.0			
Seasonal space heating energy efficiency of the package, average climate	%	192 / 135	176 / 131	178 / 136	180 / 138
Seasonal space heating energy efficiency class of the package, average climate		A+++ / A++	A+++ / A++	A+++ / A++	A+++ / A++
Seasonal space heating energy efficiency of the package, cold climate	%	147 / 120	143 / 112	146 / 115	148 / 117
Seasonal space heating energy efficiency of the package, warm climate	%	256 / 183	229 / 184	233 / 189	239 / 193

The reported efficiency of the package also takes the controller into account. If an external supplementary boiler or solar heating is added to the package, the overall efficiency of the package should be recalculated.

## TECHNICAL DOCUMENTATION

Model		F2040-6							
Type of heat pump		<input checked="" type="checkbox"/> Air-water <input type="checkbox"/> Exhaust-water <input type="checkbox"/> Brine-water <input type="checkbox"/> Water-water							
Low-temperature heat pump		<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No							
Integrated immersion heater for additional heat		<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No							
Heat pump combination heater		<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No							
Climate		<input checked="" type="checkbox"/> Average <input type="checkbox"/> Cold <input type="checkbox"/> Warm							
Temperature application		<input checked="" type="checkbox"/> Average (55 °C) <input type="checkbox"/> Low (35 °C)							
Applied standards		EN14825 / EN14511 / EN12102							
Rated heat output		Prated	5.3	kW	Seasonal space heating energy efficiency		$\eta_s$	131	%
Declared capacity for space heating at part load and at outdoor temperature $T_j$					Declared coefficient of performance for space heating at part load and at outdoor temperature $T_j$				
$T_j = -7\text{ °C}$	P <sub>dh</sub>	4.7	kW	$T_j = -7\text{ °C}$	COP <sub>d</sub>	1.88	-		
$T_j = +2\text{ °C}$	P <sub>dh</sub>	2.8	kW	$T_j = +2\text{ °C}$	COP <sub>d</sub>	3.26	-		
$T_j = +7\text{ °C}$	P <sub>dh</sub>	1.8	kW	$T_j = +7\text{ °C}$	COP <sub>d</sub>	4.72	-		
$T_j = +12\text{ °C}$	P <sub>dh</sub>	2.7	kW	$T_j = +12\text{ °C}$	COP <sub>d</sub>	6.47	-		
$T_j = \text{biv}$	P <sub>dh</sub>	4.7	kW	$T_j = \text{biv}$	COP <sub>d</sub>	1.88	-		
$T_j = \text{TOL}$	P <sub>dh</sub>	4.1	kW	$T_j = \text{TOL}$	COP <sub>d</sub>	1.77	-		
$T_j = -15\text{ °C}$ (if TOL < -20 °C)	P <sub>dh</sub>		kW	$T_j = -15\text{ °C}$ (if TOL < -20 °C)	COP <sub>d</sub>		-		
Bivalent temperature		T <sub>biv</sub>	-7	°C	Min. outdoor air temperature		TOL	-10	°C
Cycling interval capacity		P <sub>cyc</sub>		kW	Cycling interval efficiency		COP <sub>cyc</sub>		-
Degradation coefficient		C <sub>dh</sub>	0.99	-	Max supply temperature		WTOL	58	°C
Power consumption in modes other than active mode					Additional heat				
Off mode	P <sub>OFF</sub>	0.007	kW	Rated heat output		P <sub>sup</sub>	1.2	kW	
Thermostat-off mode	P <sub>TO</sub>	0.012	kW						
Standby mode	P <sub>SB</sub>	0.012	kW	Type of energy input		Electric			
Crankcase heater mode	P <sub>CK</sub>	0	kW						
Other items									
Capacity control	Variable			Rated airflow (air-water)			2,526	m³/h	
Sound power level, indoors/outdoors	L <sub>WA</sub>	35 / 50	dB	Nominal heating medium flow				m³/h	
Annual energy consumption	Q <sub>HE</sub>	3,248	kWh	Brine flow brine-water or water-water heat pumps				m³/h	
Contact information	NIBE Energy Systems – Box 14 – Hannabadsvägen 5 – 285 21 Markaryd – Sweden								

Model		F2040-8							
Type of heat pump		<input checked="" type="checkbox"/> Air-water <input type="checkbox"/> Exhaust-water <input type="checkbox"/> Brine-water <input type="checkbox"/> Water-water							
Low-temperature heat pump		<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No							
Integrated immersion heater for additional heat		<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No							
Heat pump combination heater		<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No							
Climate		<input checked="" type="checkbox"/> Average <input type="checkbox"/> Cold <input type="checkbox"/> Warm							
Temperature application		<input checked="" type="checkbox"/> Average (55 °C) <input type="checkbox"/> Low (35 °C)							
Applied standards		EN14511 / EN14825 / EN12102							
Rated heat output		Prated	7	kW	Seasonal space heating energy efficiency		ηs	127	%
Declared capacity for space heating at part load and at outdoor temperature Tj					Declared coefficient of performance for space heating at part load and at outdoor temperature Tj				
Tj = -7 °C		Pdh	6.3	kW	Tj = -7 °C		COPd	1.94	-
Tj = +2 °C		Pdh	3.9	kW	Tj = +2 °C		COPd	3.11	-
Tj = +7 °C		Pdh	2.6	kW	Tj = +7 °C		COPd	4.42	-
Tj = +12 °C		Pdh	3.7	kW	Tj = +12 °C		COPd	5.93	-
Tj = biv		Pdh	6.6	kW	Tj = biv		COPd	1.83	-
Tj = TOL		Pdh	5.9	kW	Tj = TOL		COPd	1.86	-
Tj = -15 °C (if TOL < -20 °C)		Pdh		kW	Tj = -15 °C (if TOL < -20 °C)		COPd		-
Bivalent temperature		Tbiv	-9	°C	Min. outdoor air temperature		TOL	-10	°C
Cycling interval capacity		Pcych		kW	Cycling interval efficiency		COPcyc		-
Degradation coefficient		Cdh	0.97	-	Max supply temperature		WTOL	58	°C
Power consumption in modes other than active mode					Additional heat				
Off mode		P <sub>OFF</sub>	0.0027	kW	Rated heat output		Psup	1.1	kW
Thermostat-off mode		P <sub>TO</sub>	0.01	kW					
Standby mode		P <sub>SB</sub>	0.015	kW	Type of energy input		Electric		
Crankcase heater mode		P <sub>CK</sub>	0.03	kW					
Other items									
Capacity control		Variable			Rated airflow (air-water)			3,000	m³/h
Sound power level, indoors/outdoors		L <sub>WA</sub>	35 / 54	dB	Nominal heating medium flow			0.6	m³/h
Annual energy consumption		Q <sub>HE</sub>	4,447	kWh	Brine flow brine-water or water-water heat pumps				m³/h
Contact information		NIBE Energy Systems – Box 14 – Hannabadvägen 5 – 285 21 Markaryd – Sweden							

Model		F2040-12							
Type of heat pump		<input checked="" type="checkbox"/> Air-water <input type="checkbox"/> Exhaust-water <input type="checkbox"/> Brine-water <input type="checkbox"/> Water-water							
Low-temperature heat pump		<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No							
Integrated immersion heater for additional heat		<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No							
Heat pump combination heater		<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No							
Climate		<input checked="" type="checkbox"/> Average <input type="checkbox"/> Cold <input type="checkbox"/> Warm							
Temperature application		<input checked="" type="checkbox"/> Average (55 °C) <input type="checkbox"/> Low (35 °C)							
Applied standards		EN14825 / EN14511 / EN12102							
Rated heat output		Prated	10	kW	Seasonal space heating energy efficiency		$\eta_s$	132	%
Declared capacity for space heating at part load and at outdoor temperature $T_j$					Declared coefficient of performance for space heating at part load and at outdoor temperature $T_j$				
$T_j = -7\text{ °C}$	Pdh	8.9	kW	$T_j = -7\text{ °C}$	COPd	1.99	-		
$T_j = +2\text{ °C}$	Pdh	5.5	kW	$T_j = +2\text{ °C}$	COPd	3.22	-		
$T_j = +7\text{ °C}$	Pdh	3.5	kW	$T_j = +7\text{ °C}$	COPd	4.61	-		
$T_j = +12\text{ °C}$	Pdh	5.0	kW	$T_j = +12\text{ °C}$	COPd	6.25	-		
$T_j = \text{biv}$	Pdh	9.2	kW	$T_j = \text{biv}$	COPd	1.90	-		
$T_j = \text{TOL}$	Pdh	8.1	kW	$T_j = \text{TOL}$	COPd	1.92	-		
$T_j = -15\text{ °C}$ (if TOL < -20 °C)	Pdh		kW	$T_j = -15\text{ °C}$ (if TOL < -20 °C)	COPd		-		
Bivalent temperature		$T_{\text{biv}}$	-8	°C	Min. outdoor air temperature		TOL	-10	°C
Cycling interval capacity		P <sub>psych</sub>		kW	Cycling interval efficiency		COP <sub>psych</sub>		-
Degradation coefficient		Cdh	0.98	-	Max supply temperature		WTOL	58	°C
Power consumption in modes other than active mode					Additional heat				
Off mode	P <sub>OFF</sub>	0.002	kW	Rated heat output		P <sub>sup</sub>	1.9	kW	
Thermostat-off mode	P <sub>TO</sub>	0.014	kW						
Standby mode	P <sub>SB</sub>	0.015	kW	Type of energy input		Electric			
Crankcase heater mode	P <sub>CK</sub>	0.035	kW						
Other items									
Capacity control	Variable			Rated airflow (air-water)			4,380	m³/h	
Sound power level, indoors/outdoors	L <sub>WA</sub>	35 / 57	dB	Nominal heating medium flow			0.86	m³/h	
Annual energy consumption	Q <sub>HE</sub>	6,136	kWh	Brine flow brine-water or water-water heat pumps				m³/h	
Contact information	NIBE Energy Systems – Box 14 – Hannabadvägen 5 – 285 21 Markaryd – Sweden								


Model		F2040-16							
Type of heat pump		<input checked="" type="checkbox"/> Air-water <input type="checkbox"/> Exhaust-water <input type="checkbox"/> Brine-water <input type="checkbox"/> Water-water							
Low-temperature heat pump		<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No							
Integrated immersion heater for additional heat		<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No							
Heat pump combination heater		<input type="checkbox"/> Yes <input checked="" type="checkbox"/> No							
Climate		<input checked="" type="checkbox"/> Average <input type="checkbox"/> Cold <input type="checkbox"/> Warm							
Temperature application		<input checked="" type="checkbox"/> Average (55 °C) <input type="checkbox"/> Low (35 °C)							
Applied standards		EN14825 / EN14511 / EN12102							
Rated heat output		Prated	14	kW	Seasonal space heating energy efficiency		$\eta_s$	134	%
Declared capacity for space heating at part load and at outdoor temperature $T_j$					Declared coefficient of performance for space heating at part load and at outdoor temperature $T_j$				
$T_j = -7\text{ °C}$	Pdh	12.5	kW	$T_j = -7\text{ °C}$	COPd	2.01	-		
$T_j = +2\text{ °C}$	Pdh	7.6	kW	$T_j = +2\text{ °C}$	COPd	3.29	-		
$T_j = +7\text{ °C}$	Pdh	4.9	kW	$T_j = +7\text{ °C}$	COPd	4.68	-		
$T_j = +12\text{ °C}$	Pdh	6.8	kW	$T_j = +12\text{ °C}$	COPd	6.51	-		
$T_j = \text{biv}$	Pdh	12.7	kW	$T_j = \text{biv}$	COPd	1.95	-		
$T_j = \text{TOL}$	Pdh	11.0	kW	$T_j = \text{TOL}$	COPd	1.95	-		
$T_j = -15\text{ °C}$ (if TOL < -20 °C)	Pdh		kW	$T_j = -15\text{ °C}$ (if TOL < -20 °C)	COPd		-		
Bivalent temperature		$T_{\text{biv}}$	-8	°C	Min. outdoor air temperature		TOL	-10	°C
Cycling interval capacity		P <sub>psych</sub>		kW	Cycling interval efficiency		COP <sub>psych</sub>		-
Degradation coefficient		Cdh	0.98	-	Max supply temperature		WTOL	58	°C
Power consumption in modes other than active mode					Additional heat				
Off mode	P <sub>OFF</sub>	0.002	kW	Rated heat output		P <sub>sup</sub>	3.0	kW	
Thermostat-off mode	P <sub>TO</sub>	0.016	kW						
Standby mode	P <sub>SB</sub>	0.015	kW	Type of energy input		Electric			
Crankcase heater mode	P <sub>CK</sub>	0.035	kW						
Other items									
Capacity control	Variable			Rated airflow (air-water)			6,000	m³/h	
Sound power level, indoors/outdoors	L <sub>WA</sub>	35 / 61	dB	Nominal heating medium flow			1.21	m³/h	
Annual energy consumption	Q <sub>HE</sub>	8,431	kWh	Brine flow brine-water or water-water heat pumps				m³/h	
Contact information	NIBE Energy Systems – Box 14 – Hannabadvägen 5 – 285 21 Markaryd – Sweden								


## F2040-6










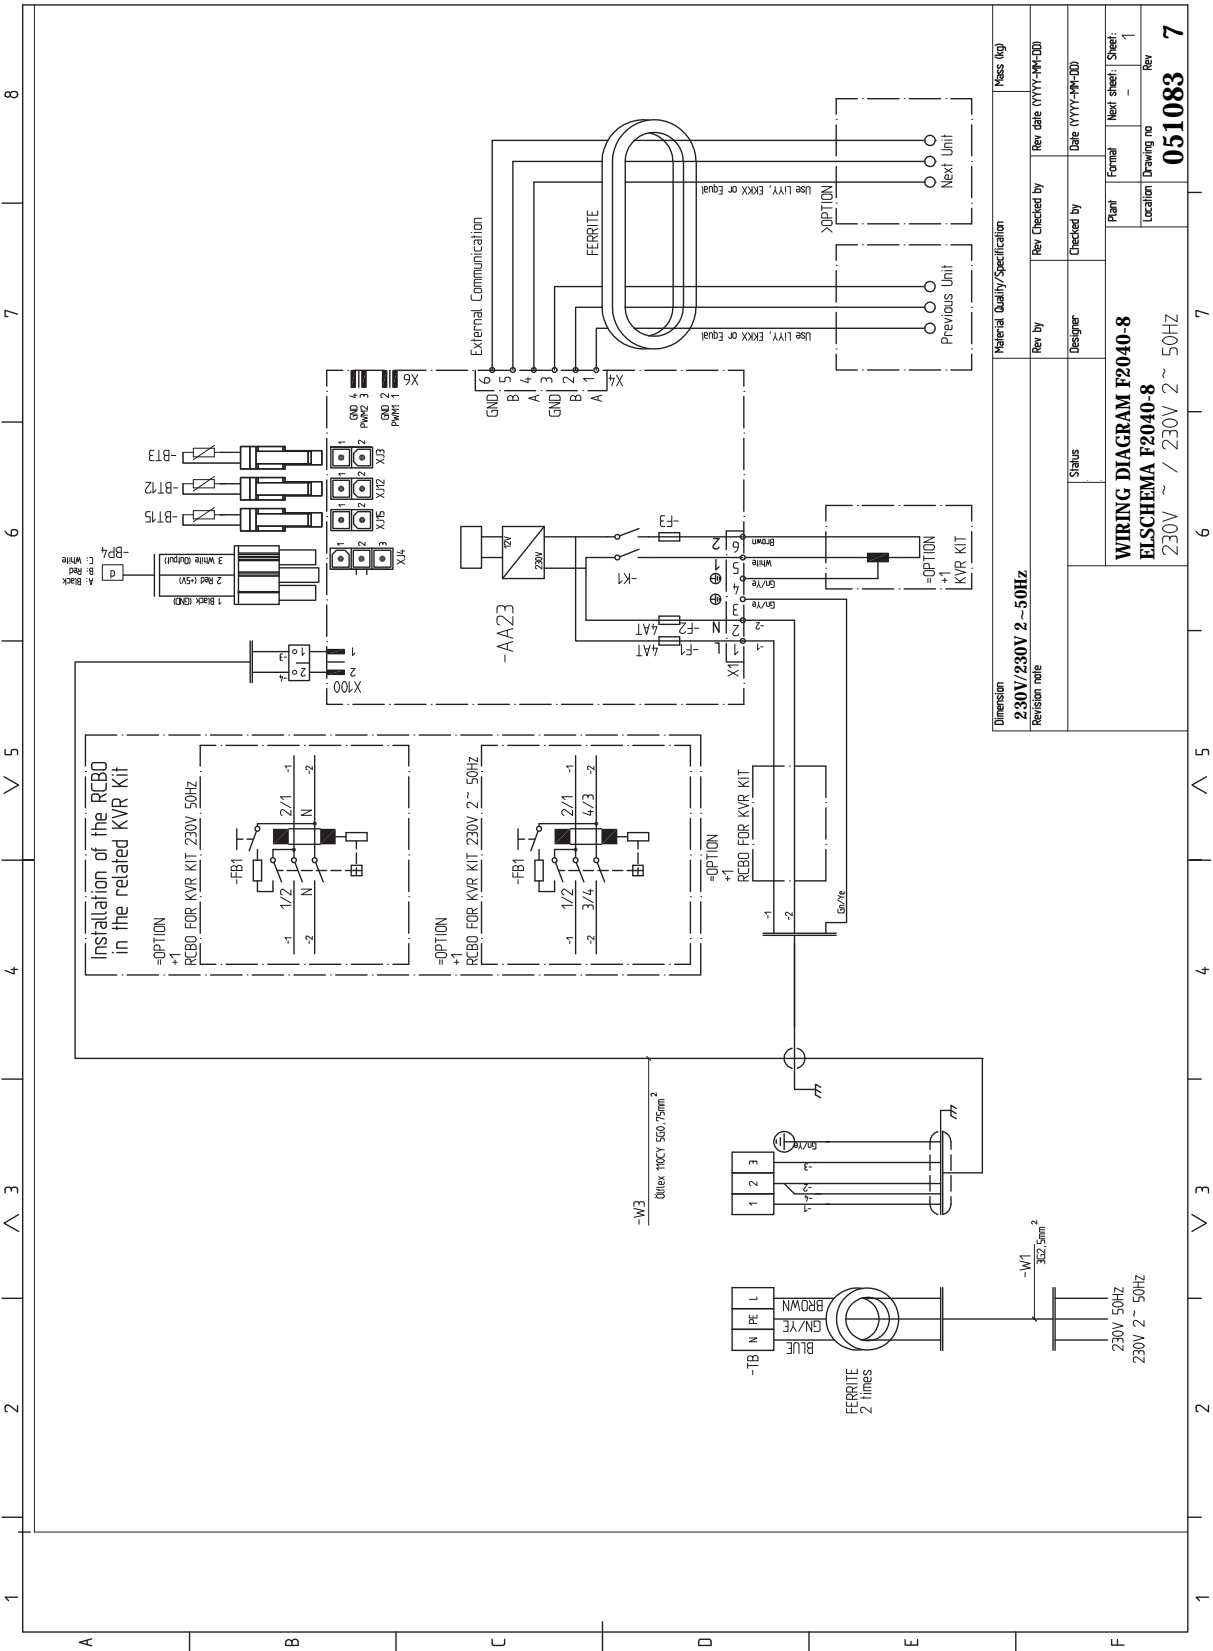


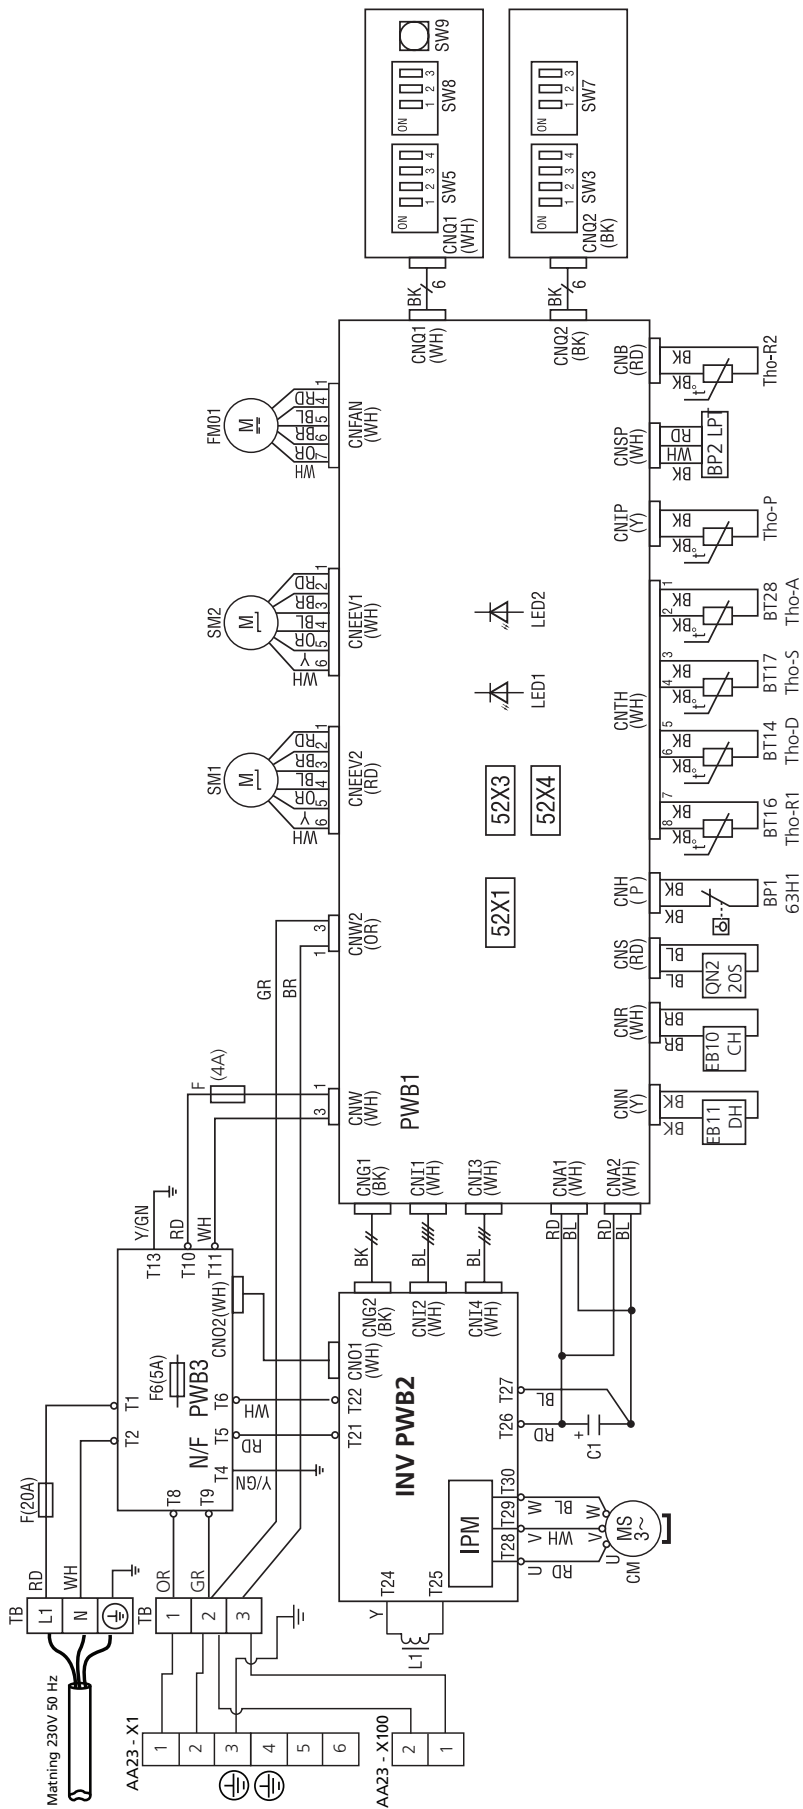

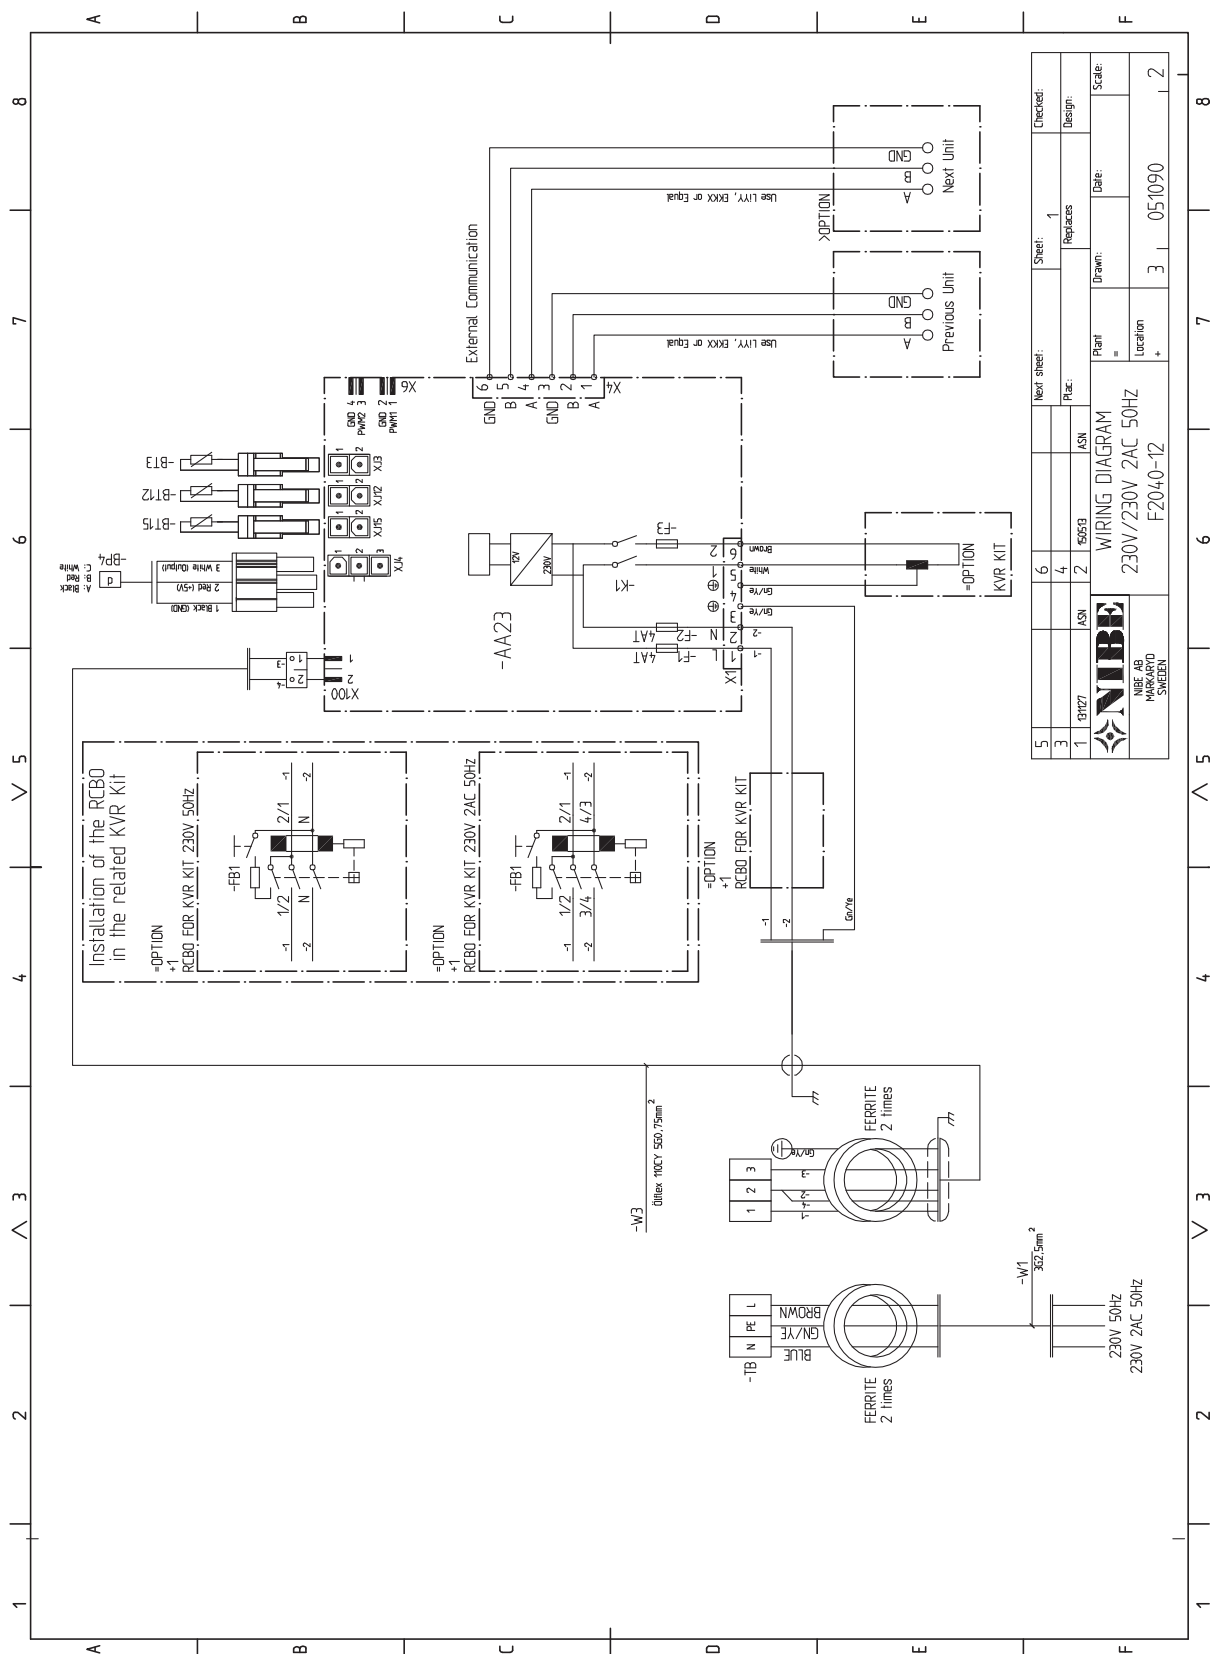

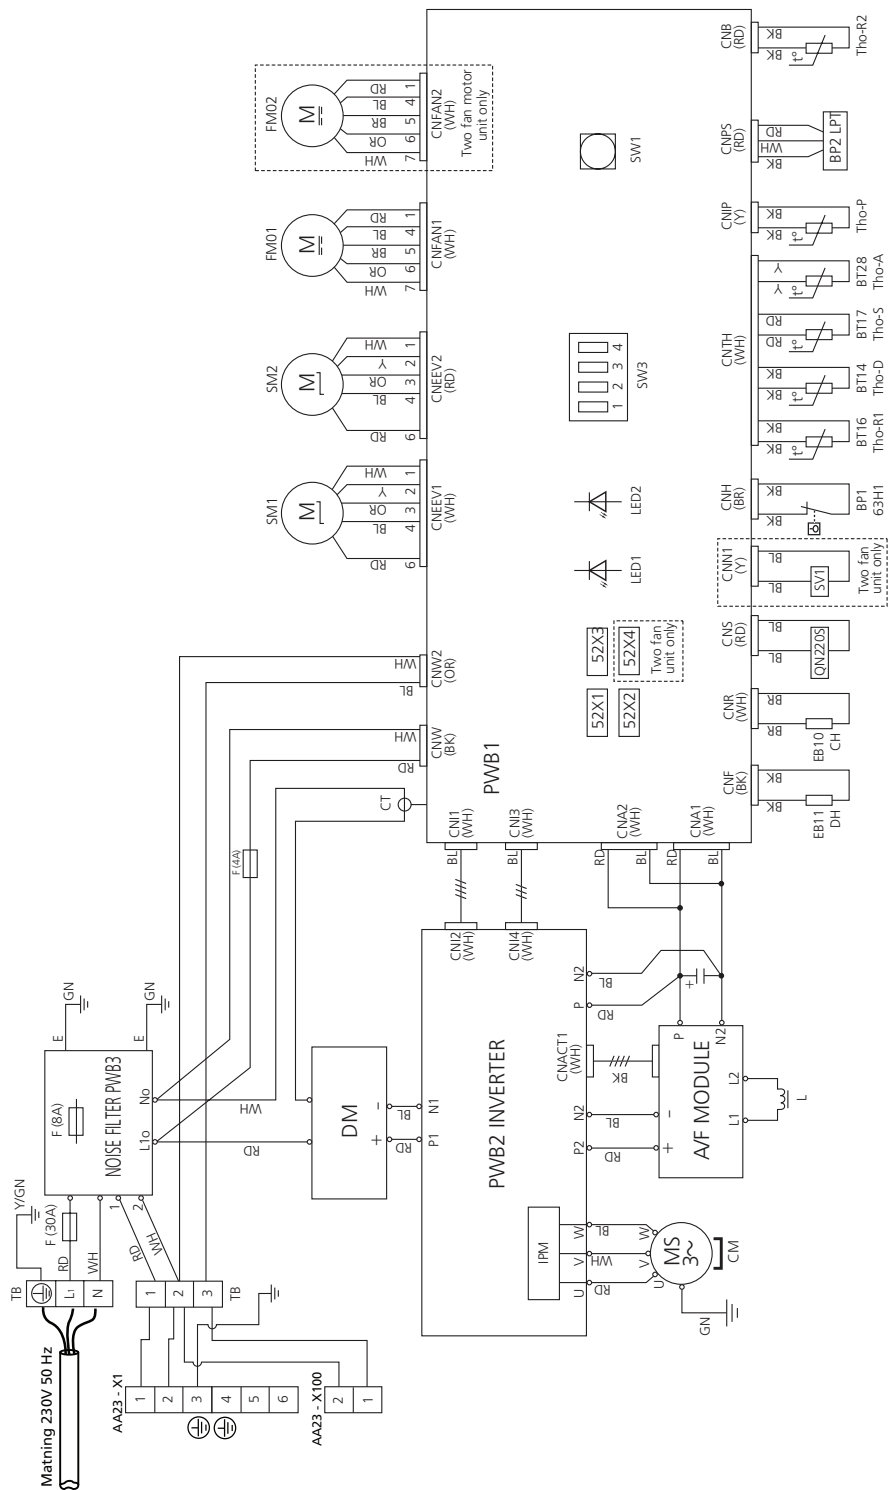

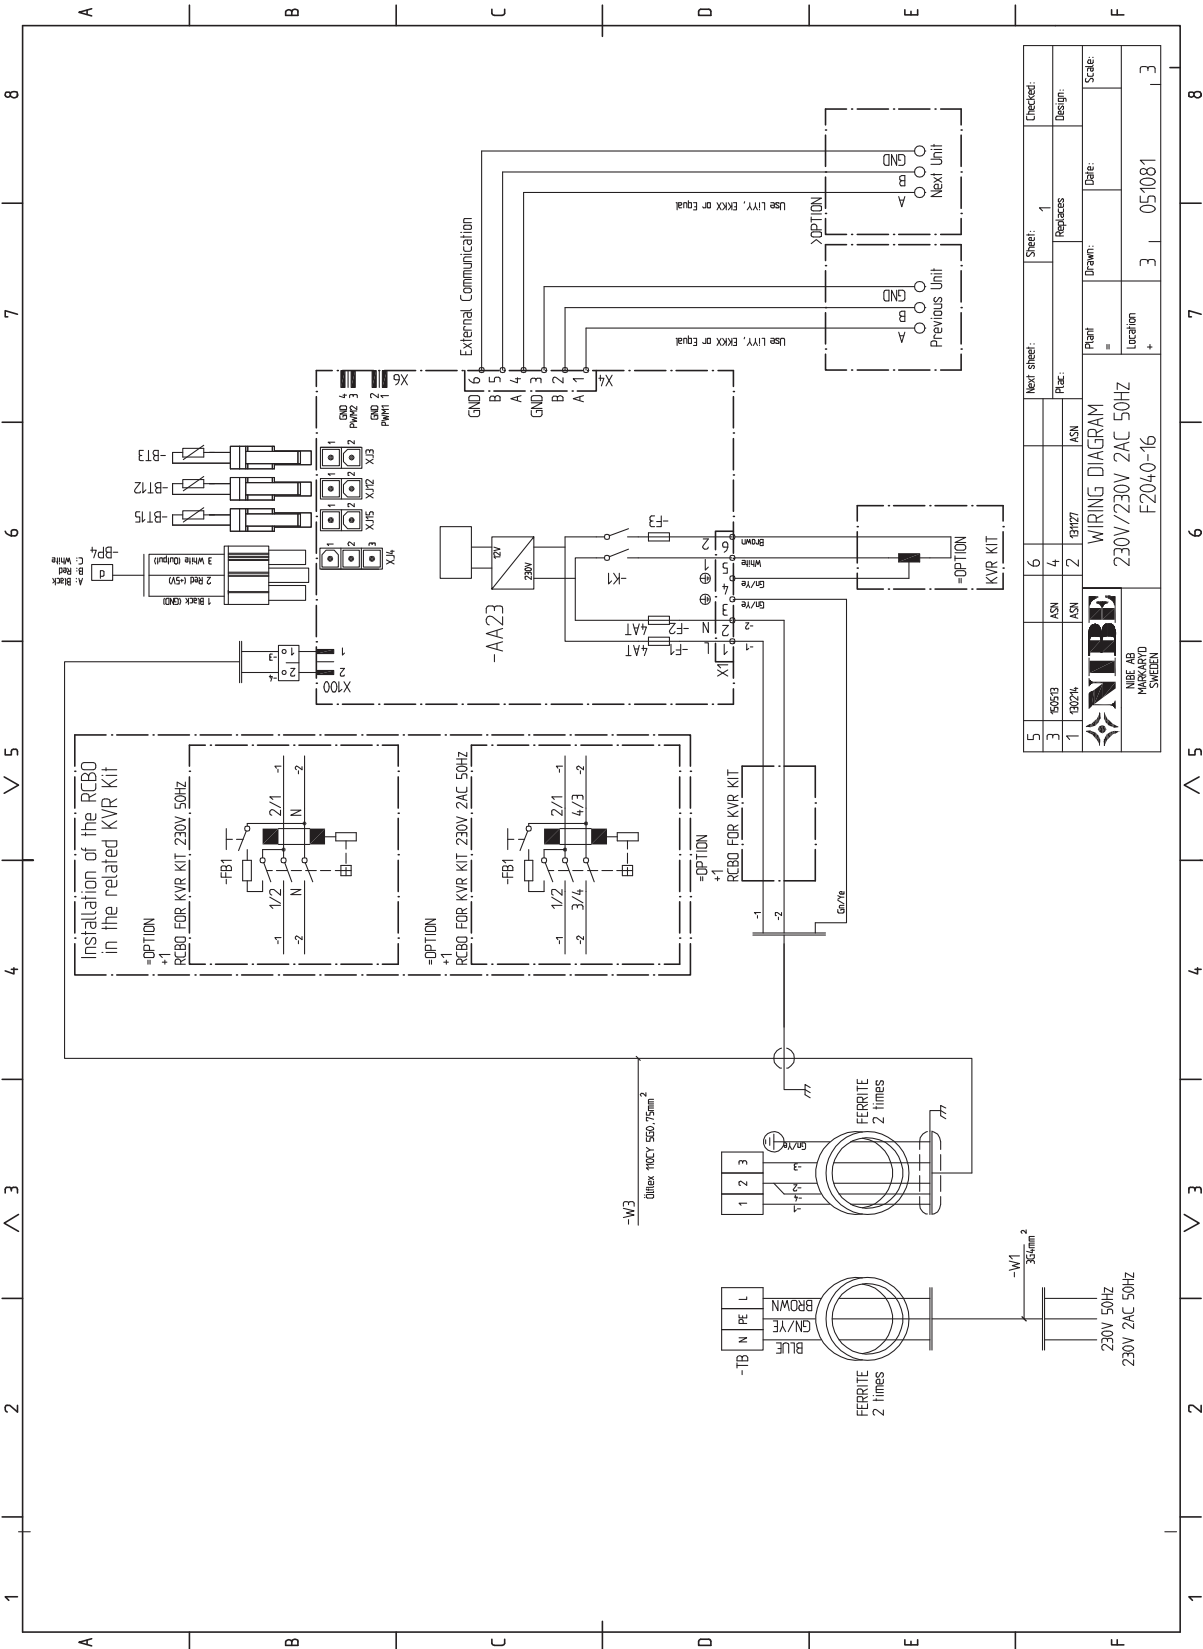

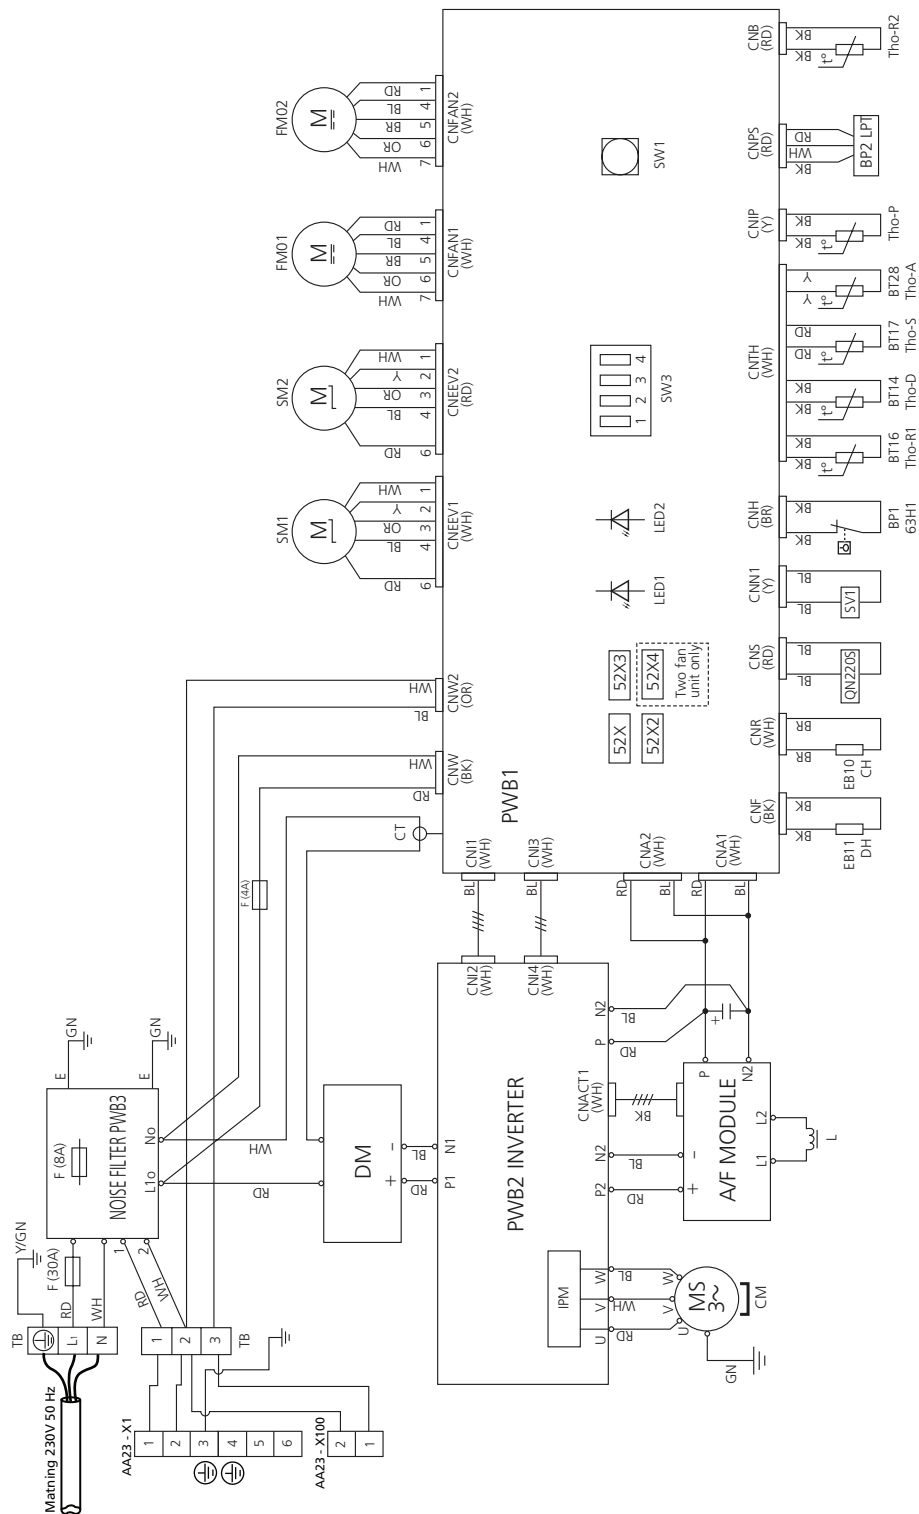





# Item register

## A

Accessories, 59  
Addressing via cascade connection, 42  
Adjustment, charge flow, 45  
Alarm list, 56  
Ambient temperature sensor, 38  
Assembly, 9

## B

Basic actions, 48

## C

Charge pump, 27  
Commissioning and adjusting, 43  
    Adjustment, charge flow, 45  
    Compressor heater, 43  
    Filling and venting the heating medium system, 43  
    Preparations, 43  
    Readjusting, heating medium side, 45  
    Start-up and inspection, 44  
Communication, 39  
Compressor heater, 43  
Condensate drip tray, 10  
Connecting accessories, 29  
Connection between F2040 and SMO, 40  
Connections, 33  
Connection to board (AA23), 52  
Connection to board (PWB1), 50  
Control, 46  
    Menu 5.11.1.1 – Heat pump EB101, 46  
Country specific information, 6

## D

Delivery and handling, 9  
    Assembly, 9  
    Condensate drip tray, 10  
    Installation area, 10  
    Removing the covers, 12  
    Removing the front panel, 13  
    Removing the side panel, 14  
    Supplied components, 11  
    Transport and storage, 9  
Dimensions and setting-out coordinates, 60  
Disturbances in comfort, 48  
    Troubleshooting, 48  
Docking alternatives, 29

## E

Electrical circuit diagram, 76  
Electrical connection, 23

Electrical connections, 30

    Addressing via cascade connection, 42  
    Ambient temperature sensor, 38  
    Communication, 39  
    Connecting accessories, 29  
    Connection between F2040 and SMO, 40  
    Connections, 33  
    External heating cable (KVR 10) (Accessory), 37  
    General, 30  
    Power connection, 33  
Energy labelling, 71  
    Data for energy efficiency of the package, 71  
    Information sheet, 71  
    Technical documentation, 72  
Environmental information, 5  
External heating cable (KVR 10) (Accessory), 37

## F

F2040 does not communicate, 48  
F2040 is not operational, 48  
Filling and venting the heating medium system, 43

## G

General, 27, 30

## H

High room temperature, 49

## I

Important information, 4  
    Country specific information, 6  
    Environmental information, 5  
    Inspection of the installation, 7  
    Recovery, 5  
    Safety information, 4  
    Safety precautions, 4  
    Serial number, 4  
Inspection of the installation, 7  
Installation area, 10

## L

Large amount of water below F2040, 49  
List of components, 22  
Low hot water temperature or no hot water, 49  
Low room temperature, 49

## M

Marking, 4  
Menu 5.11.1.1 – Heat pump EB101, 46

## **P**

- Pipe connections, 27
  - Charge pump, 27
  - Docking alternatives, 29
  - General, 27
  - Pipe connections flex hose, 28
  - Pipe coupling heating medium circuit, 27
  - Pressure drop diagram, 28
  - Water volumes, 27
- Pipe connections flex hose, 28
- Pipe coupling heating medium circuit, 27
- Power connection, 33
- Preparations, 43
- Pressure drop diagram, 28

## **R**

- Readjusting, heating medium side, 45
- Recovery, 5
- Removing the covers, 12
- Removing the front panel, 13
- Removing the side panel, 14

## **S**

- Safety information, 4
  - Marking, 4
  - Symbols, 4
  - Symbols on F2040, 4
  - Warranty information, 6
- Sensor placement, 50
  - Connection to board (AA23), 52
  - Connection to board (PWB1), 50
  - Sensor placement in F2040, 53
  - Sensors etc., 50
- Sensor placement in F2040, 53
- Sensors etc., 50
- Serial number, 4
- Sound pressure levels, 64
- Start-up and inspection, 44
- Supplied components, 11
- Symbols, 4
- Symbols on F2040, 4

## **T**

- Technical data, 60
  - Dimensions and setting-out coordinates, 60
  - Electrical circuit diagram, 76
  - Sound pressure levels, 64
  - Technical Data, 65
- Technical Data, 65
- The heat pump design, 15
  - Component locations, 15
  - Electrical components, 26
  - Electrical connection, 23
  - List of components, 22
- Transport and storage, 9
- Troubleshooting, 48
  - Basic actions, 48
  - F2040 does not communicate, 48
  - F2040 is not operational, 48
  - High room temperature, 49
  - Large amount of water below F2040, 49

- Low hot water temperature or no hot water, 49
- Low room temperature, 49
- Sensor placement, 50

## **W**

- Warranty information, 6

# AIR TO WATER HEAT PUMP COMMISSIONING CHECKLIST

This Commissioning Checklist is to be completed in full by the competent person who commissioned the heat pump and associated equipment as a means of demonstrating compliance with the appropriate Building Regulations and then handed to the customer to keep for future reference.

Failure to install and commission this equipment to the manufacturer's instructions may invalidate the warranty but does not affect statutory rights.

Customer Name

Address

Telephone Number

Heat Pump Make and Model

Heat Pump Serial Number

Commissioned by (print name)

Certified Operative Reg. No. [1]

Company Name & Address

Commissioning Date

Telephone No.

Building Regulations Notification Number (if applicable) [2]

## CONTROLS - SYSTEM AND HEAT PUMP

Tick the appropriate boxes if applicable

1. Time & Temperature Control to Heating	Room Thermostat & Programmer/Timer <input type="checkbox"/>	Programmable Roomstat <input type="checkbox"/>	Load/Weather Compensation <input type="checkbox"/>	Optimum Start Control <input type="checkbox"/>
2. Time & Temperature Control to Hot Water			Cylinder Thermostat & Programmer/Timer <input type="checkbox"/>	Combined with Heat pump main controls <input type="checkbox"/>
3. Heating Zone Valves			Fitted <input type="checkbox"/>	Not Required <input type="checkbox"/>
4. Hot Water Zone Valves			Fitted <input type="checkbox"/>	Not Required <input type="checkbox"/>
5. Thermostatic Radiator Valves			Fitted <input type="checkbox"/>	Not Required <input type="checkbox"/>
6. Heat Pump Safety Interlock [3]			<input type="checkbox"/>	Provided <input type="checkbox"/>
7. Outdoor Sensor			Fitted <input type="checkbox"/>	Not Required <input type="checkbox"/>
8. Automatic Bypass System			Fitted <input type="checkbox"/>	Not Required <input type="checkbox"/>
9. Buffer Vessel Fitted			Yes <input type="checkbox"/> No <input type="checkbox"/> If YES, Volume <input type="text"/> Litres	

## ALL SYSTEMS

The heating system has been filled and pressure tested	Yes <input type="checkbox"/>
Expansion vessel for heating is sized, fitted & charged in accordance with manufacturer's instructions	Yes <input type="checkbox"/>
The heat pump is fitted on a solid/stable surface capable of taking its weight	Yes <input type="checkbox"/>
The system has been flushed and cleaned in accordance with BS7593 and heat pump manufacturer's instructions	Yes <input type="checkbox"/>
What system cleaner was used?	
What inhibitor was used?	Qty <input type="text"/> litres <input type="text"/>
Is the system adequately frost protected?	Yes <input type="checkbox"/>

## OUTDOOR COLLECTOR

Are all external pipeworks insulated?	Yes <input type="checkbox"/>
Is the fan free from obstacles and operational?	Yes <input type="checkbox"/>
Has suitable consideration been made for waste water discharge?	Yes <input type="checkbox"/>

## CENTRAL HEATING MODE

Heating Flow Temperature  °C Heating Return Temperature  °C

## DOMESTIC HOT WATER MODE

Is the heat pump connected to a hot water cylinder? ☐ Unvented ☐ Vented ☐ Thermal Store ☐ Not Connected

Hot water has been checked at all outlets Yes ☐

## ADDITIONAL SYSTEM INFORMATION

Additional heat sources connected

☐ Gas Boiler ☐ Oil Boiler ☐ Electric Heater Other

## ALL INSTALLATIONS

The heating, hot water and ventilation systems complies with the appropriate Building Regulations	Yes <input type="checkbox"/>
All electrical work complies with the appropriate Regulations	Yes <input type="checkbox"/>
The heat pump and associated products have been installed and commissioned in accordance with the manufacturer's instructions	Yes <input type="checkbox"/>
The operation of the heat pump and system controls have been demonstrated to the customer	Yes <input type="checkbox"/>
The manufacturer's literature, including Benchmark Checklist and Service Record, has been explained and left with the customer	Yes <input type="checkbox"/>

Commissioning Engineer's Signature

Customer's Signature

(To confirm demonstration of equipment and receipt of appliance instructions)

Notes: [1] Installers should be members of an appropriate Competent Persons Scheme. [2] All installations in England and Wales must be notified to Local Area Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer. [3] May be required for systems covered by G3 Regulations

# Service Record

It is recommended that your heating system is serviced regularly and that the appropriate Service Interval Record is completed.

## Service Provider

Before completing the appropriate Service Interval Record below, please ensure you have carried out the service as described in the manufacturer's instructions.

Always use the manufacturer's specified spare part when replacing controls.

Service 1

Date:

Engineer Name:

Company Name:

Telephone No.

Operative ID No.

Comments:

Signature:

Service 2

Date:

Engineer Name:

Company Name:

Telephone No.

Operative ID No.

Comments:

Signature:

Service 3

Date:

Engineer Name:

Company Name:

Telephone No.

Operative ID No.

Comments:

Signature:

Service 4

Date:

Engineer Name:

Company Name:

Telephone No.

Operative ID No.

Comments:

Signature:

Service 5

Date:

Engineer Name:

Company Name:

Telephone No.

Operative ID No.

Comments:

Signature:

Service 6

Date:

Engineer Name:

Company Name:

Telephone No.

Operative ID No.

Comments:

Signature:

Service 7

Date:

Engineer Name:

Company Name:

Telephone No.

Operative ID No.

Comments:

Signature:

Service 8

Date:

Engineer Name:

Company Name:

Telephone No.

Operative ID No.

Comments:

Signature:

Service 9

Date:

Engineer Name:

Company Name:

Telephone No.

Operative ID No.

Comments:

Signature:

Service 10

Date:

Engineer Name:

Company Name:

Telephone No.

Operative ID No.

Comments:

Signature:







NIBE Energy Systems Ltd  
3C Broom Business Park,  
Bridge Way, S41 9QG Chesterfield  
Tel: +44 (0)845 095 1200  
info@nibe.co.uk  
nibe.co.uk

IHB EN 1826-7 231846

This manual is a publication from NIBE Energy Systems. All product illustrations, facts and data are based on the available information at the time of the publication's approval. NIBE Energy Systems makes reservations for any factual or printing errors in this manual.

©2018 NIBE ENERGY SYSTEMS

